


TINGLEY

est. 1896

Style #1300/1350 Work Rubber Overshoe

A = Height (Outsole to Topline) B = Topline Circumference C = Length (Heel to Toe) D = Width (Outsole Ball) (All Dimensions are in inches)				
SIZE	A	B	C	D
S	4.0		11.5	4.8
M	4.1		12.0	4.9
L	4.4		12.4	5.0
XL	4.5		12.9	5.1
2X	4.5		13.3	5.1
3X	4.6		13.7	5.1

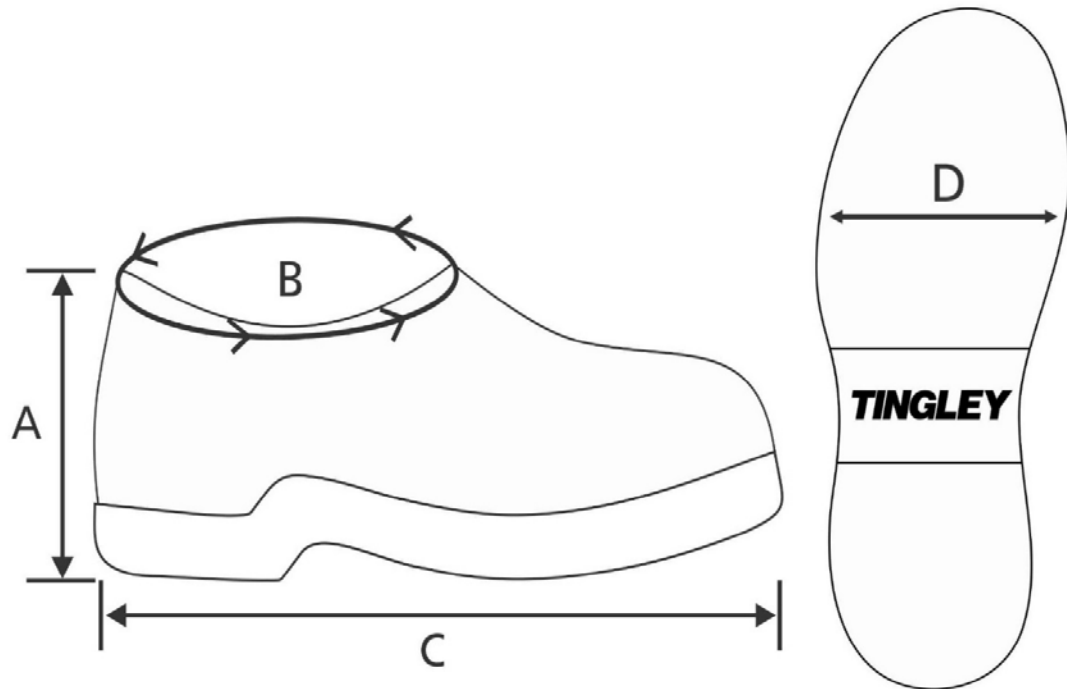

ISO 9001 CERTIFIED

TINGLEY RUBBER CORPORATION, 1551 S. WASHINGTON AVENUE, SUITE 403, PISCATAWAY, NJ 08854

800-631-5498 www.tingleyrubber.com FAX: (866) 757-9239