


# TINGLEY

est. 1896

## Style #35121/35123 Workbrutes® 10" Ht. Work Boot

A = Height (Outsole to Topline)  
B = Topline Circumference  
C = Length (Heel to Toe)  
D = Width (Outsole Ball)  
(All Dimensions are in inches)

SIZE	A	B	C	D
<b>XS</b>	10.1	19.0	11.3	5.0
<b>S</b>	10.2	19.7	11.6	5.0
<b>M</b>	10.6	20.5	12.2	5.1
<b>L</b>	10.9	21.2	12.5	5.2
<b>XL</b>	11.1	21.9	13.2	5.3
<b>2X</b>	11.5	22.5	13.6	5.5

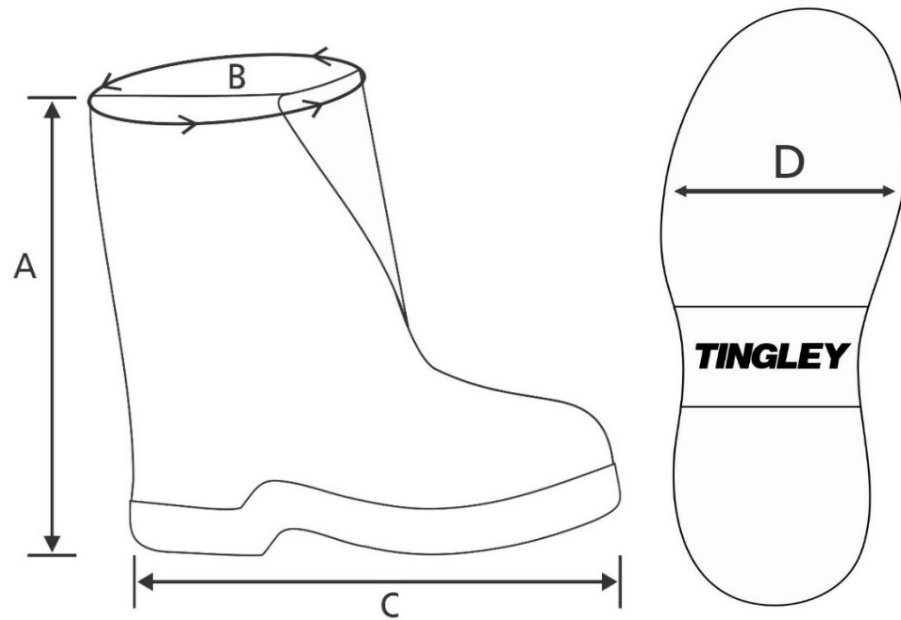

ISO 9001 CERTIFIED

TINGLEY RUBBER CORPORATION, 1551 S. WASHINGTON AVENUE, SUITE 403, PISCATAWAY, NJ 08854

800-631-5498 [www.tingleyrubber.com](http://www.tingleyrubber.com) FAX: (866) 757-9239