


TINGLEY

est. 1896

Style #35211 Workbrutes® Steel Toe Overshoe

A = Height (Outsole to Topline) B = Topline Circumference C = Length (Heel to Toe) D = Width (Outsole Ball) (All Dimensions are in inches)				
SIZE	A	B	C	D
XS	4.0		11.0	
S	4		11.5	
M	4.1		12	
L	4.25		12.7	
XL	4.5		13.5	

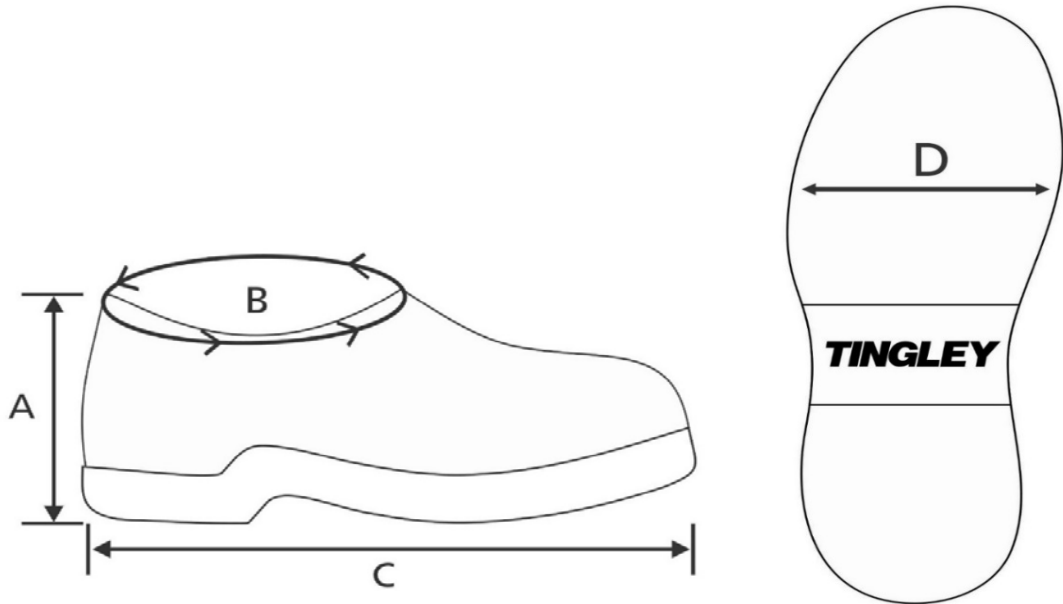

ISO 9001 CERTIFIED

TINGLEY RUBBER CORPORATION, 1551 S. WASHINGTON AVENUE, SUITE 403, PISCATAWAY, NJ 08854

800-631-5498 www.tingleyrubber.com FAX: (866) 757-9239