


TINGLEY

est. 1896

Style #21141 Airgo™ Ultra Lightweight Boot

A = Height (Outsole to Topline)
B = Topline Circumference
C = Footbed (Heel to Toe)
D = Width (Footbed Ball)
(All Dimensions are in inches)

SIZE	A	B	C	D
6	12.5	17.2	9.6	3.6
7	13.0	18.0	10.0	3.7
8	13.5	18.5	10.3	3.8
9	14.1	18.9	10.7	3.8
10	14.6	19.4	11.0	3.9
11	14.8	19.6	11.3	4.0
12	15.1	20.4	11.7	4.1
13	15.4	20.7	12.0	4.2

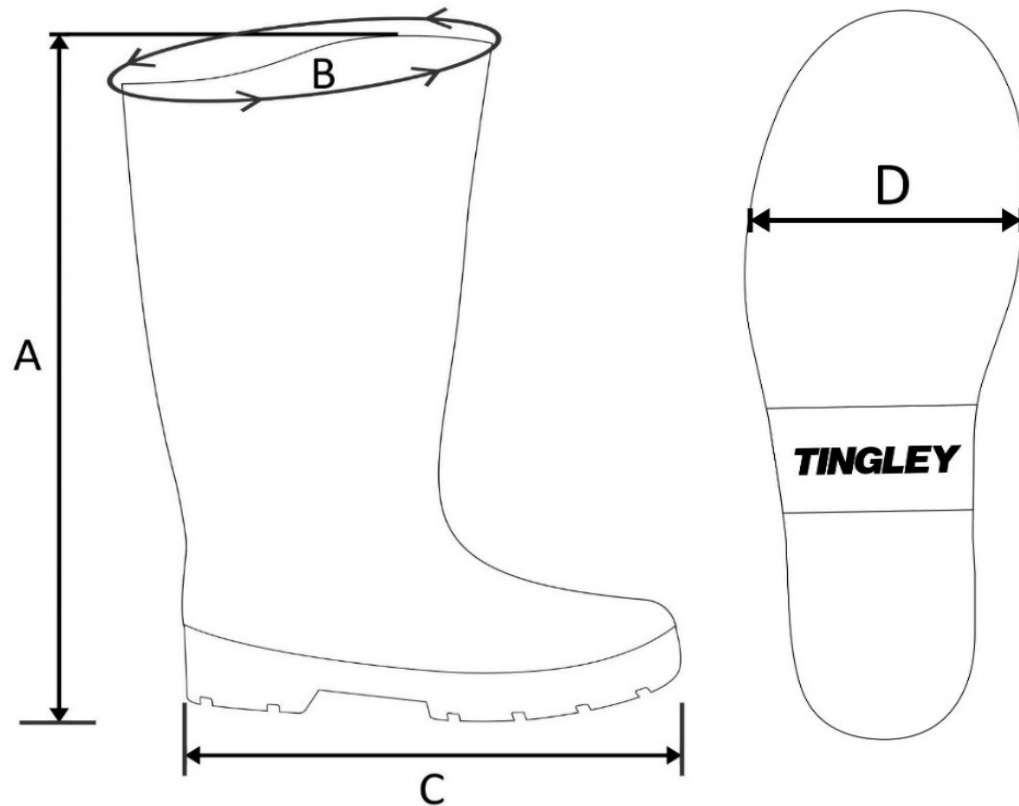

ISO 9001 CERTIFIED

TINGLEY RUBBER CORPORATION, 5700 boul. des Galeries, Suite 310, Québec, G2K 0H5 800-631-5498

www.tingleyrubber.com FAX: (866) 757-9239