

TINGLEY


est. 1896

Style #43351

Botte Pulsar™ certifiée CSA Z195

A = Hauteur (De la semelle au haut de la botte)
B = Circonférence du haut de la botte
C = Longueur (Du talon aux orteils)
D = Largeur (Partie la plus large de la semelle)
(Toutes les dimensions sont en pouces)

Pointure	A	B	C	D
4	14.3	16.5	10.2	3.9
5	14.5	16.9	10.5	3.9
6	14.7	17.3	10.8	4.0
7	14.9	17.6	11.0	4.1
8	15.1	17.9	11.6	4.2
9	15.3	18.2	11.7	4.3
10	15.6	18.6	12.0	4.3
11	15.8	19.0	12.4	4.4
12	16.0	19.4	12.7	4.5
13	16.1	19.7	13.2	4.6
14	16.2	20.0	13.4	4.7

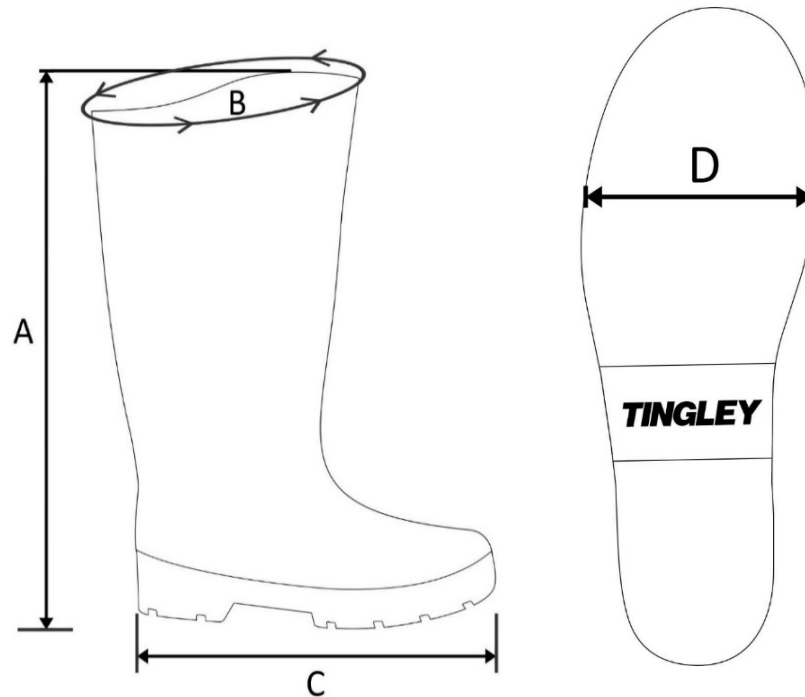

ISO 9001 CERTIFIED

TINGLEY RUBBER CORPORATION, 1551 S. WASHINGTON AVENUE, SUITE 403, PISCATAWAY, NJ 08854

800-631-5498 www.tingleyrubber.com FAX: (866) 757-9239