

FOR: 4RUNNER ATTIC

Welcome! This installation isn't rocket science but it is kind of like karate - you can hurt yourself or break something if you don't pay attention. Used properly, this Install Guide will tell you all you need to know - like Yoda, but with better grammar.


If you have any trouble, contact us for product support: blueridgeoverlandgear.com/pages/contact-us

TOOLS NEEDED: 10mm Socket & Wrench




STEP #1

Begin by removing the cover to reveal the 10mm bolt securing each of the rear coat hook hangers in the cargo area (2 total).

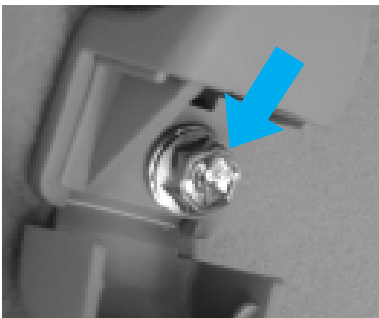

STEP #2

Using the 10mm socket wrench, remove the bolt.

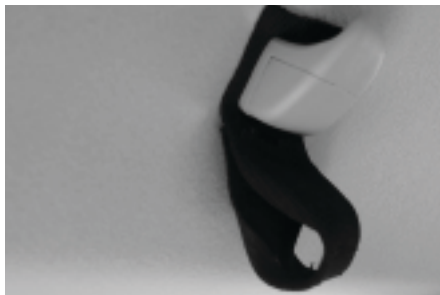

STEP #3

Place the bolt you just removed into the webbing attachment point and reinstall with the webbing underneath the hook hangers. Do this for both the driver and passenger sides.



continued



STEP #4

Once both the attachment points are in place, the rear of the attic can then be loosely attached via the G-Hooks on the attic.



To attach the front attic straps to the grab handles loop them over the grab handles and attach the G-Hooks back to the attic itself (do not attach the G-Hooks back to the webbing)



STEP #5

Tighten to the desired tension using the G-Hook attachments, as well as, the lower paracord lacing with barrel lock.

STEP #6

Get in your vehicle and go adventuring!

Thank you for choosing Blue Ridge Overland Gear. We are handcrafting the toughest bags and organizers for your adventurous life - right here in Bedford, Virginia, USA. It's not just American made, it's 'Blue Ridge Built'!

This product comes with our Rugged Lifetime Warranty. If you have any trouble, contact us for product support: BlueRidgeOverlandGear.com/pages/contact-us