

## FOR: LAND CRUISER ATTIC

Welcome! This installation isn't rocket science but it is kind of like karate - you can hurt yourself or break something if you don't pay attention. Used properly, this Install Guide will tell you all you need to know - like Yoda, but with better grammar.

If you have any trouble, contact us for product support: [blueridgeoverlandgear.com/pages/contact-us](http://blueridgeoverlandgear.com/pages/contact-us)

**TOOLS YOU NEED: NONE**



### STEP #1

Unfold the attic and lay it over the back seat with the tan paracord facing down.



### STEP #2

Take one of the front straps and run it OVER the grab handle.



### STEP #3

Attach the G-Hook to the attic by weaving it into one of the flat loops that run down the front and rear of the attic.

**NOTICE:** Do NOT attach the hook back to the strap. It must be attached to the attic itself.

Repeat for other 3 straps.




*continued*



## STEP #4

Pull the tail end of the straps outward from the attic to achieve desired tension.

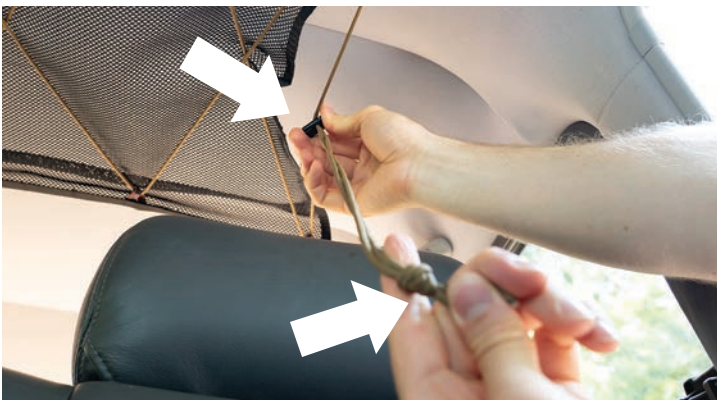

## STEP #5

Tighten the paracord by grasping the barrel lock with one hand and pulling the end with the other to achieve desired tension.



## STEP #6

Brag to your friends about how organized you are!

*NOTE: Please make sure not to overload the attic. We also recommend using it to store softer, lightweight items (like sleeping bags, jackets, coats, hats, etc).*

Thank you for choosing Blue Ridge Overland Gear. We are handcrafting the toughest bags and organizers for your adventurous life - right here in Bedford, Virginia, USA. It's not just American made, it's 'Blue Ridge Built'!

This product comes with our Rugged Lifetime Warranty. If you have any trouble, contact us for product support: [BlueRidgeOverlandGear.com/pages/contact-us](http://BlueRidgeOverlandGear.com/pages/contact-us)