




ALUMINIUM 2000

SUPERIOR SHUTTERS

FIXED IN PLACE - MULTI PANEL



SUPERIOR SHUTTERS
INSTALLATION

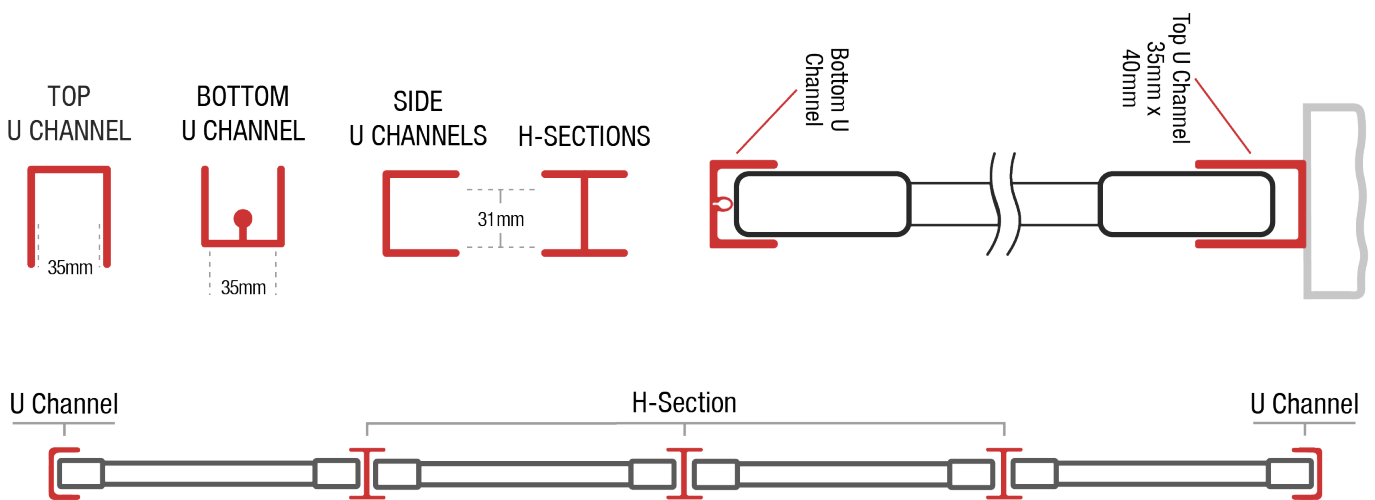

PACK CONTENTS:

- ◆ U Channels [Top, Bottom, Left, Right] H-Section(s)
- ◆ Matching Colour Rivets
- ◆ Shutter Panels

WHAT YOU WILL NEED:

- ◆ Drill
- ◆ Pop Rivet Gun
- ◆ Drill Bits Suitable for Aluminium (4mm required for Rivets)
- ◆ Screw Tip Bit
- ◆ Fixing Screws (and required hardware) for securing to your reveal surface (eg. Wood, Steel, Masonry)




Speak to you local trade store personnel for advice

STEP 1

FIT THE TOP 35X40MM U CHANNEL

- A) Pre-drill holes into Top Channel using diagram below
- B) Secure by screwing into reveal surface

DRILL HOLE PLACEMENT

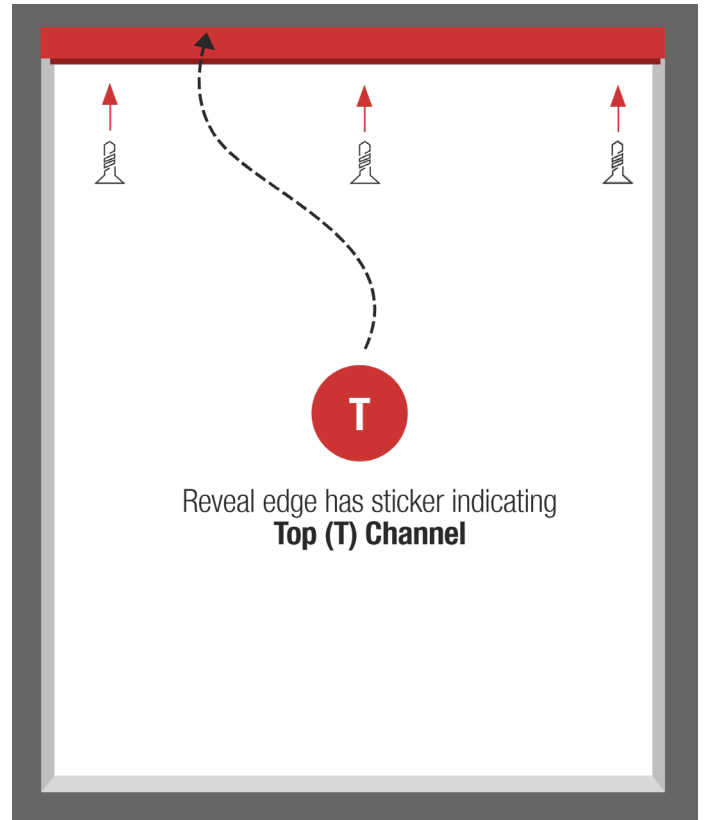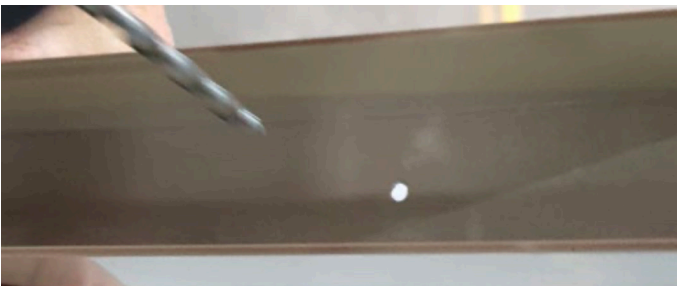
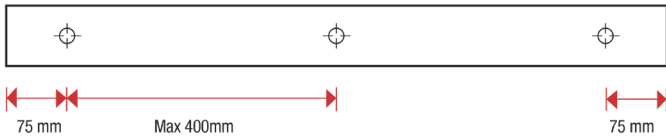


STEP 2

FIT THE BOTTOM U CHANNEL

- A) Pre-drill holes into Bottom Channel using diagram below
- NOTE: Continue to alternate the side in which the holes are located
- B) Secure by screwing into reveal surface

DRILL HOLE PLACEMENT

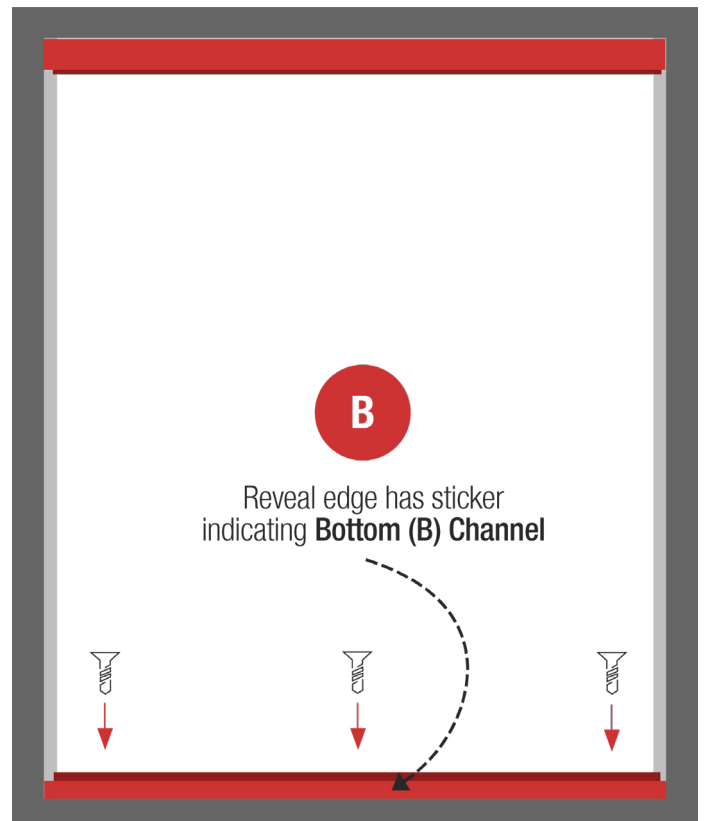
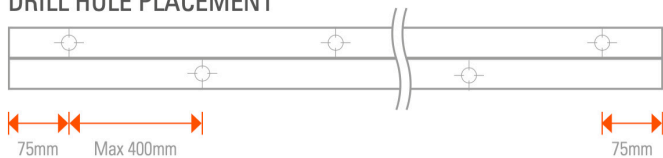


STEP 3

FIT BOTH SIDE U CHANNELS

- A) Pre-drill holes into Side channel using diagram below
- B) Secure by screwing into reveal surface

DRILL HOLE PLACEMENT

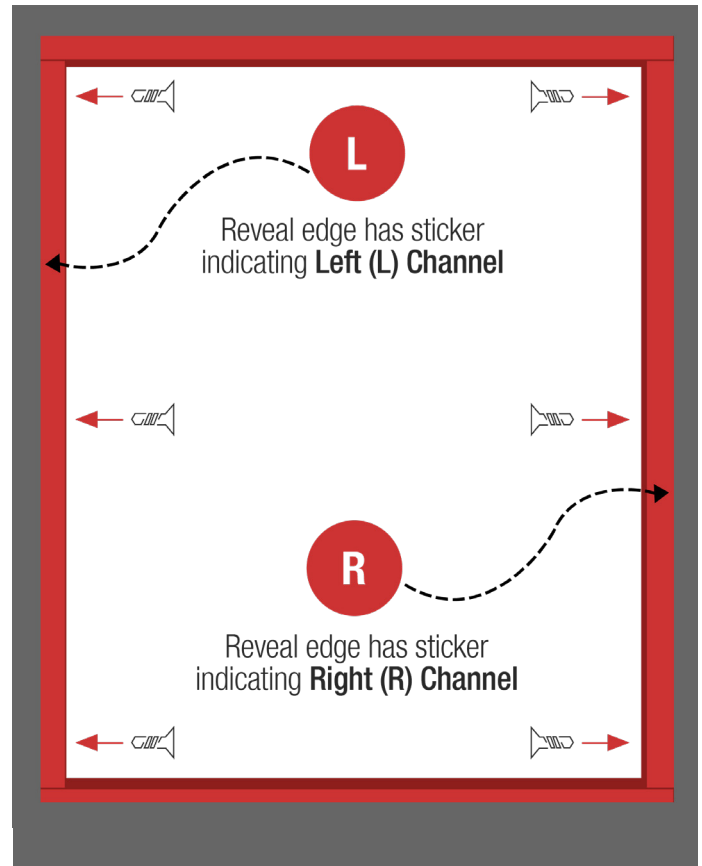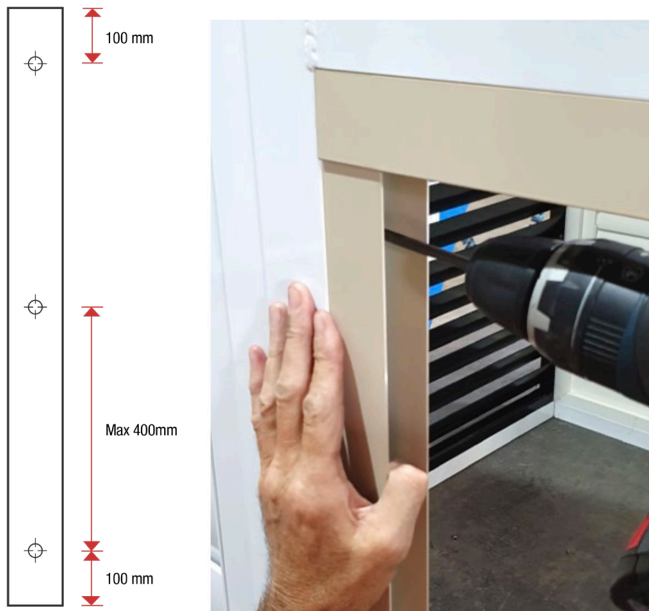

STEP 4

FIT FIRST SHUTTER PANEL IN PLACE:

- A) Slide the top edge into the Top U Channel first
- B) Sit the Shutter Panel into the bottom channel



STEP 5

REPEATING THE SAME ACTION WITH H-SECTION




- A) Insert top first, followed by bottom
- B) Push Panel and H-Section to one side



STEP 6

STARTING FROM THE LEFT SIDE, OVERLAP THE EDGE OF THE FIXED CHANNEL AND SHUTTER PANEL(S)

- A) Distribute each panel and H-Section evenly (X), then;
- B) Secure in place by: Drilling 4mm Holes in each corner where each channel, H-Sections and shutter panels overlap
- C) Now secure in place using pop rivet gun and rivets

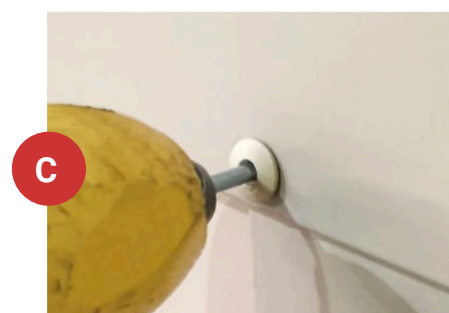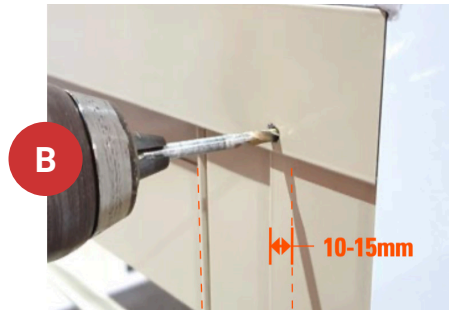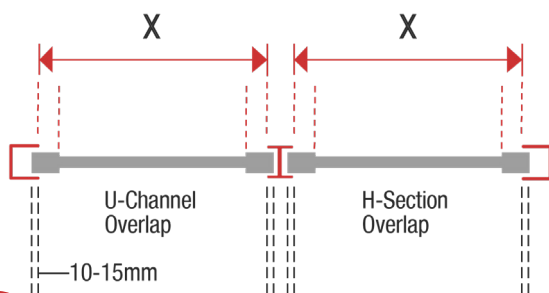

**CALL 1300 766 799 OR
VISIT SUPERIORSCREENS.COM.AU**