

052101 Yamaha XT1200Z Super Tenere Extenda Fenda *EXTRA* Fitting Instructions

Kit Includes:

1X	C052101	Moulding
2X	CFK052101	Brackets (A+B pair)
4X	CBOLM50005	M5 X 12mm Black Stainless Steel Bolt
8X	CWASM50002	M5 Stainless Steel Washer
4X	CNUTM50003	M5 Stainless Steel Serrated Nut
1X	CFOA0002	Foam Strip 20mm X 1.5mm (cut to 250mm in length)
4X	CRIV0003	Push-rivets


We advise the use of thread locking fluid on all the fixings for this product.

- Loosely attach the mudguard to the brackets using the M5 fixings supplied. Place the M5 stainless steel washers under the bolt head and under the serrated nuts.
- Cut and attach the foam provided in the area marked 'A' below.
- Following instructions marked 'B' below. Be sure to check alignment as you go!
- **Now tighten all the mounting points. Check fixings periodically.**

2 Once the brackets are fitted drill 4mm holes through the OEM mudguard and *EXTRA* Extenda Fenda. Use the push-rivets supplied to secure the two parts together.



1 Remove this brake caliper bolt on each side of the bike. Refit the bolt with the mudguard brackets in place as shown here.

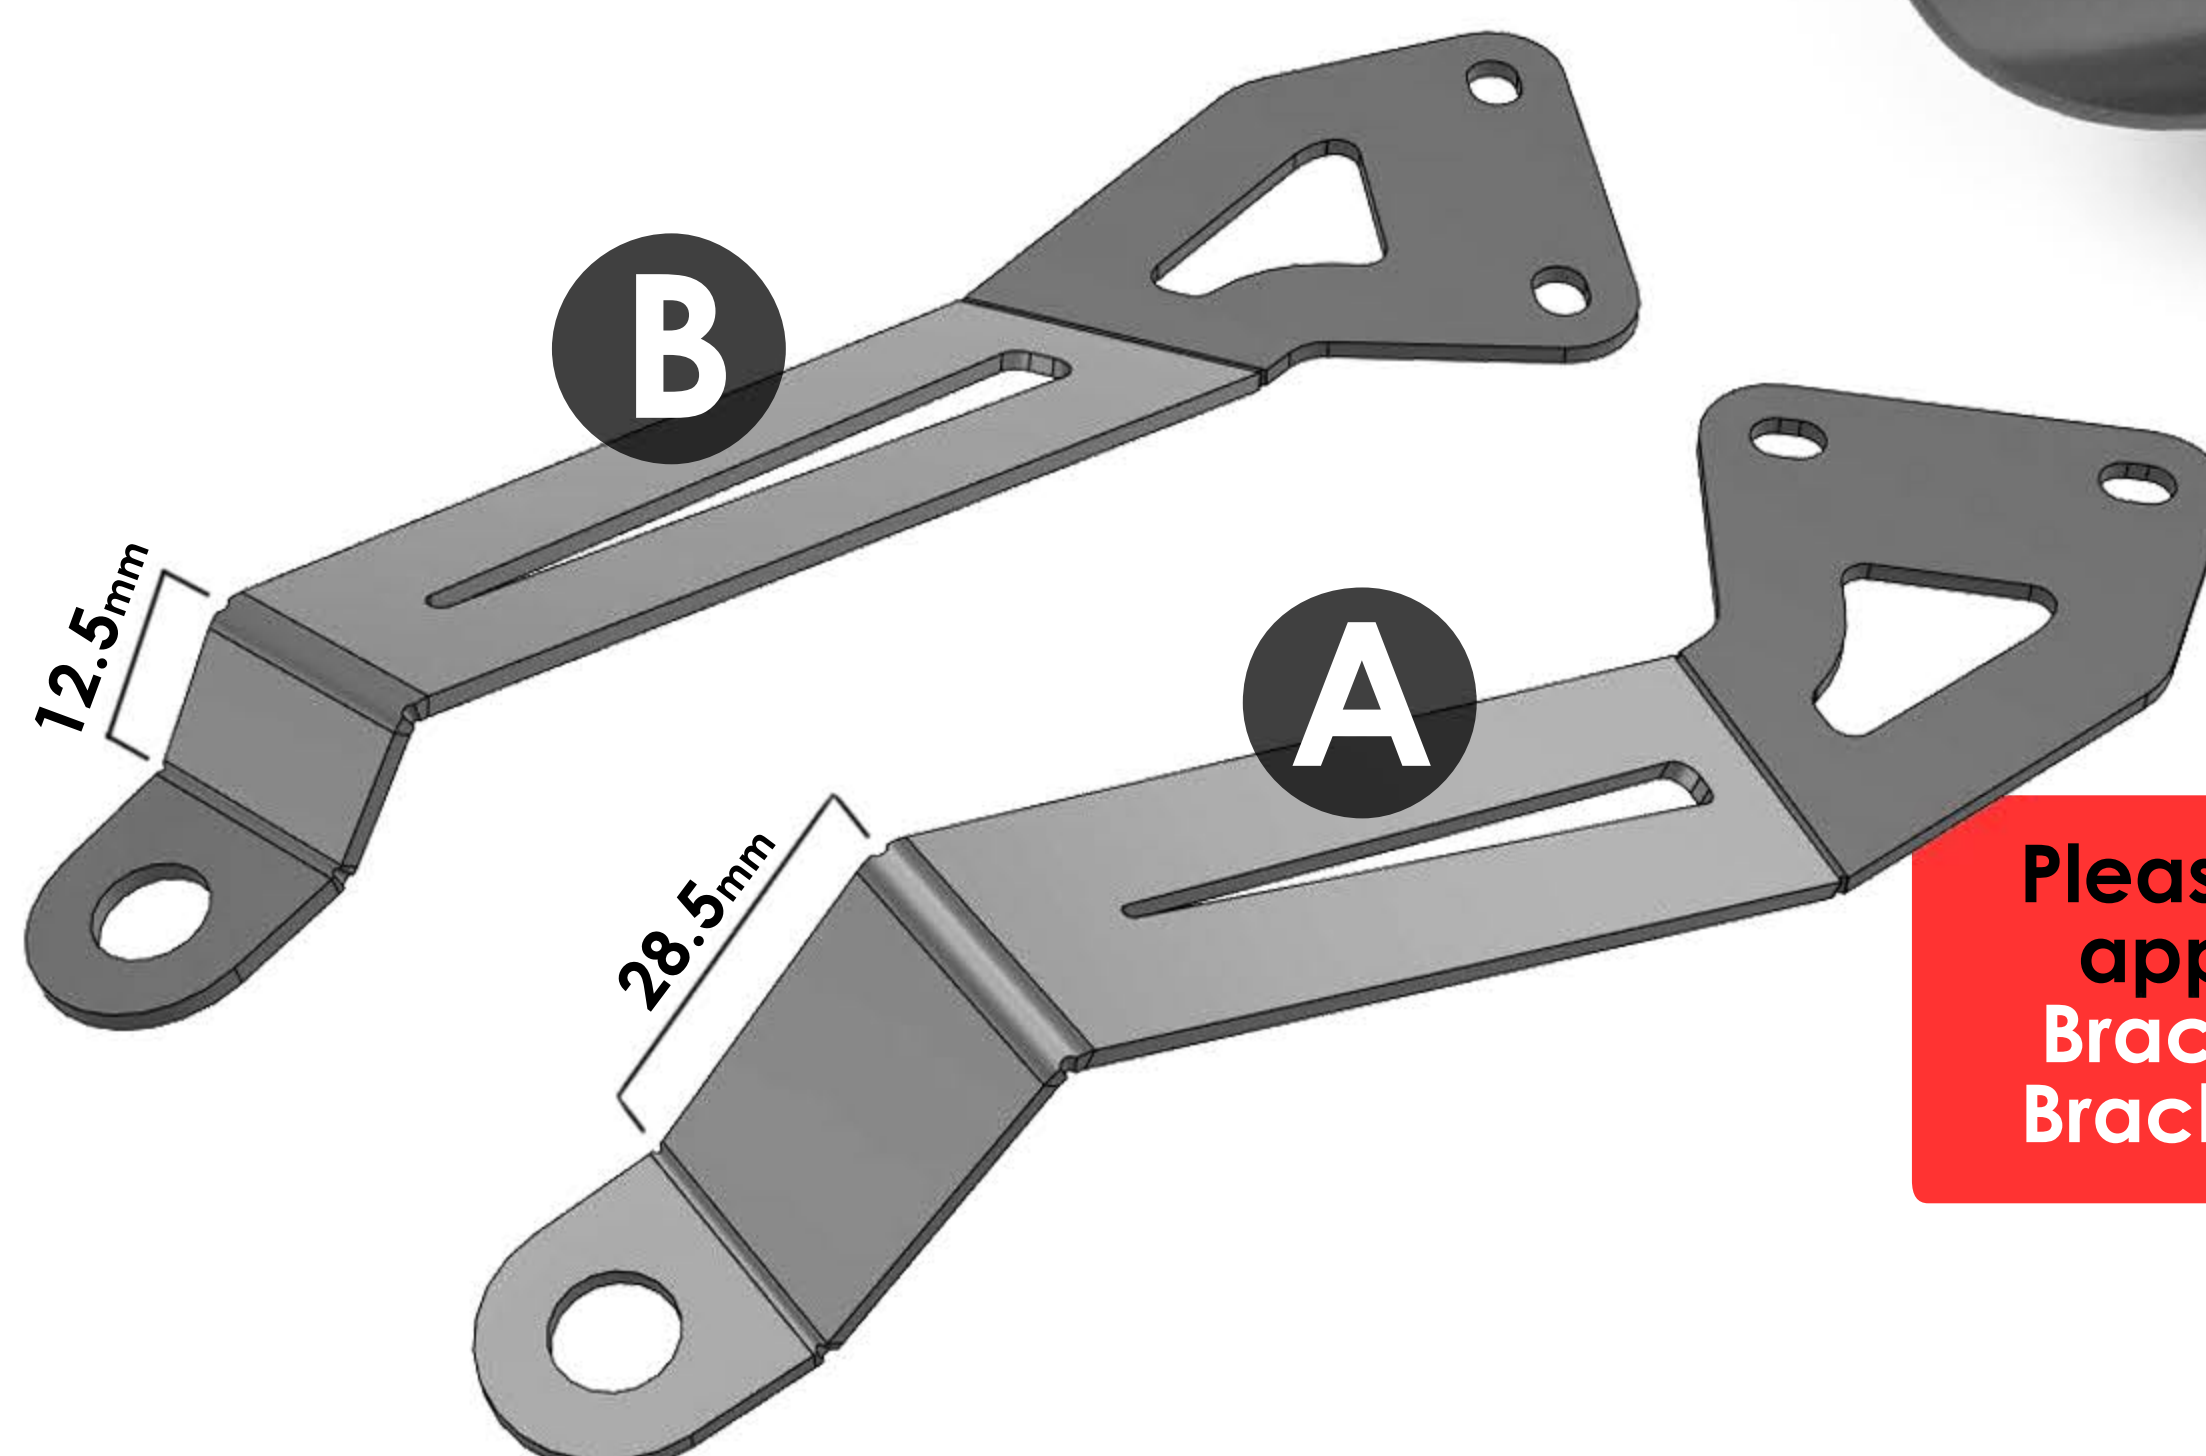

Please note: the brackets supplied appear similar but are different!
 Bracket A = left-hand side of bike
 Bracket B = right-hand side of bike