

# PYRAMID


## 054245 BMW K1 Gloss Black Extenda Fenda Fitting Instructions

Kit includes:

1X M4 X 16mm Bolt	CBOLM40003
4X M4 X 12mm Bolts	CBOLM40002
5X M4 Nyloc Nuts	CNUTM40002
5X M5 Black Plastic Washers	CWASM50001

- To fit this Extenda Fenda mounting points will need to be drilled in the K1 Mudguard. **Fig 1** shows our suggested placement of these mounting points highlighted in **GREY**.
- The supplied fittings needed for each mounting point are also listed in **Fig 1**.

Note: Black Plastic Washers to be fitted on the **A surface** of the K1 Front Mudguard  
Nyloc Nuts to be fitted on the **B surface** of the K1 Front Mudguard.

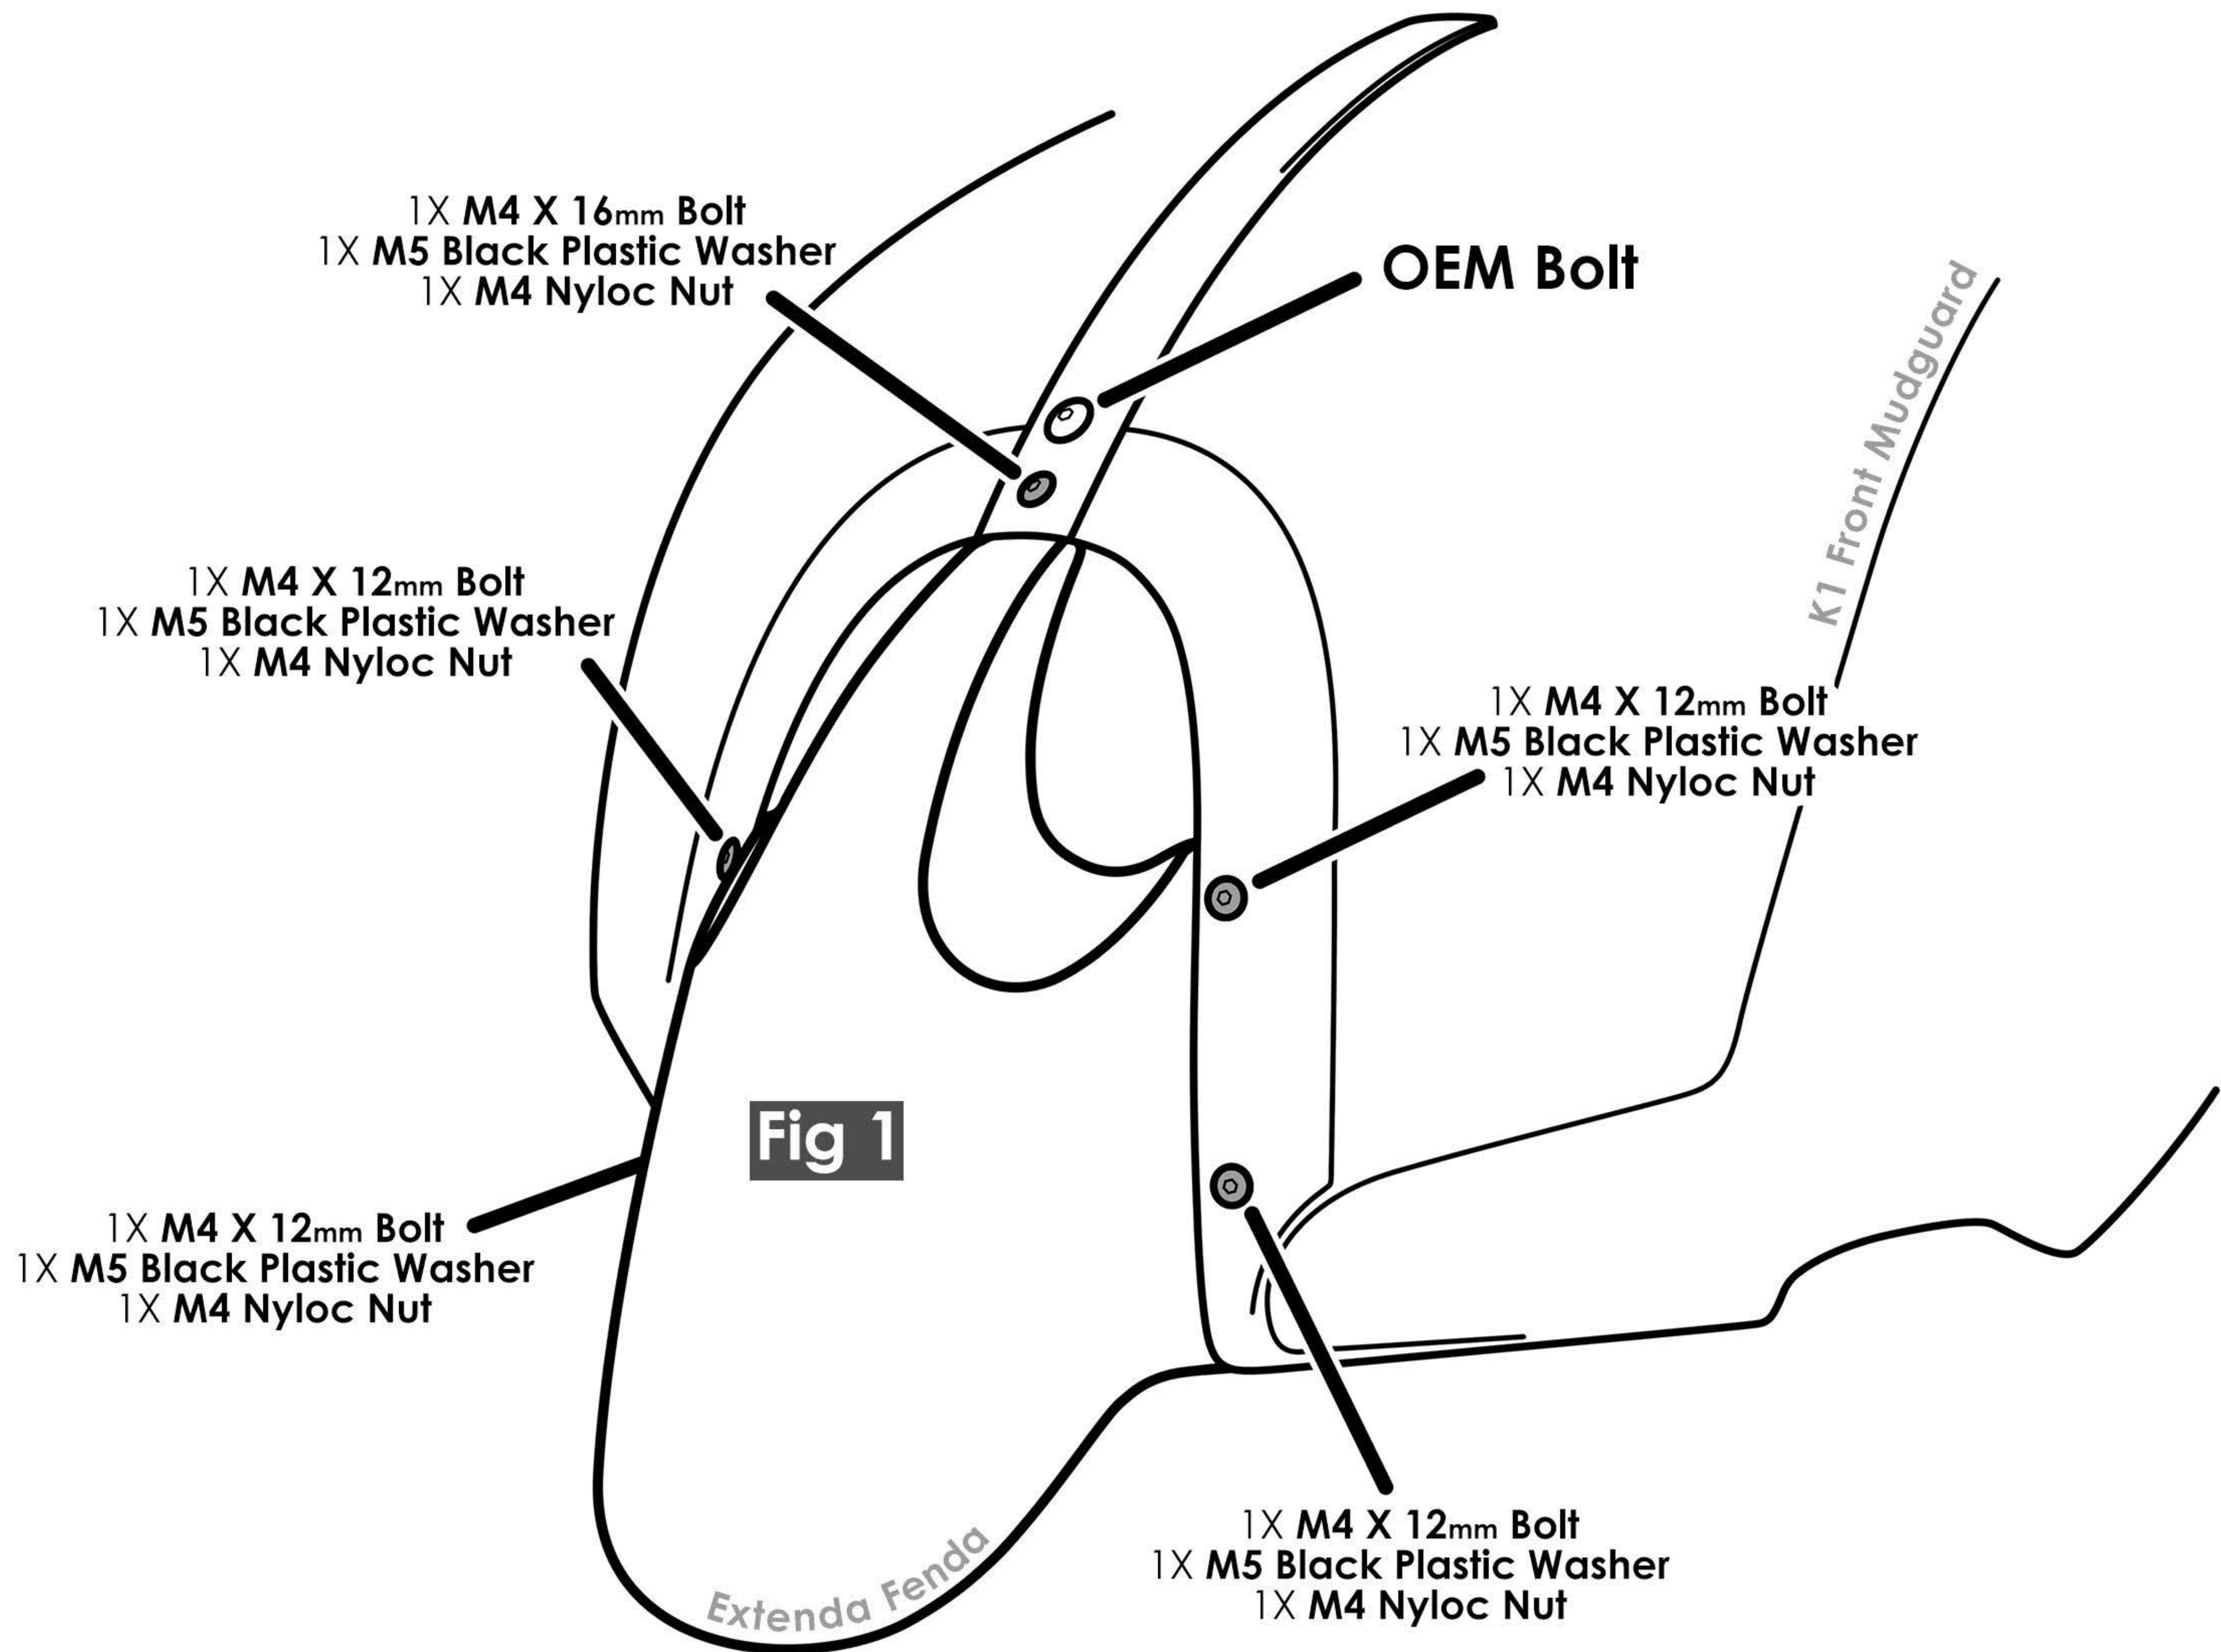

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)  
01427 677990  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

Follow us on social media and feel free to leave us a review!

