

054902 BMW F900XR & S1000XR Extenda Fenda *EXTRA* Fitting Instructions


Kit Includes:

1X	C054902	Moulding
2X	CFK054902	Brackets (pair)
2X	CBOLM50005	M5 X 12mm Black Stainless Steel Bolt
4X	CWASM50002	M5 Stainless Steel Washer
2X	CNUTM50002	M5 Stainless Steel Nyloc Nut
1X	CFOA0002	Foam Strip 20mm X 1.5mm (cut to 250mm in length)
4X	CRIV0002	Push-rivets

We advise the use of thread locking fluid on all the fixings for this product.

- Loosely attach the mudguard to the brackets using the M5 fixings supplied. Place the M5 stainless steel washers under the bolt head and under the nyloc nut.
- Attach the foam provided in the area marked 'A' below (The layout shown is advised. Scissors are useful for shaping the foam).
- Remove the OEM bolts from the brake calipers marked 'B' below.
- Attach the mudguard assembly to the brake calipers using the OEM bolts. Once the mudguard is in place, check alignment. The exact position of the mudguard can be adjusted by pulling/pushing the assembly up/down if required. Avoid excessive pressure if doing so. **Now tighten all the mounting points. Check fixings periodically.**

Note: The 4 push-rivets supplied are **not integral** to the fitment of this product, but have been supplied for those customers who would prefer to have mechanical fixing at the point where the two guards meet.

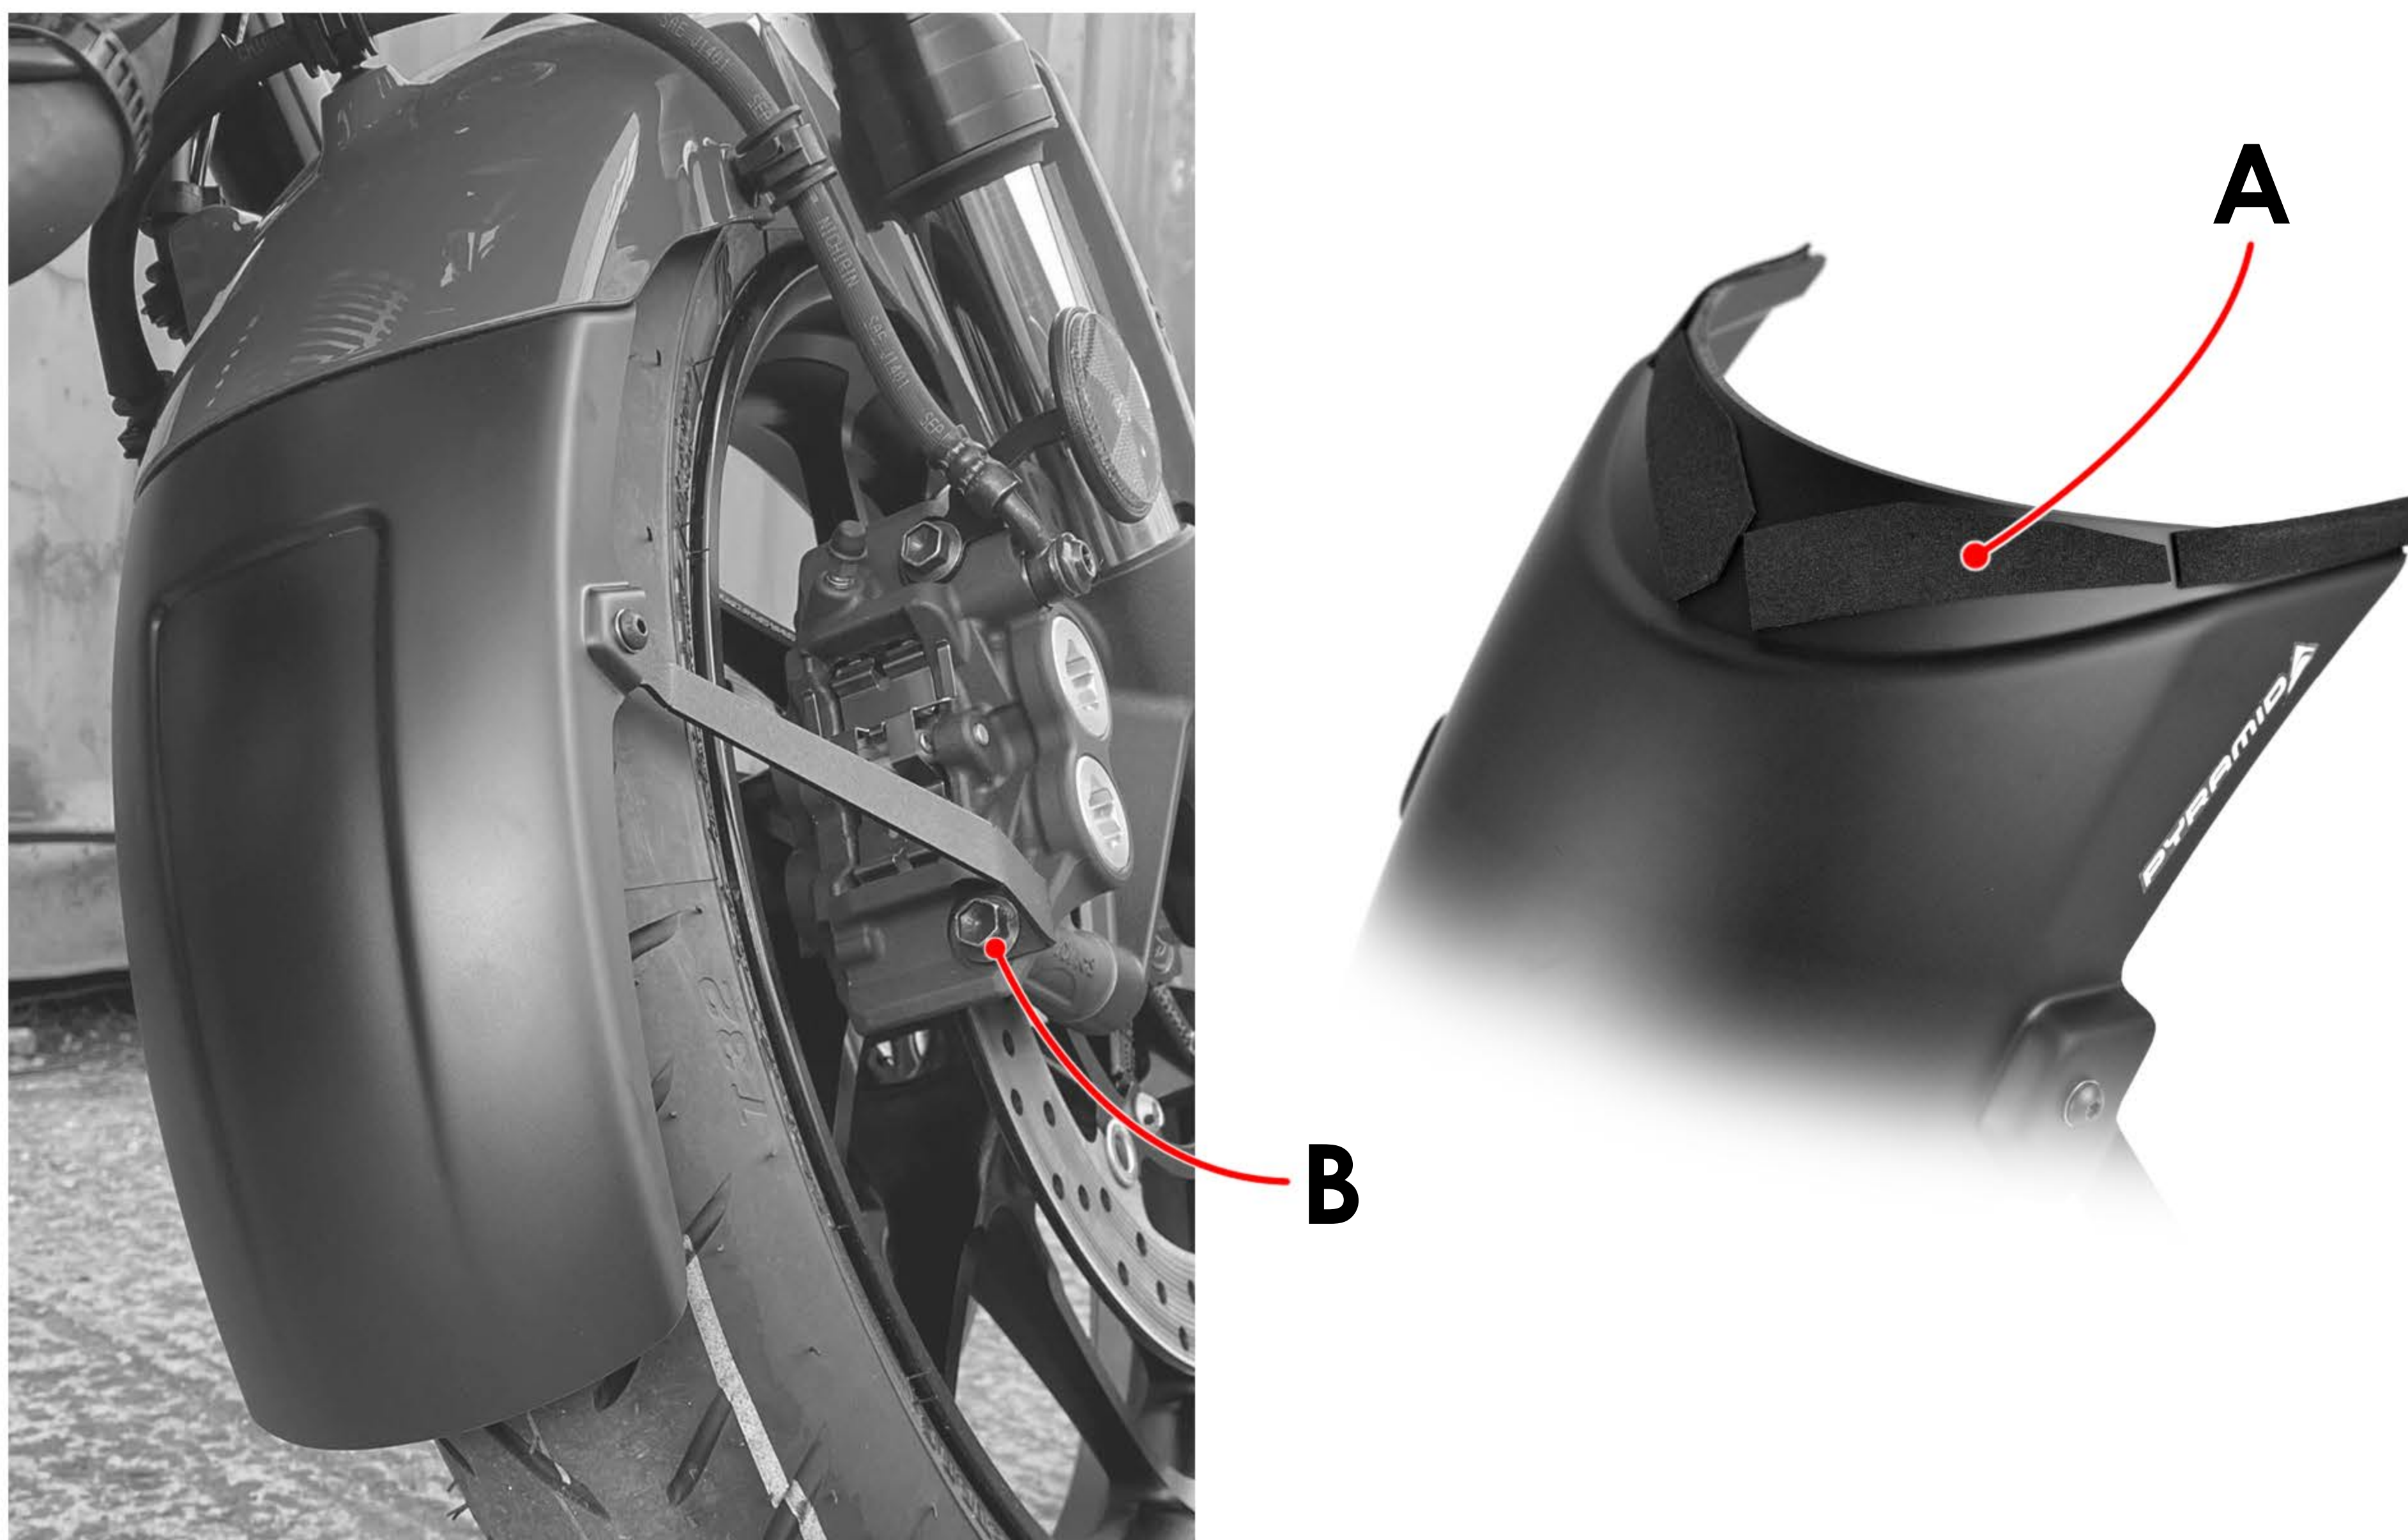

This photo shows SKU: 052451
Basic principle is the same.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!