

## 059393 KTM 790 / 890 Adventure R Front Mudguard Fitting Instructions

Kit Includes:

1X	C058085	Moulding
<b>2</b> X	CFK059393	Brackets (pair)
4X	CBOLM50005	M5 X 12mm Black Stainless Steel Bolt
8X	CWASM50002	M5 Stainless Steel Washer
ΔX	CNIITM 50002	M5 Stainless Steel Serrated Nut


Attach the brackets to the brake calipers using the original bolts. We advise removing and refitting each bolt so that the brake caliper is never fully serperated (See **Fig 1**). The Torque settings for these original brake caliper bolts is 45Nm.

Once the brackets are fitted, attach the mudguard to the brackets using the rest of the fittings supplied (see **Fig 2**).

Check fixings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



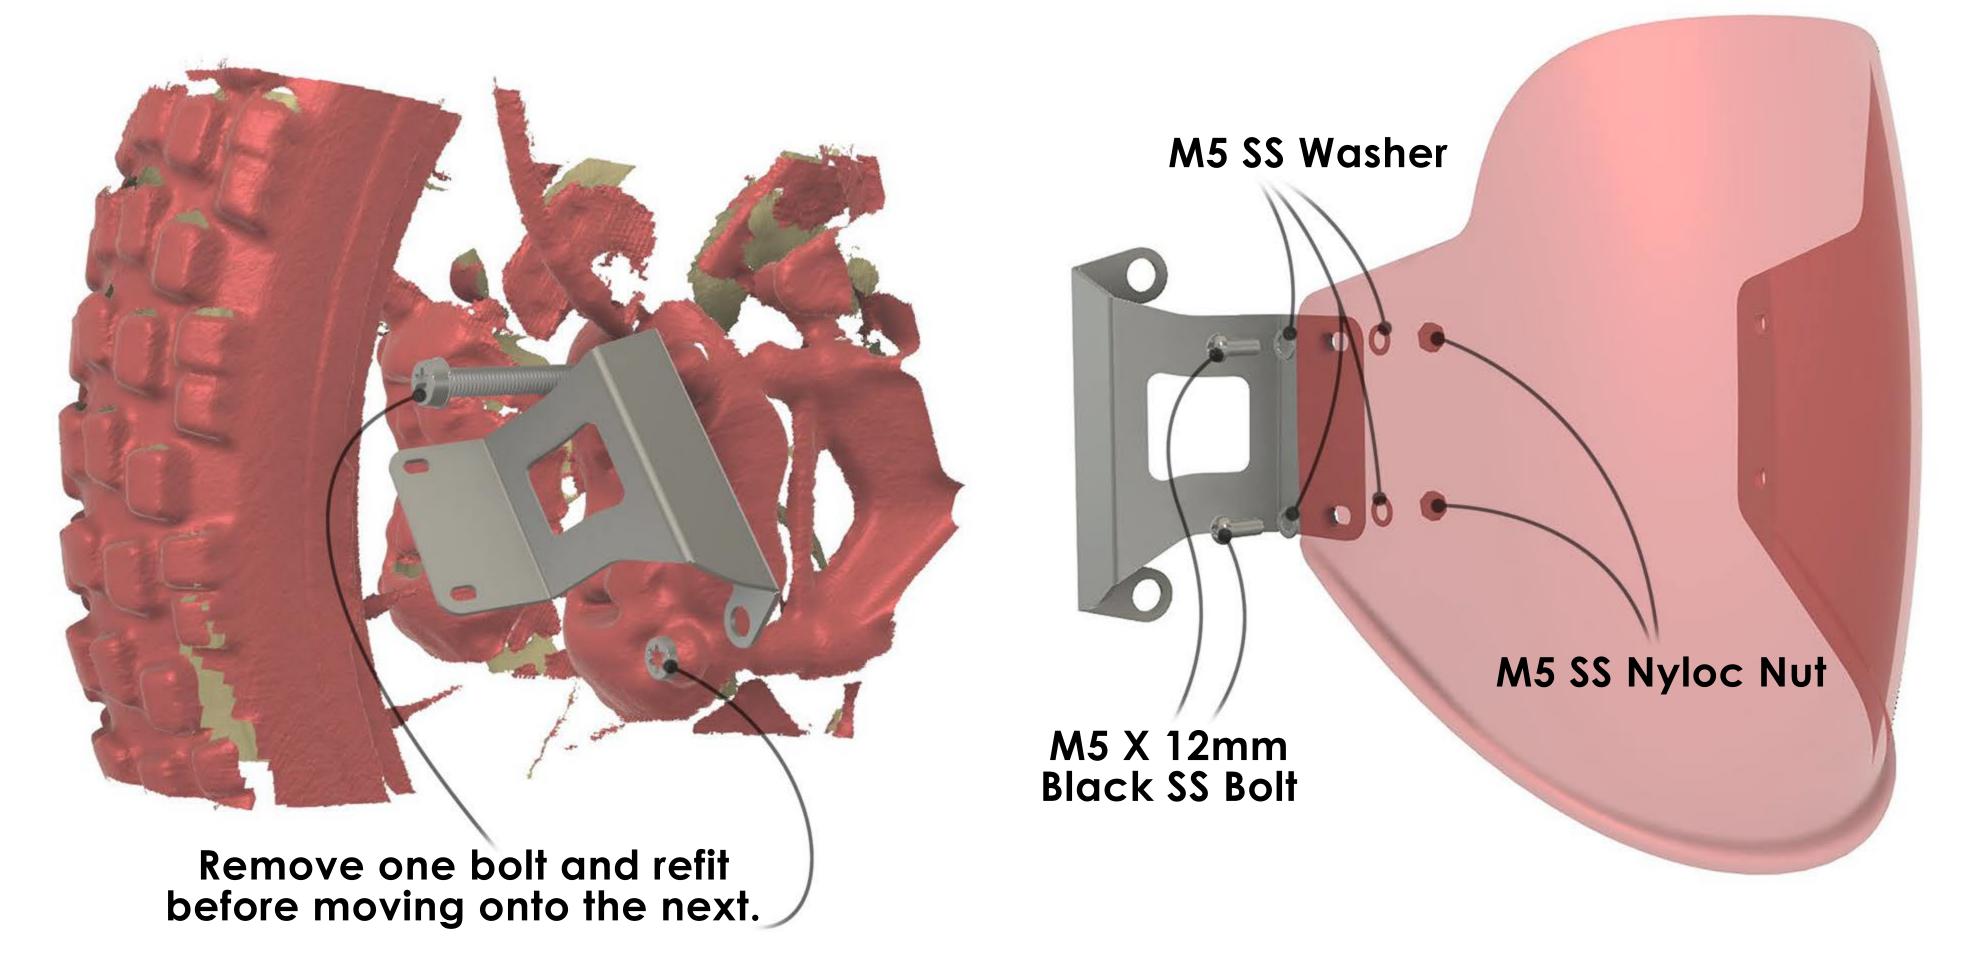



## 059393 KTM 790 / 890 Adventure R Front Mudguard Fitting Instructions

Kit Includes:

1X C058085 Moulding
2X CFK059393 Brackets (pair)
4X CBOLM50005 M5 X 12mm Black Stainless Steel Bolt
8X CWASM50002 M5 Stainless Steel Washer
4X CNUTM50002 M5 Stainless Steel Serrated Nut

Attach the brackets to the brake calipers using the original bolts. We advise removing and refitting each bolt so that the brake caliper is never fully serperated (See **Fig 1**). The Torque settings for these original brake caliper bolts is 45Nm.

Once the brackets are fitted, attach the mudguard to the brackets using the rest of the fittings supplied (see **Fig 2**).

Check fixings periodically.



