

070022 GSF650 Bandit (oil-cooled) 05-07 Hugger Fitting Instructions

Kit Includes:

4X	CBOLM60008	M6 x 16mm Allen Bolt
4X	CWASM60003	M6 Plastic Washer
1X	CBOLM60007	M6 x 12mm Button Allen Bolt
1X	CWASM60002	M6 Shake Proof Washer
1X	CFK07328	2 Part Strap Bracket
3X	CNUTM60008	M6 Cage Nuts

Remove the original chain guard.

Position the bracket supplied on the right side of the swing arm. Loosely attach the two brackets at the single hole using the M6 x 12mm button bolt with shake proof washer, the flat edge of the bracket fits on the inside of the swing arm passed up through the brake hose guide bracket welded to the inside of the swing arm, with the bent bracket to the outside.


Position the hugger over the wheel, loosely attach to the chain guard mounts using two M6 x 16mm bolts with washers, loosely attach to the strap bracket on the right side of the swing arm using the remaining bolts and washers (note: both fingers of the bracket should be on the inside of the hugger).

Finally check hugger alignment over the wheel and fully tighten all fasteners.

Please note: check hugger alignment and fasteners for tightness periodically.



Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

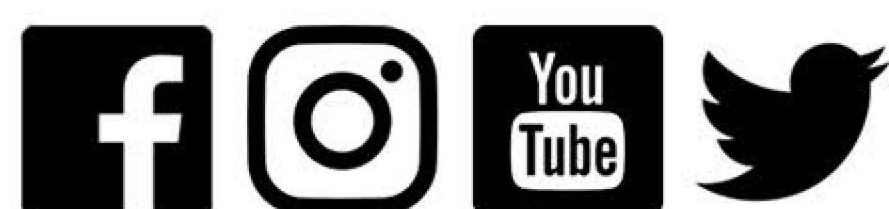

Follow us on social media and
feel free to leave us a review!

let's
Ride