

# PYRAMID

## 071910 Honda CB500F, CB500X & CBR500R Hugger Fitting Instructions

Kit includes:

2X Rubber Strips

Pre-fitted CRUB0001

1X Circular Rubber Pad

Pre-fitted CBUM003

1X Square Rubber Foot


Pre-fitted CBUM0003

1X Nylon Zip-Tie 430mm X 7.6mm


CAB0430A

- Check all four rubber mountings are fitted to the Pyramid Hugger as highlighted in **GREY** in **Fig 1**.
- Feed the Zip-Tie through the slots in the Pyramid Hugger as highlighted in **RED** in **Fig 1**.
- Slide the Pyramid Hugger over the rear tyre and fit into place on the swingarm.
- The Zip-Tie should now be slotted down the groove on the front of the swingarm to meet with other end of the Zip-Tie - see **Fig 2** for guidance.
- Fit the Zip-Tie together and slowly tighten by hand checking the alignment of the Zip-Tie & Pyramid Hugger. Use a pair of pliers or grips for final tightening and trim the excess Zip-Tie away.

**Fig 1**

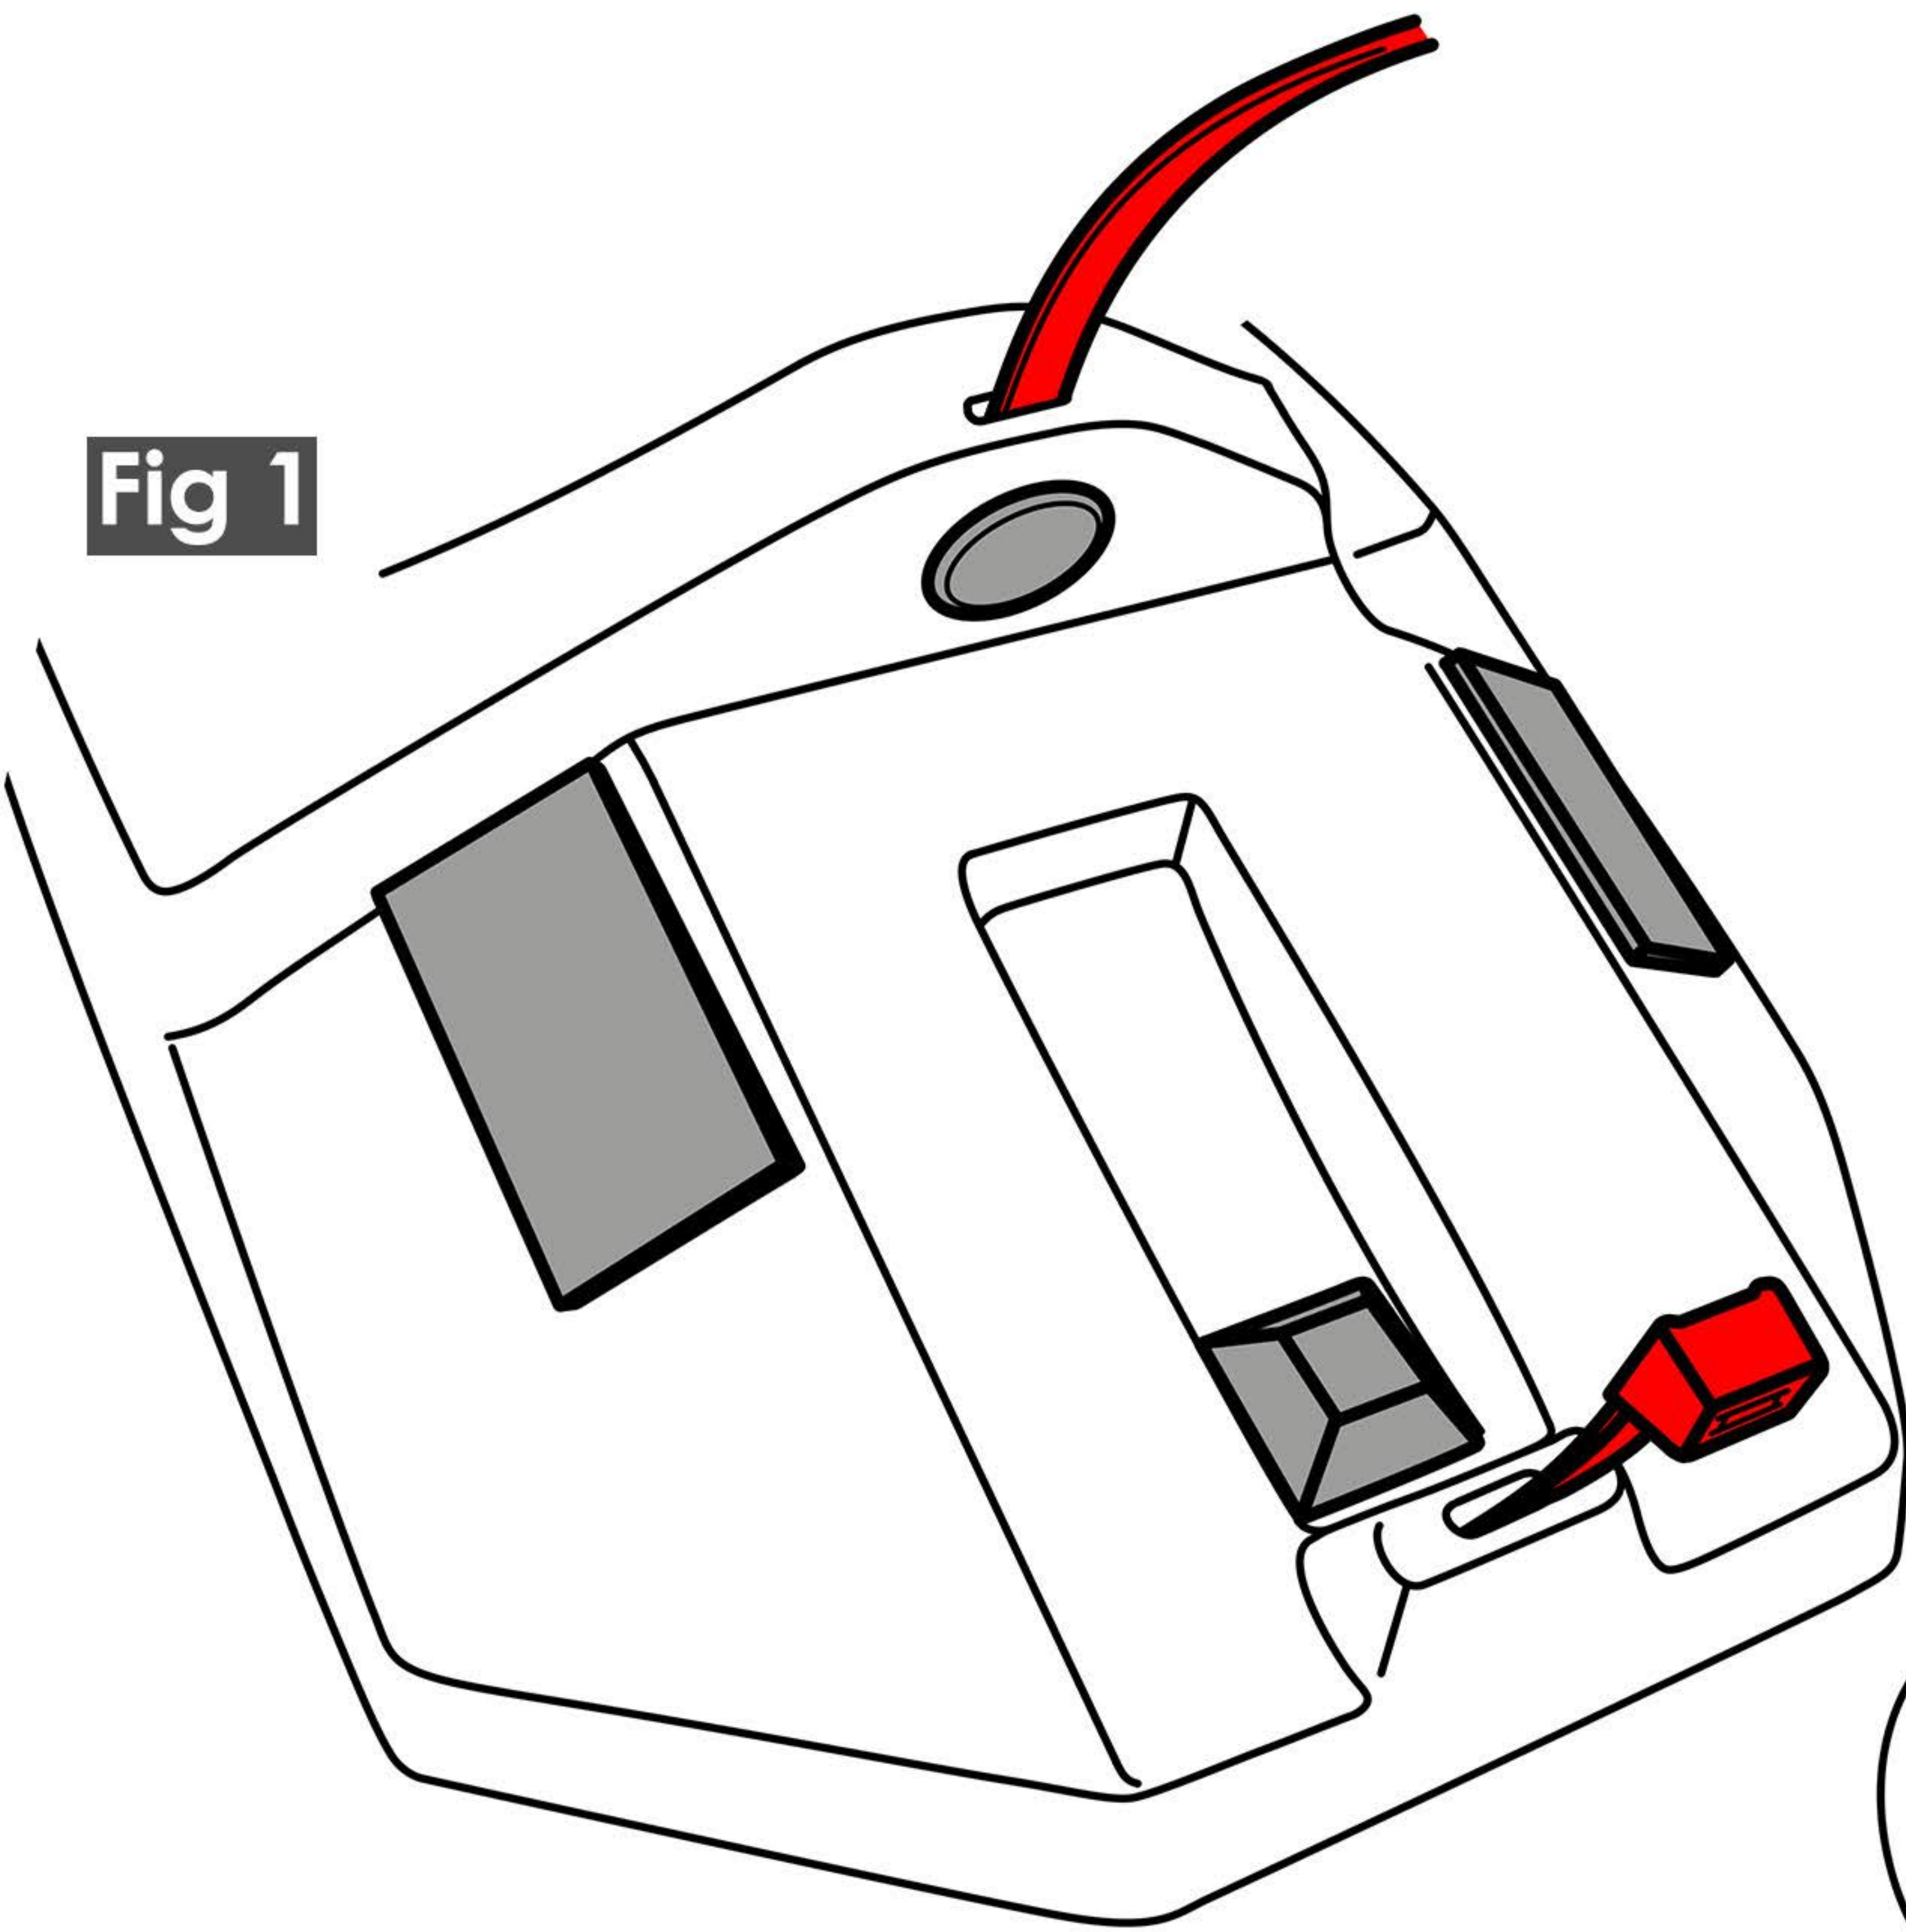

**Fig 2**

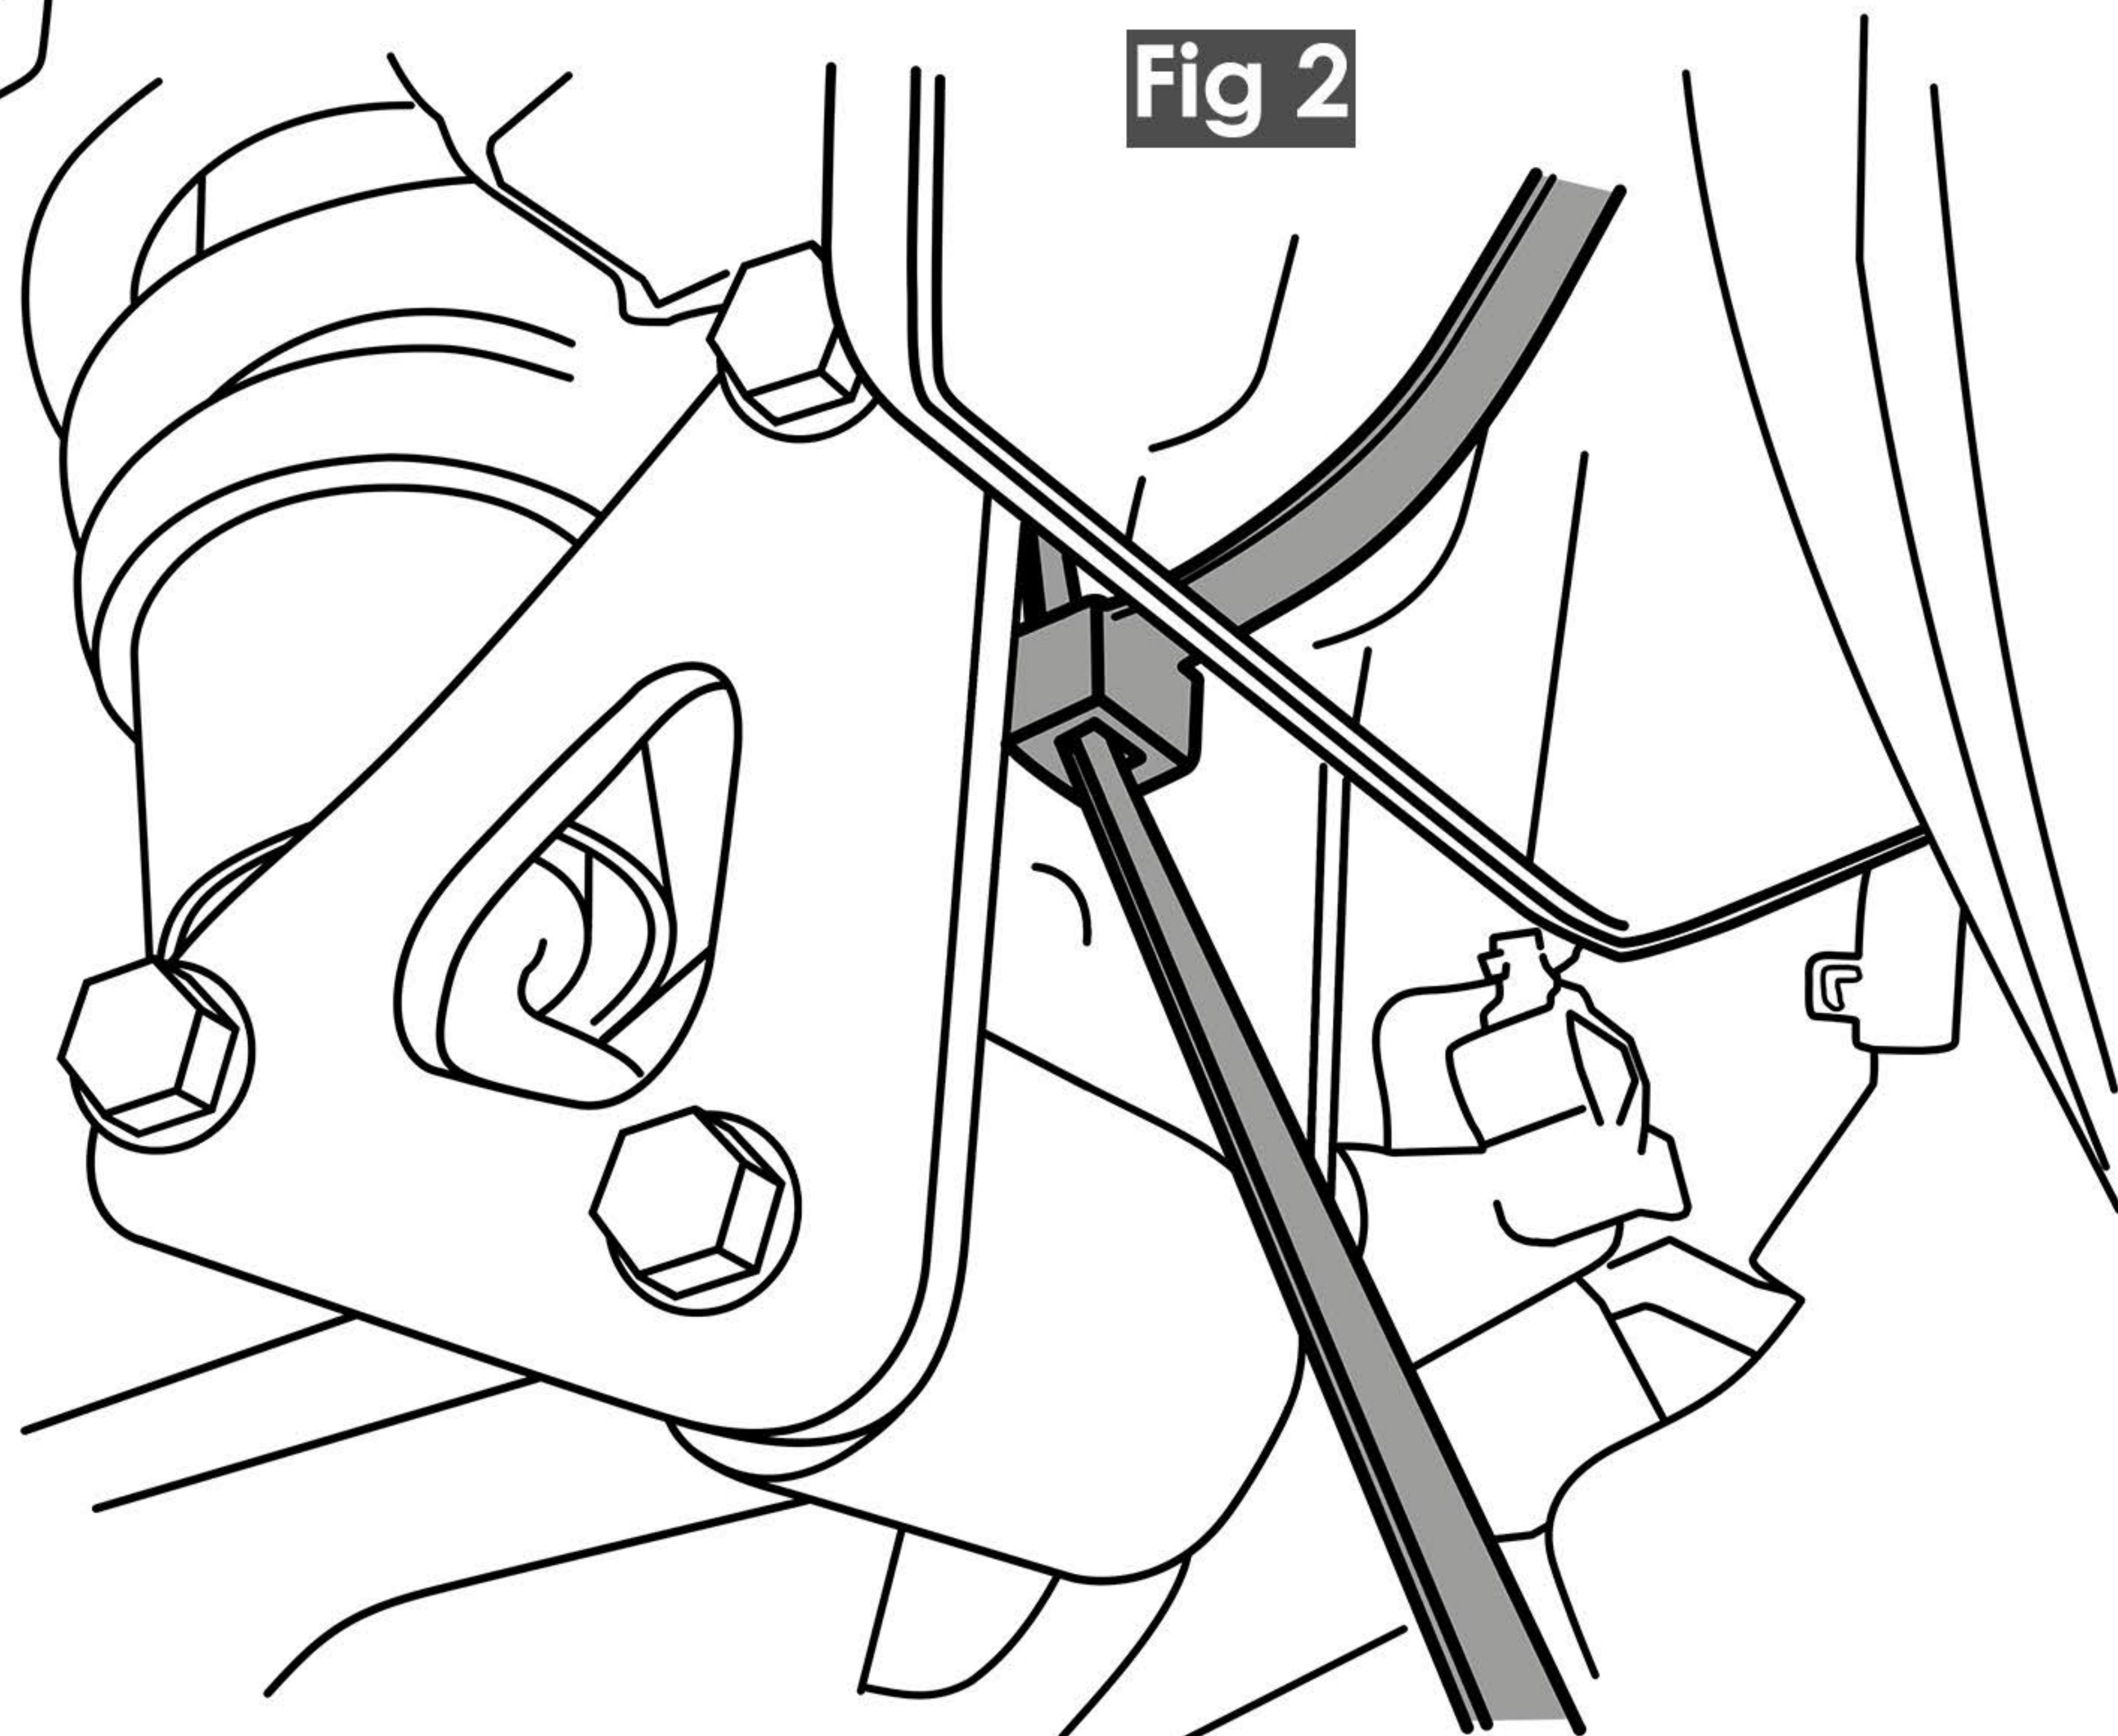

Got Questions?  
sales@pyramid-plastics.co.uk  
01427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

