

071942 Honda NT1100 Hugger 2025> Fitting Instructions

Kit Includes:

1X	C071942	Moulding
1X	CFK071921	Bracket - right-hand side
1X	CFK071921A	Bracket - left-hand side
5X	CBOLM60008	M6 x 16mm Bolt
5X	CWASM60003	M6 Washer
1X	CRUB0001	Rubber Strip (120mm length)
1X	CSPAM60009	Spacer
1X	CBOLM40001	Pre-fitted by Pyramid M4 x 10mm Bolt
2X	CPNUTM60001	Pre-fitted by Pyramid Aluminium Nut

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

Fitting note: attach fixings loosely at first - this helps alignment of hole centres.

Remove the original chainguard. Remove the brake hose clip on the right hand side of the swingarm (retain the OEM posi-drive bolt from this mounting point). The brake hose clip can be discarded, as the profile of the hugger will keep the brake wire hose in position.

Attach the rubber strip to the left-hand side bracket as shown below in **Fig 1**.

Attach the right-hand side bracket to the hugger as shown in **Fig 2**.

Fit the hugger to the bike as shown in **Fig 2 & 3**.

Fig 4 shows how the right-hand side bracket needs to be positioned to support the hugger once tightened - we advise the use of thread-locking fluid on this bolt.

Fully tighten all mounting points. Ensure fixings are checked periodically.

Fig 1

Rubber strip



Left-hand
side bracket


Fig 3



M6 x 16mm Bolt
+ M6 Washer

Spacer

Fig 2

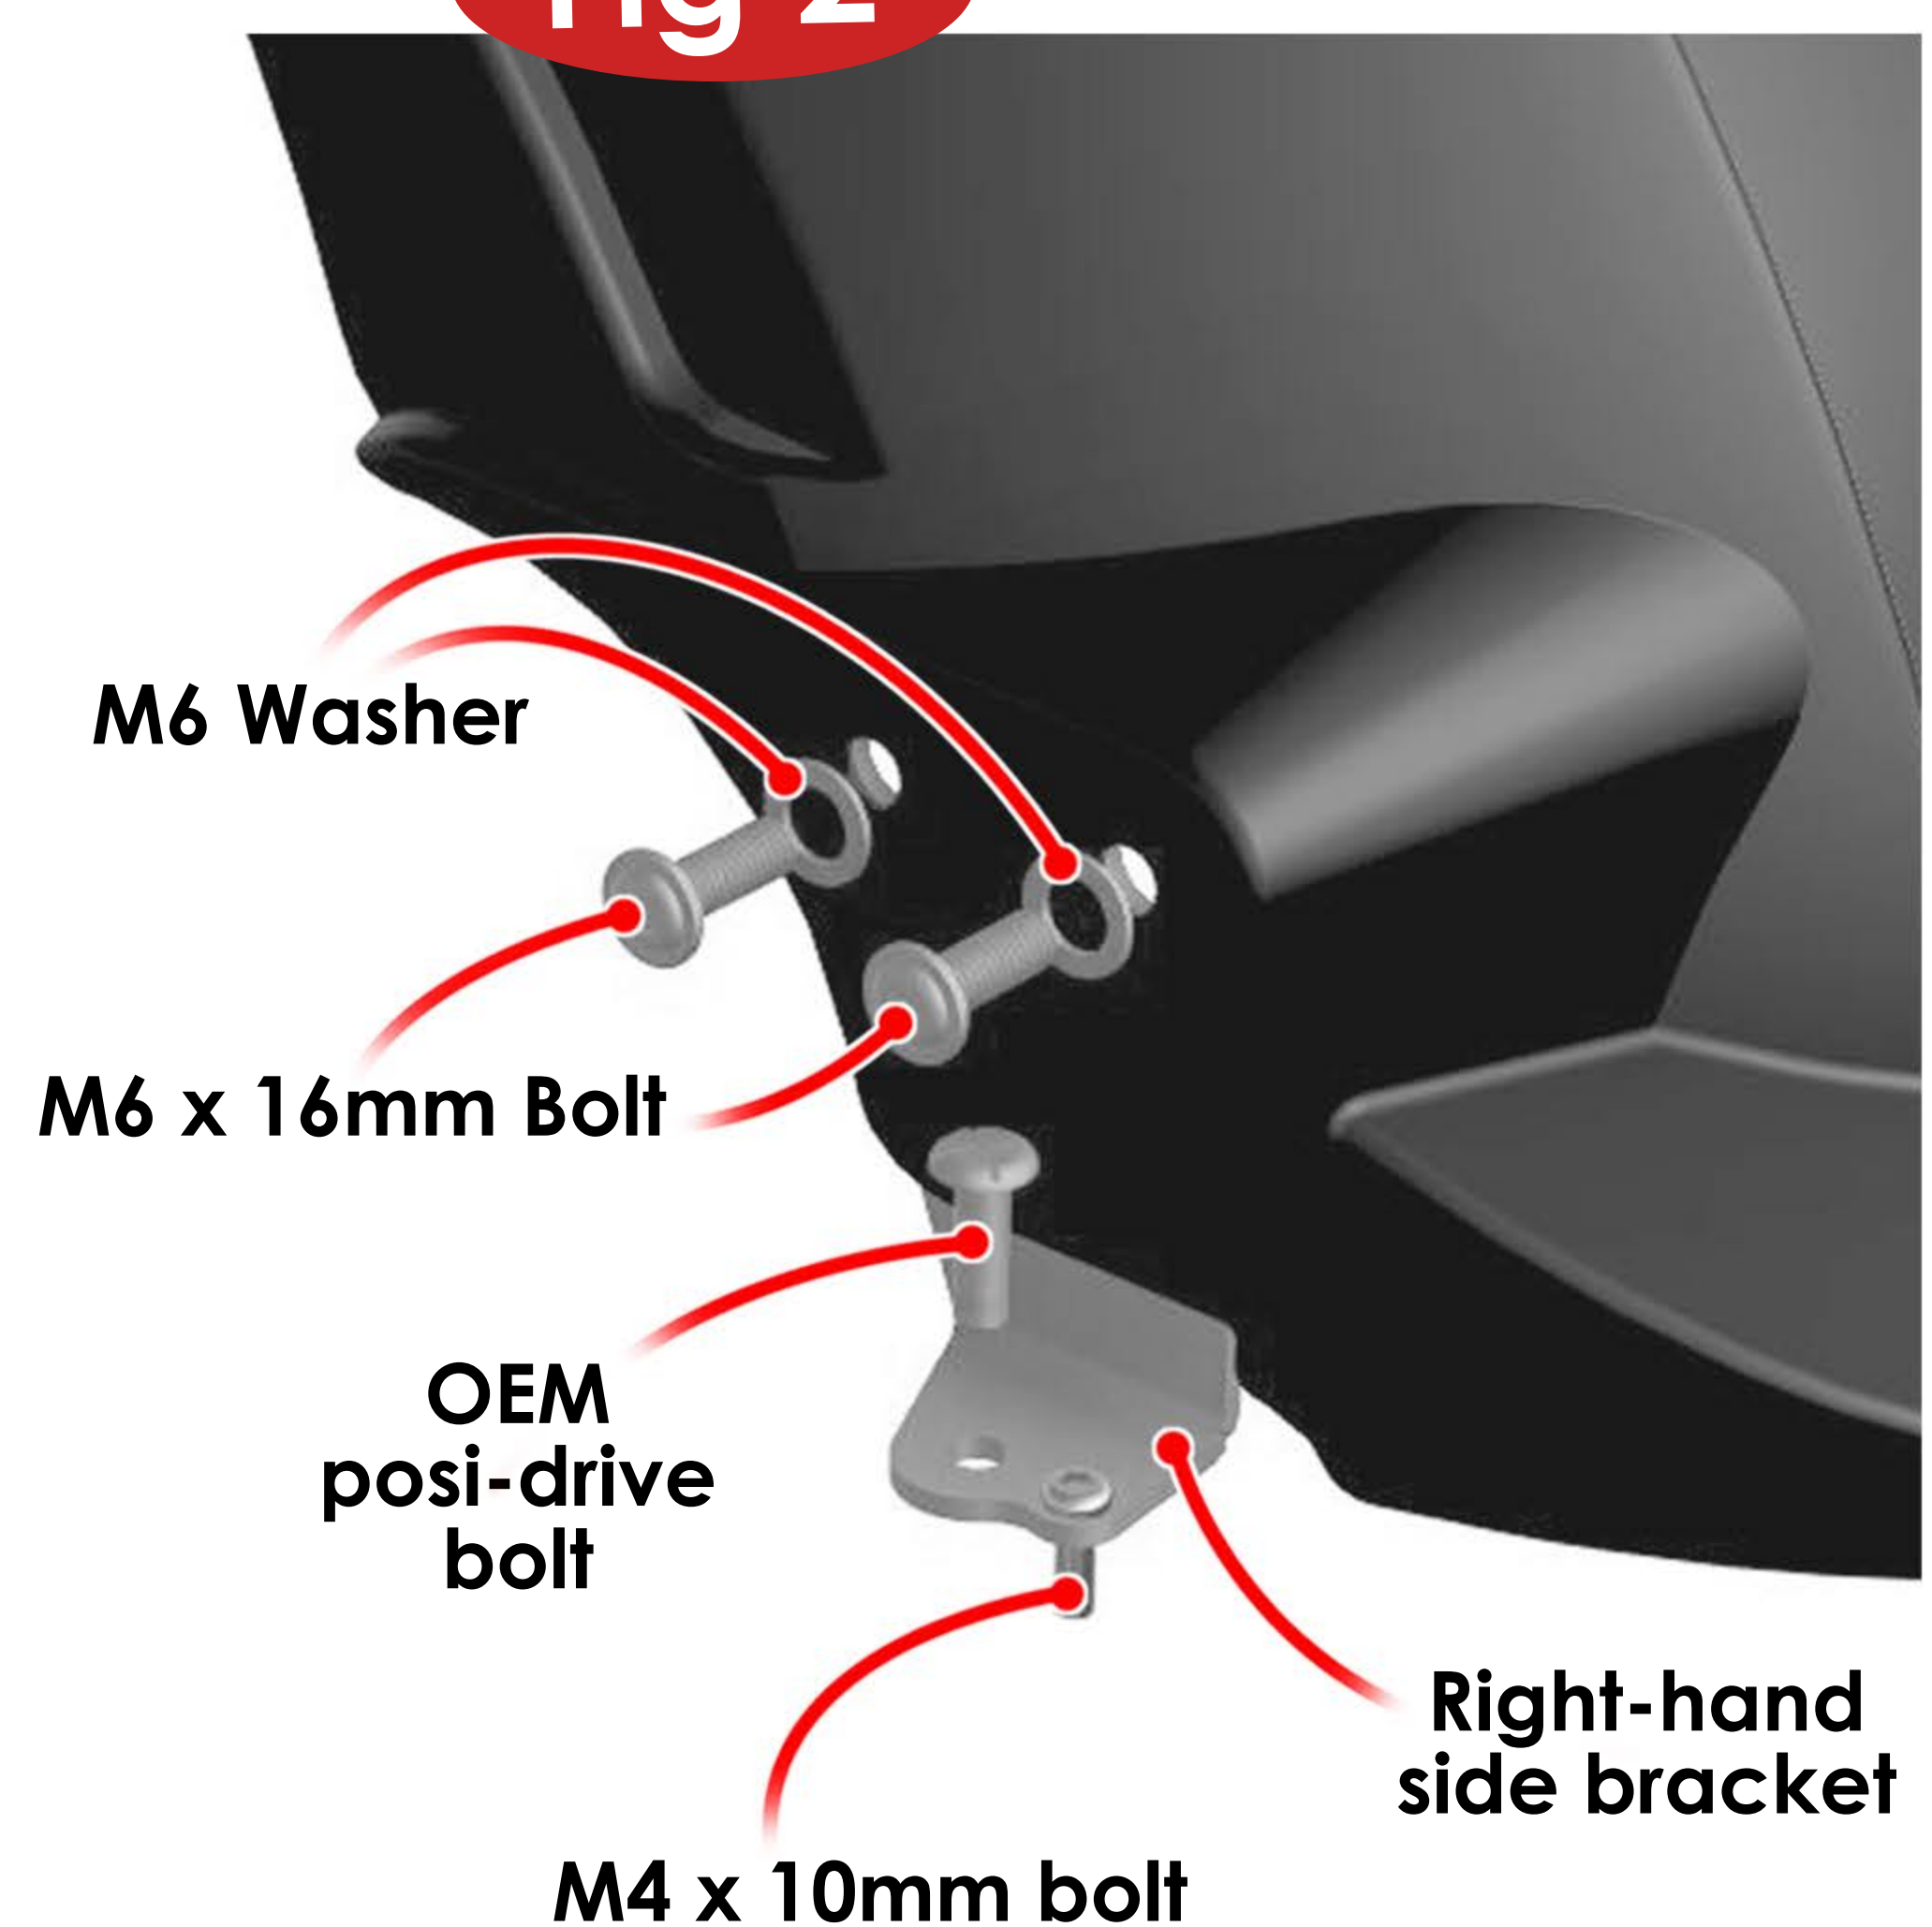

M6 Washer

M6 x 16mm Bolt

OEM
posi-drive
bolt

M4 x 10mm bolt

Right-hand
side bracket

Fig 4



Rubber strip against
underside of chainguard