


071971 Honda VFR1200F & VFR1200X Hugger Fitting Instructions


Kit Includes:

2X	CBOLM60020	M6 X 20mm Hex Head Bolts
1X	CBOLM60011	M6 X 25mm Flanged Button Head Bolt
2X	CWASM60001	M6 Flat Steel Washers
2X	CWASM60004	M6 Large Plastic Washers
1X	CSPAM60011	Black Spacer 6.3mm ID X 15mm OD X 7.5mm

- Remove rear wheel. (If you don't have a centre or paddock stand; it is possible, with care, to jack the bike up against the bottom linkage as shown in picture).
- Undo the bolt which fixes the plastic moulding on top of swing arm and insert the black spacer (**CSPAM60011**) into the recess.
- Remove grey plastic plugs from the two drilled and taped holes in the swing arms vertical face.
- Loosely attach the Hugger using the two M6 X 20mm Hex Head Bolts (**CBOLM60020**) with an M6 Flat Steel Washer (**CWASM60001**) under the bolt head and an M6 Large Plastic Washer (**CWASM60004**) on each mounting bolt between the outer Hugger face and the swinging arm - to act as a spacer.
- Use the M6 X 25mm Flanged Button Head Bolt (**CBOLM60011**) to fix the Hugger on top of the swing arm. ensuring the spacer provided (**CSPA60011**) is between the Hugger tab and the plastic moulding.
- Fully tighten all three mounting points and re-fit the rear wheel.

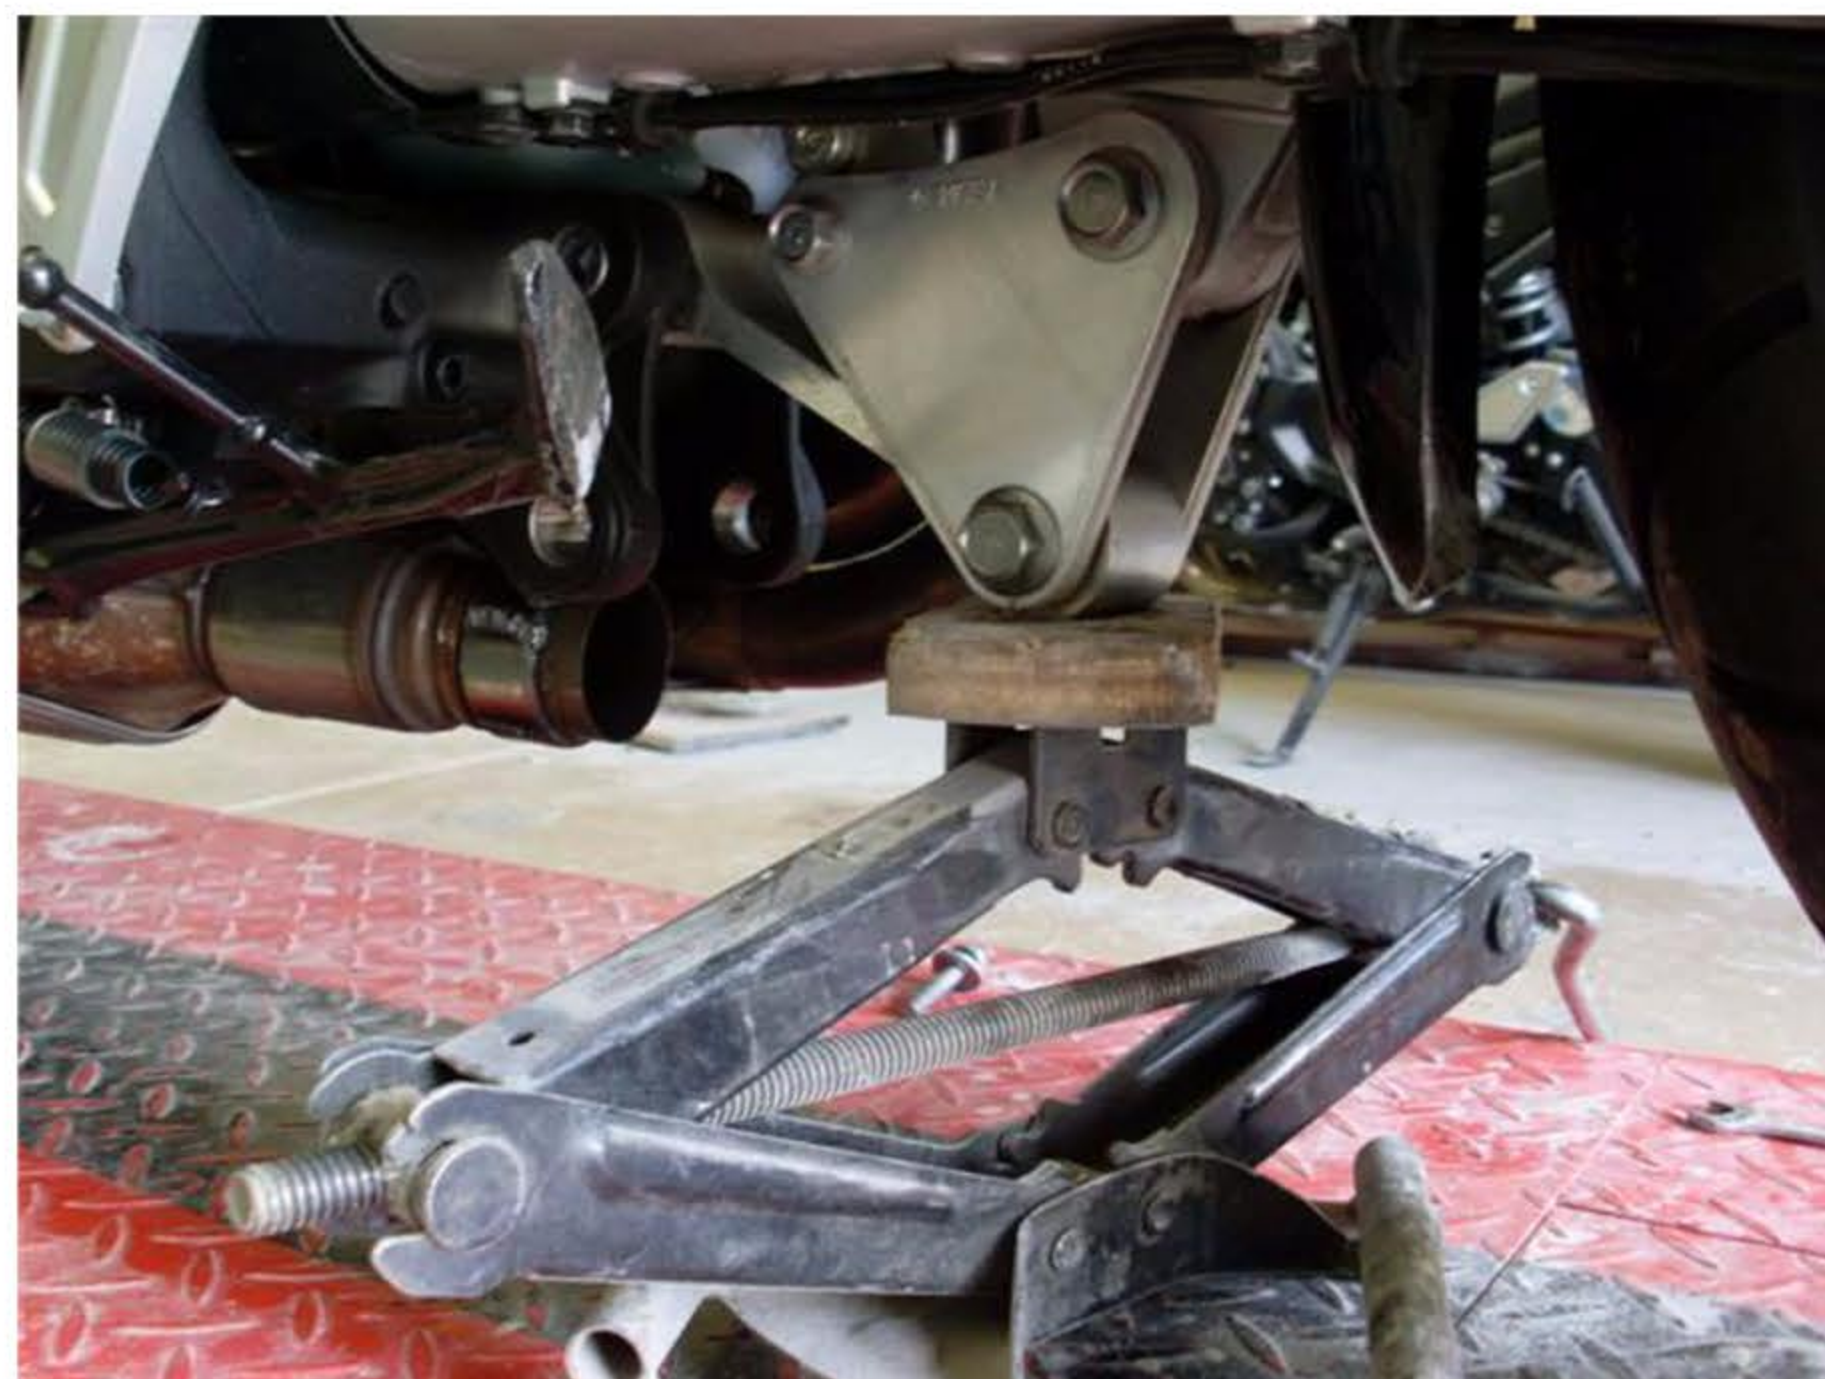

Optional jacking point

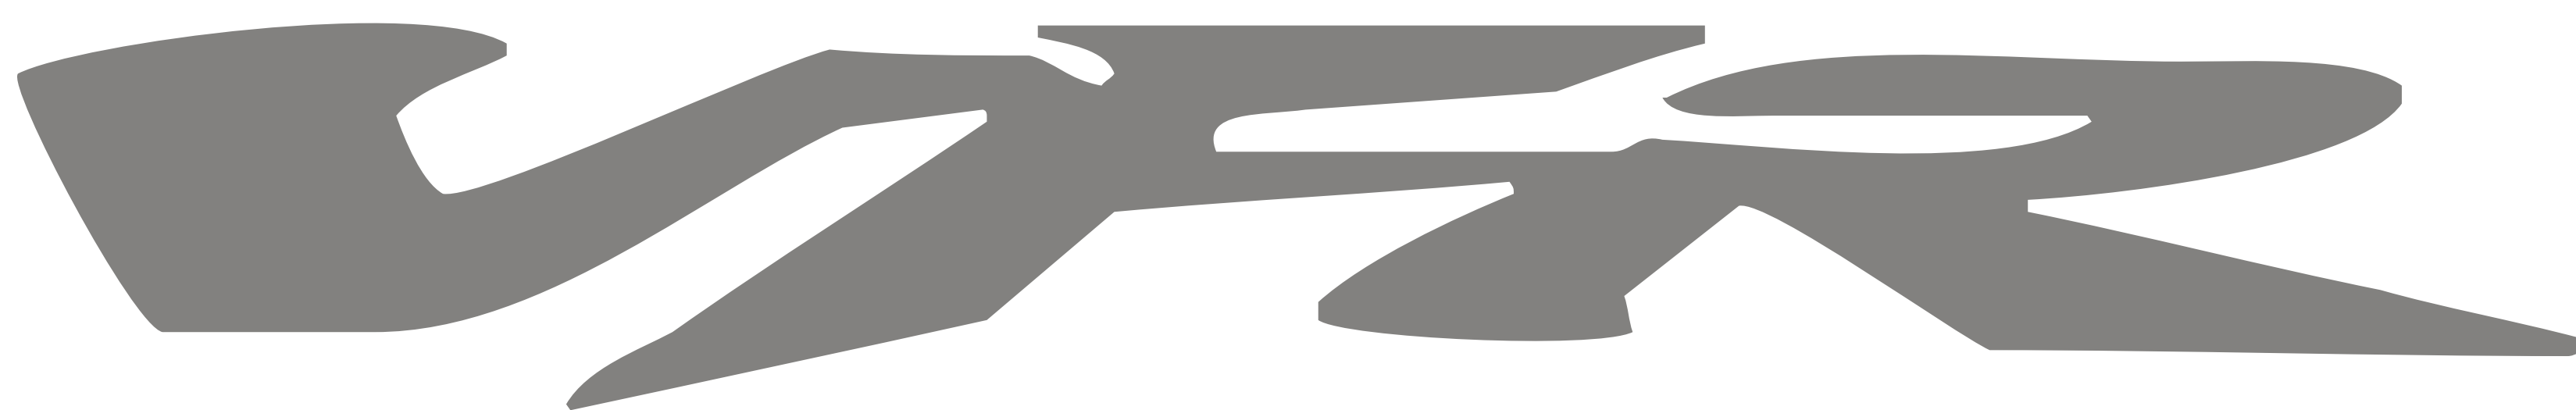

Got questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!