

072445 Yamaha MT-09, Tracer 900 & XSR900 Hugger Instructions


Kit Includes:

3X 13mm Black Grommet	CGROM60001
3X M6 X 8mm Silver Spacer	CSPAM60004
1X M6 X 25mm Black Dome Headed Screw	CBOLM60026
1X M6 X 8mm Black Spacer	CSPAM60011

Note: If you are fitting the Pyramid Hugger to a MK2 Yamaha MT-09 (2017 Onwards) you will need to use CBOLM60026 & CSPAM60011 (listed above) at mounting point B instead of the OEM fitting. As well as this, you will NOT need CSPAM60004 & CGROM60001 for mounting point C

Fits using OEM fittings from OEM Yamaha Hugger.

- Remove the OEM Yamaha Hugger and keep all OEM fittings for fitment of the Pyramid Hugger. Mounting points **A**, **B** & **C** (Marked **RED**) can be seen in **Fig 1** & **Fig 2** below.
- Fit the **3 13mm Black Grommets** & **3 M6 X 8mm Silver Spacers** to the mounting holes of the Pyramid Hugger.
- Now simply fit the Pyramid Hugger to the existing mounting points using the OEM fittings removed in the first step.
- Please ensure that you do not overtighten, as this may cause the Pyramid Hugger to crack. Also check fittings periodically.

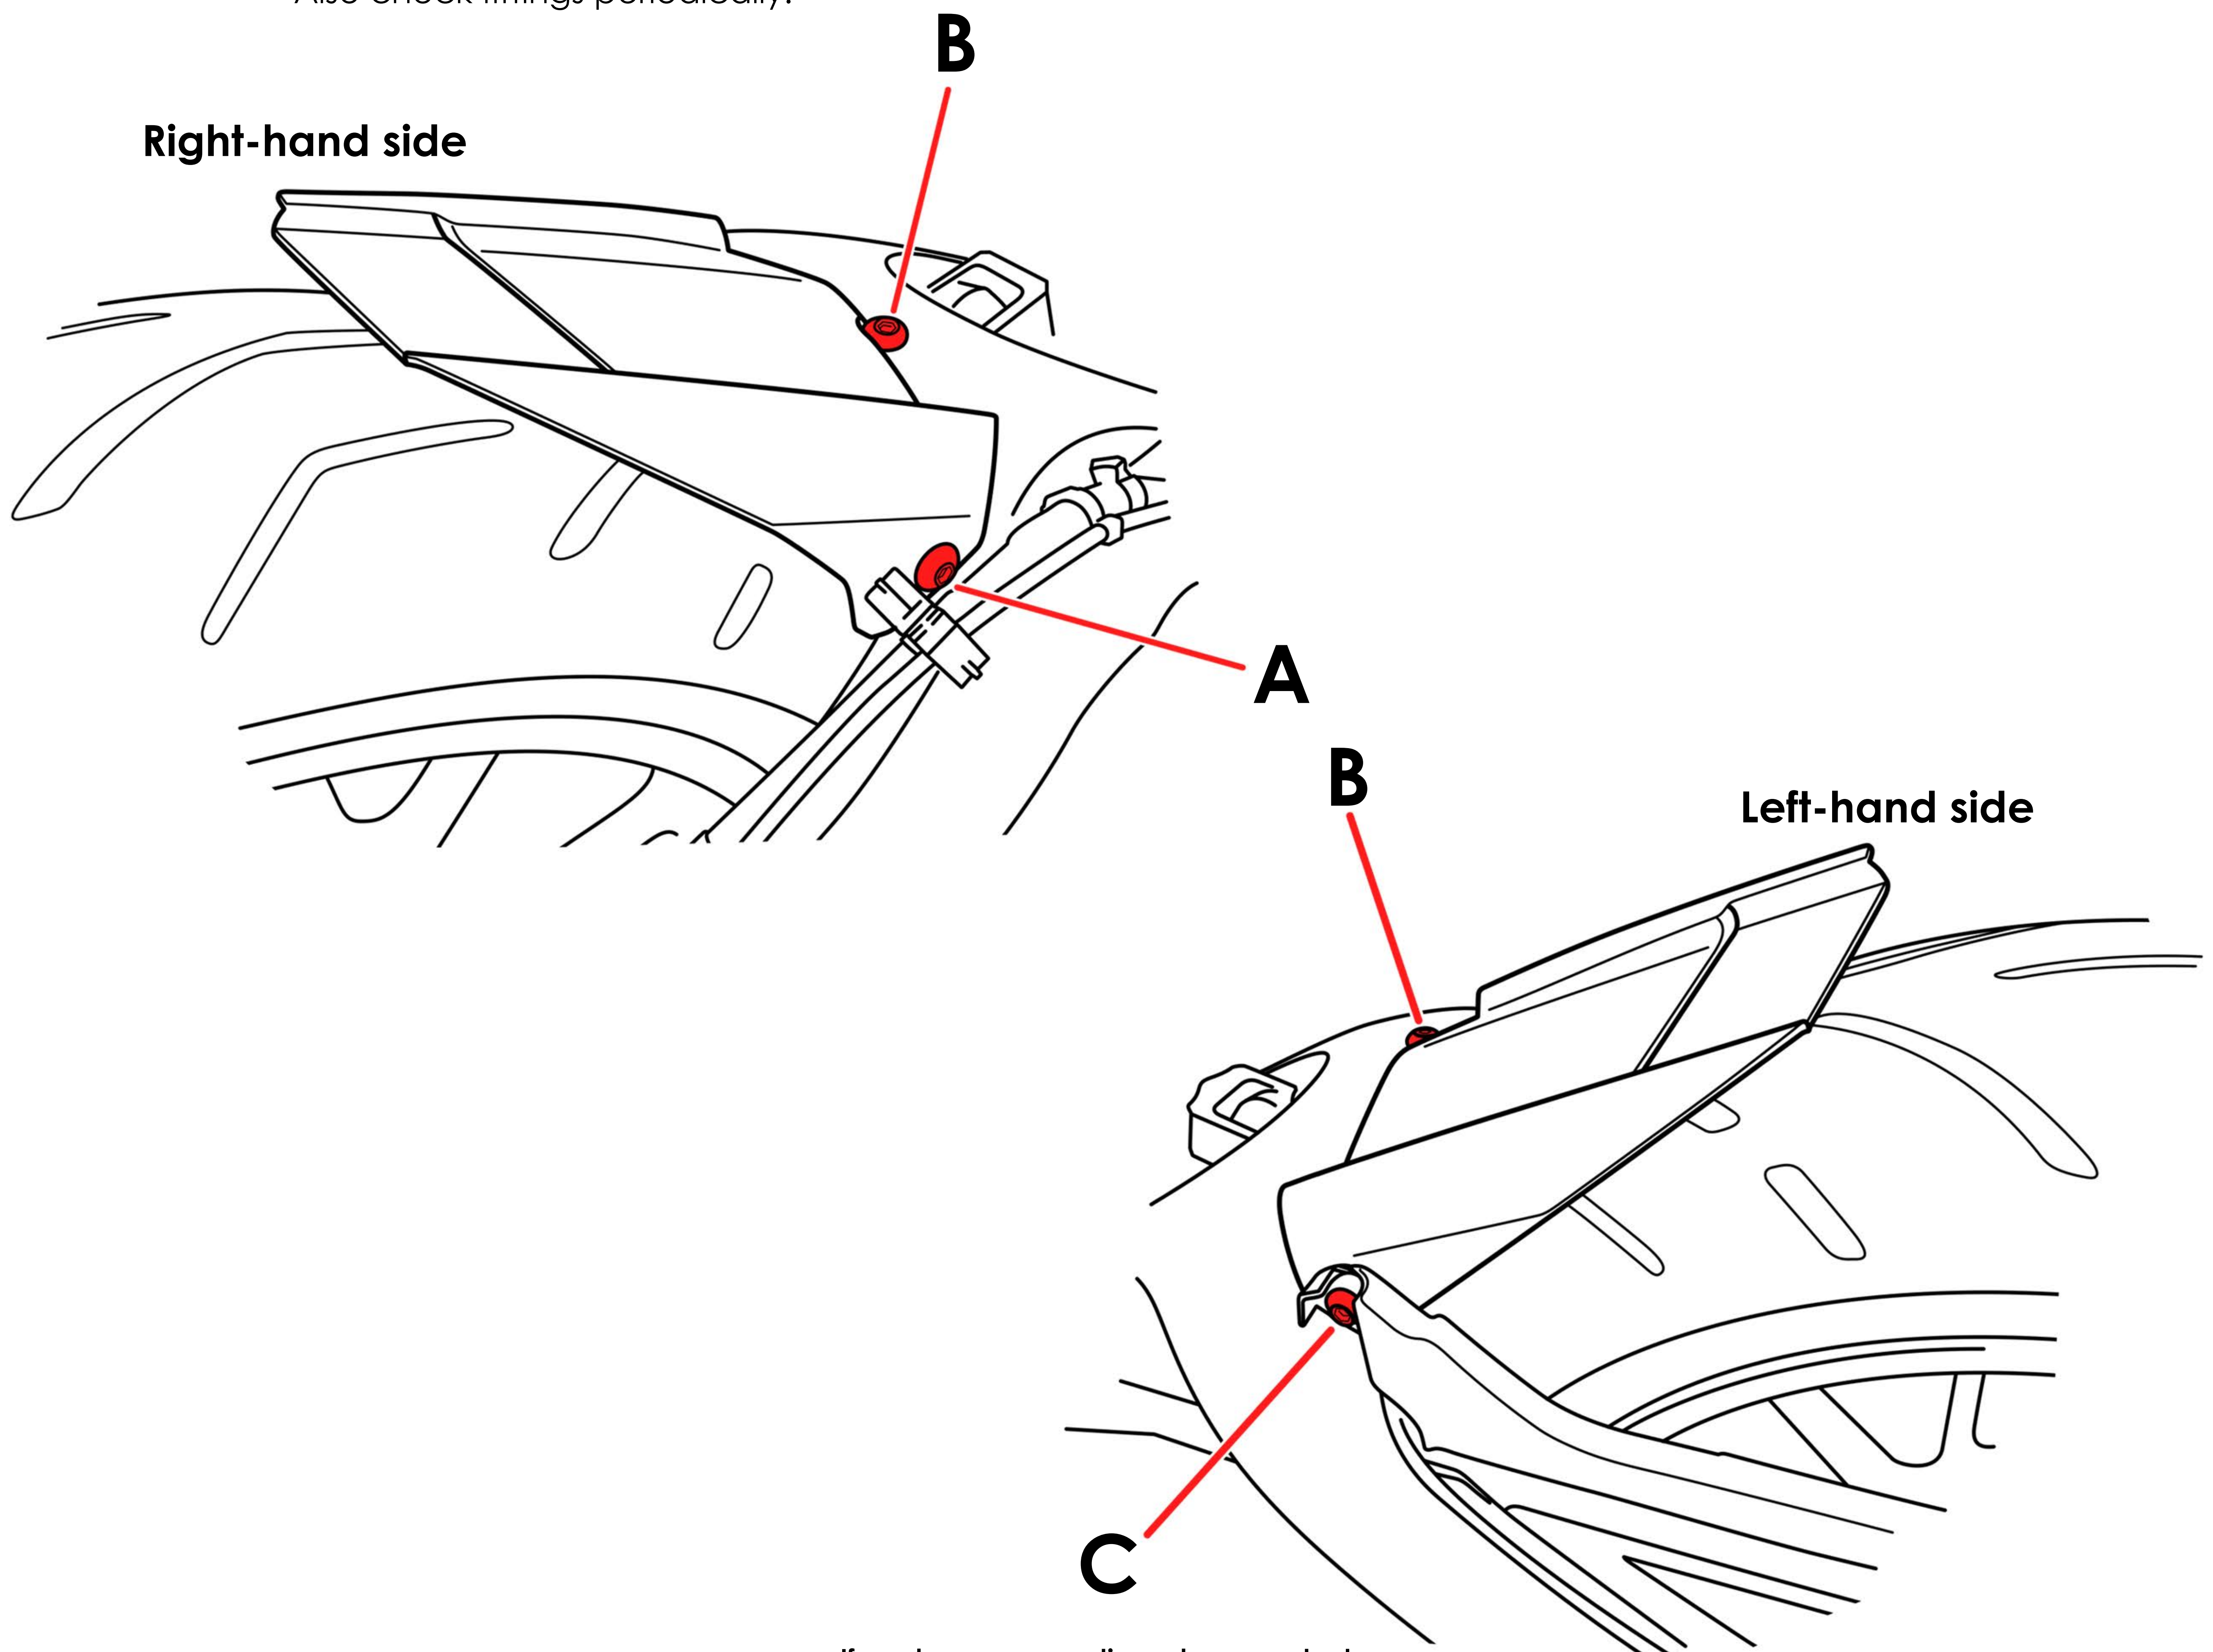

If you have any questions please contact us
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

