
KAWASAKI ZX6 Hugger


Fitting Instructions Part # 073015

1x M5x12mm Button head Bolt - CBOLM50003


1x M5 Nyloc Nut - CNUTM50002 1x zip tie 530mm - CAB0530 1 x M5 plastic washer - CWASM50001


£irstly remove the existing chain guard and retain the bolts. Unbolt the brake line retaining clip and position the mounting bracket as shown.

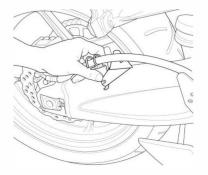


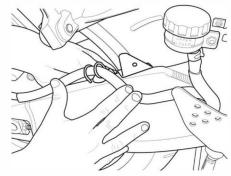


Using the original bolt, secure the mounting bracket **between** the brake line holder and the swinging arm.




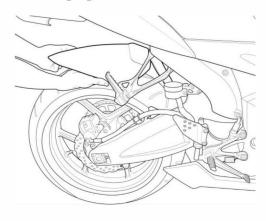

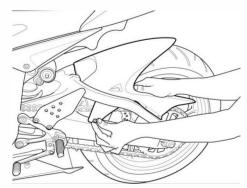

4 Secure the hugger in place using the Three original fixing points and bolts removed in step 1.



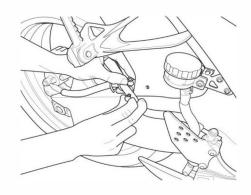



6. Fix the lower protection arm away from the tyre using the zip tie provided.

Ensure to check that <u>ALL</u> bolts are securely fastened.