
PTRAMD

073870 Kawasaki GTR1400 Hugger Fitting Instructions

Kit Includes:

1X	C073870	Hugger Moulding (with spray suppression)
1X	CFK073870	Mounting Brackets (pair)
1X	CBOLM60023	M6 X 45mm Hex Head Stainless Bolt
2X	CBOLM60008	M6 X 16mm Stainless Bolt
2X	CBOLM60007	M6 X 12mm Stainless Bolt
5X	CWASM60008	M6 Penny Washer
5X	CNUTM60003	M6 Nyloc Nut

- Remove the nuts from each side from the top inner swingarm knuckle.
- Remove the bolt holding the inner brake hose clip.
- Replace the bolt with the M6 X 45mm hex head stainless bolt supplied, fully tighten.
- Fix the long end of the welded bracket over the protruding end of the bolt. Fix the other end over the swing arm knuckle bolt. Refit original nut.
- Fix the rear point using an M6 penny washer and M6 nyloc nut. Fully tighten both nuts.
- Fit the remaining bracket to the near side (left-hand side) point. Replace the nut, do not fully tighten.
- Slide the Pyramid Hugger into position and fix to the near side bracket (left-hand side) using M6 X 12mm stainless bolts, M6 penny washers and nyloc nuts. The M6 penny washers are fitted on the inside of the Pyramid Hugger to spread the load.
- Fix the other side in the same way using the M6 X 16mm stainless bolts.
- Adjust the Pyramid Hugger before fully tightening the near side nut and fitting bolts.
- Check all fixings periodically.

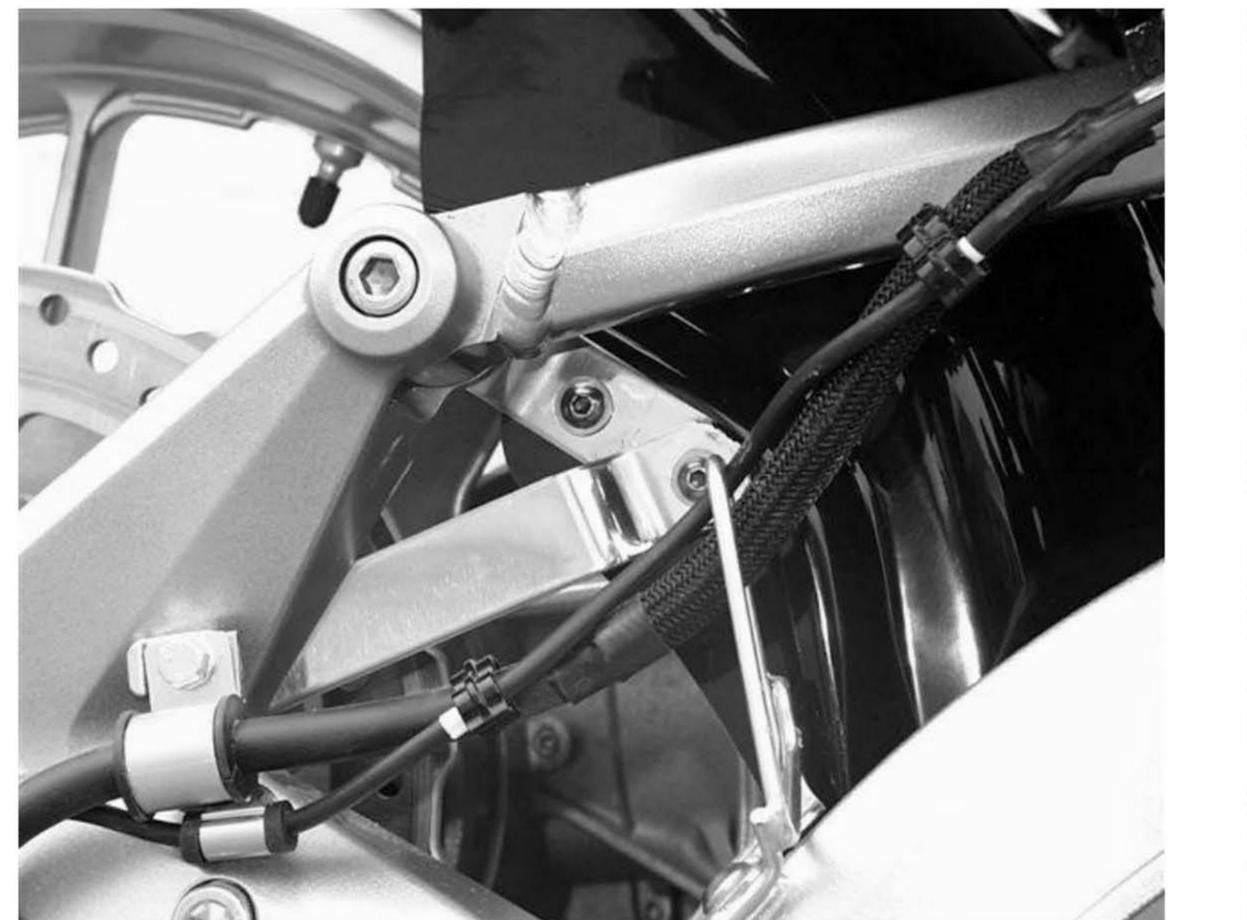



Any questions? sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk



Follow us on social media and

feel free to leave us a review!