

PYRAMID

073900 Kawasaki ZX-6R Hugger Fitting Instructions


Kit Includes:

1X M6 Large Plastic Washer CWASM60004

- Remove the OEM Hugger as shown in the diagram below and fit the Pyramid Hugger using the same three mounting points.
- On the forward mounting point use the M6 Large Plastic Washer supplied in conjunction with the OEM bolt.
- The OEM bracket fits on top of the Pyramid Hugger in the same way as OEM Hugger.

Mounting holes are larger to allow for minor position adjustments once the Pyramid Hugger is in place and loosely tightened down.

Note: We advise that all fixings are checked periodically.

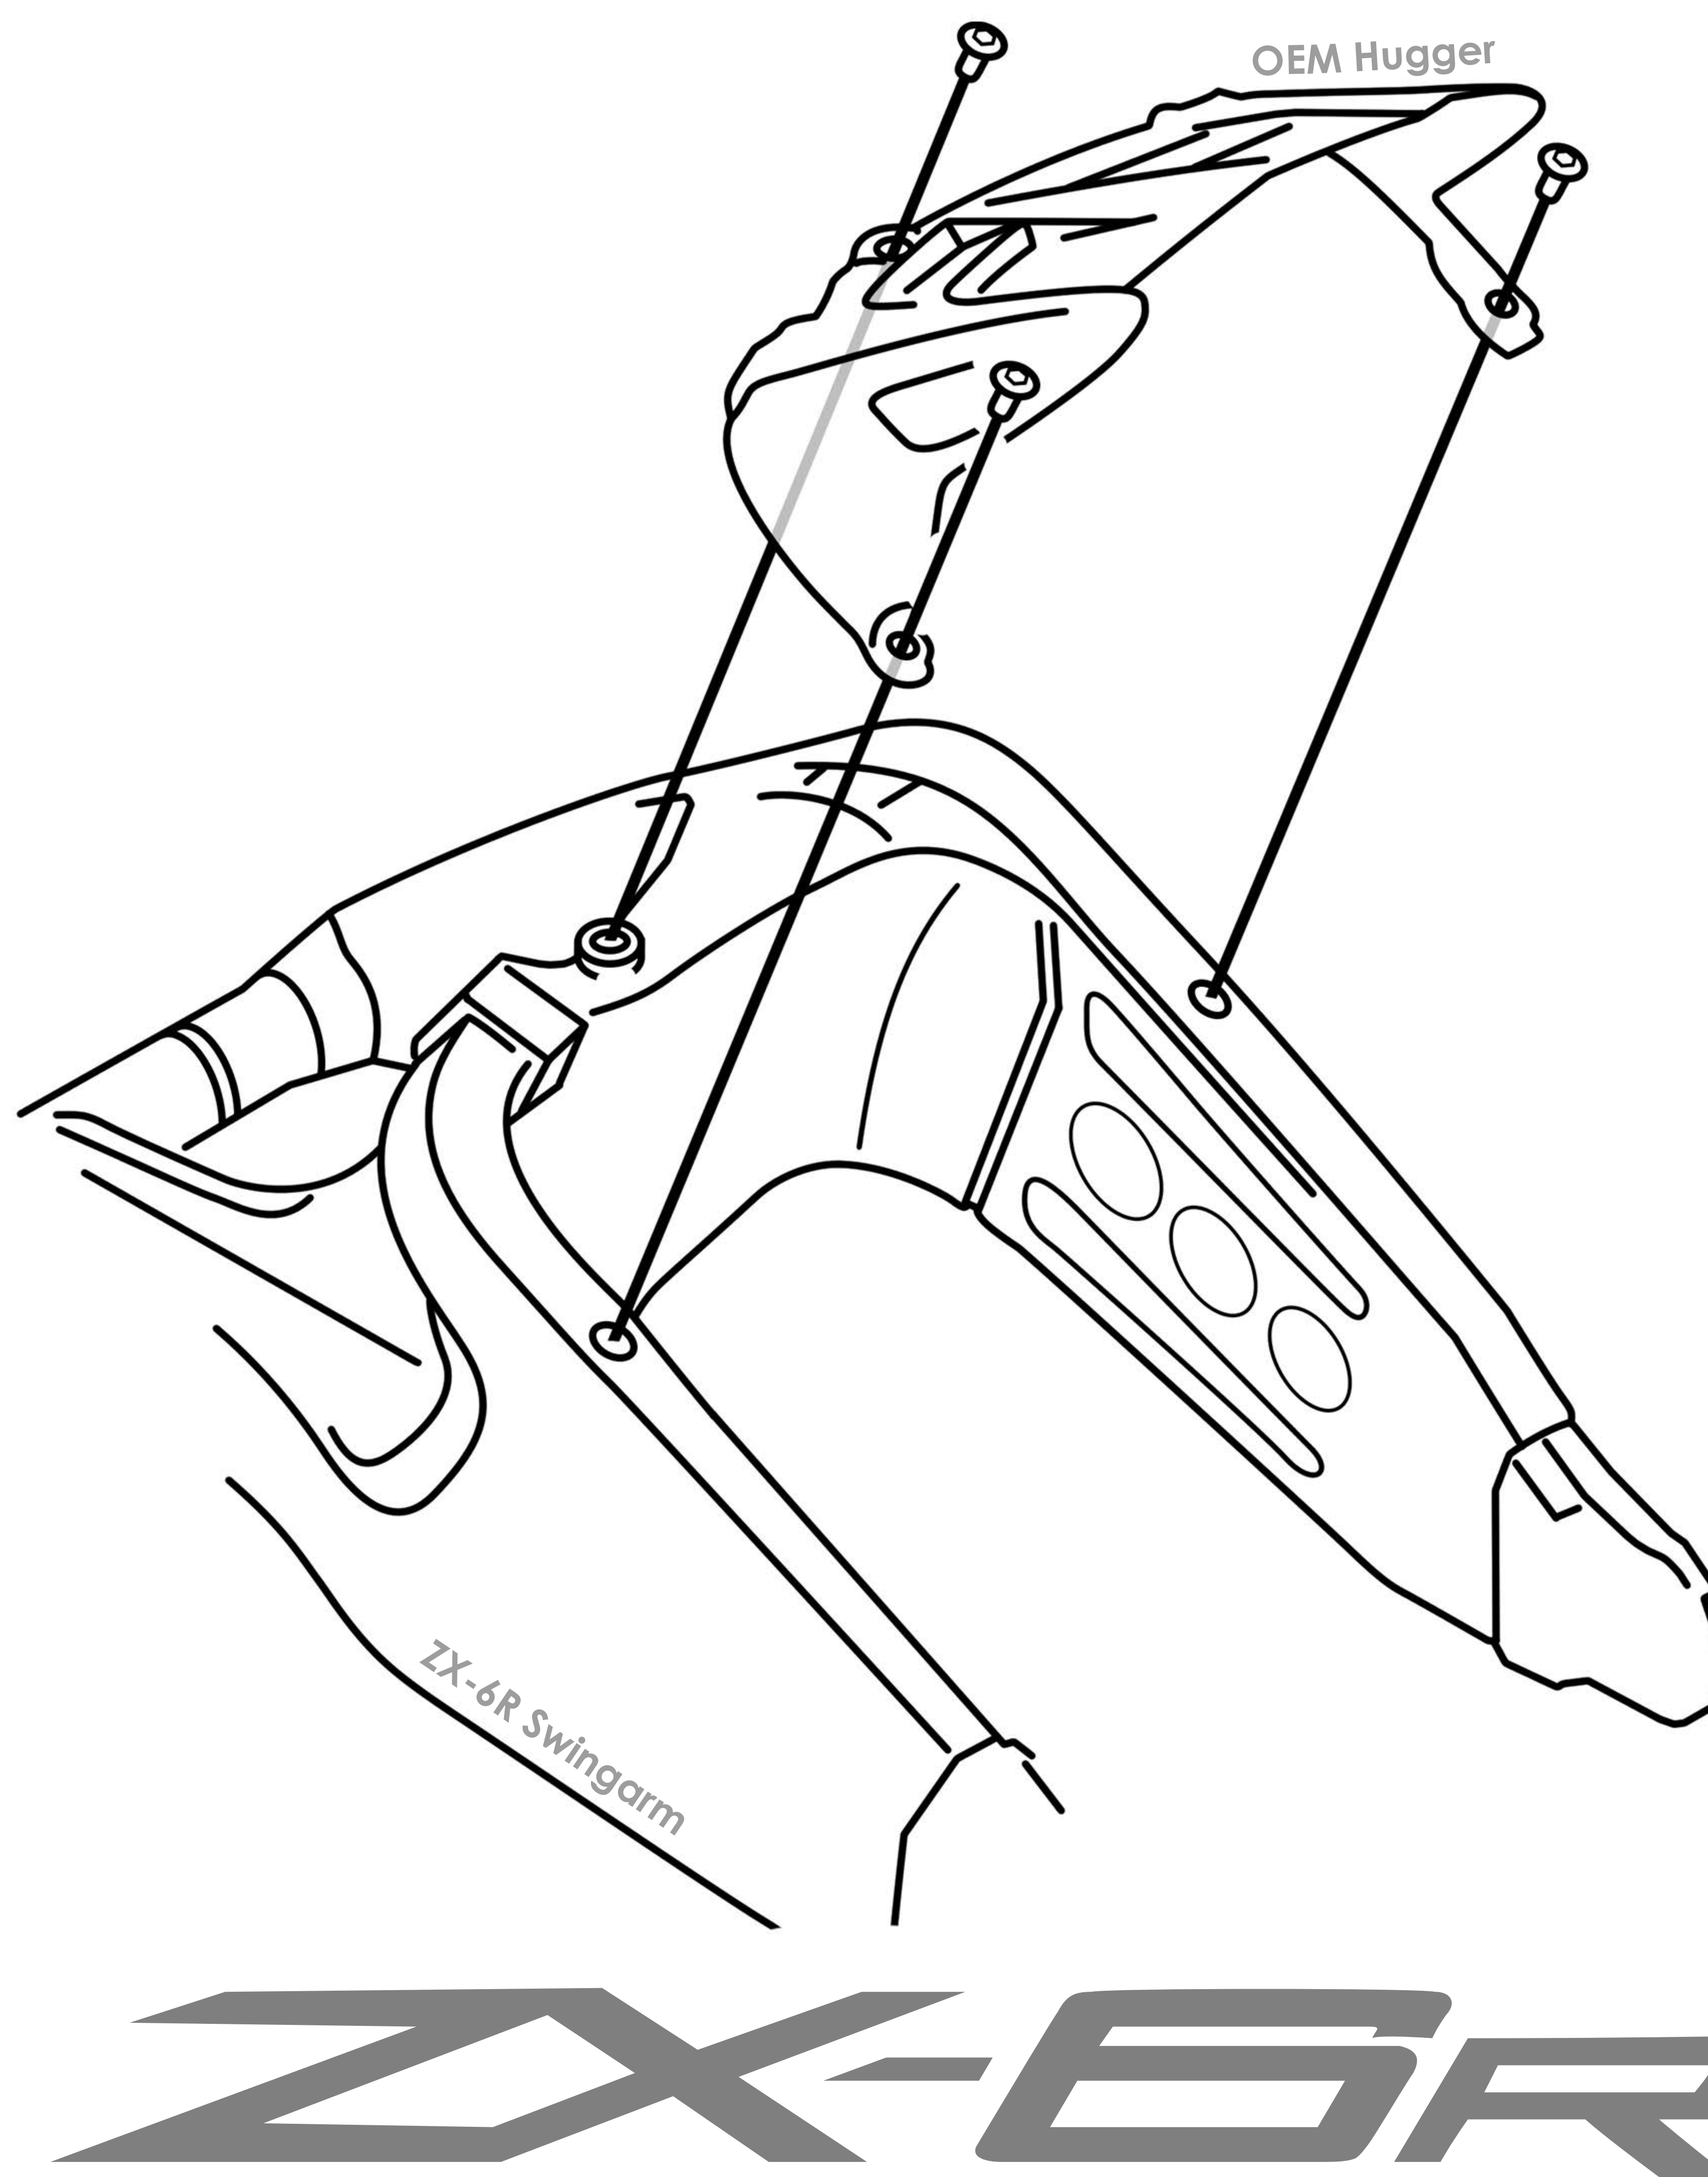

Got questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

