

076944 Triumph Trident 660 Spray Guard-Hugger Extension 2021> Fitting Instructions

Kit Includes:

1.	X1	076944	Trident 660 Extension
2.	X4	CBOLM40004	M4 x 16mm Button-Head Bolt
3.	X8	CWASM40001	M4 Flat Nylon Washer
4.	X4	CNUTM40002	M4 Nyloc Nut
5.	X4	CFOA0001	Foam Pad Strip (4mm Depth)
6.	X4	CFOA0002	Foam Pad Strip (2mm Depth)

Please note: The foam pad strips (Items 5 & 6) should be placed in line with detail shown within these instructions. However, not all are required to be used and should only be fitted should it improve the overall fitment of the 'Spray Guard-Hugger Extension'.

Assembly Instructions

Before commencing with the installation, ensure both mounting areas on the motorbikes spray guard and hugger are clean, using soapy water and drying accordingly. Please ensure that you are aware of which orientation the moulding (Item 1) should be positioned in before beginning the installation process. Use 'FIG. 1' for reference.

- Begin by referencing 'FIG. 3' as to where the fixing holes should be drilled. Use an M4 drill bit to create the fixing locations on the moulding (Item 1).
- Place the moulding into place on the motorbike, between the spray guard and the hugger. A good friction fit will become apparent, however use sticky tape or clamps to secure its position should you deem it necessary. Using a suitable tool for marking (the M4 drill bit will suffice), mark the underside surfaces of both the spray guard and the hugger to aid in the drilling process.
- We recommend removing the spray guard and hugger from the bike before drilling, however they can be drilled whilst remaining on the motorbike if it is appropriate to do so. Once the holes have been drilled, re-assemble all components, including the extension piece, into position.
- Please reference 'FIG. 3' for positioning of the foam pad strips (Items 5 & 6). Apply the foam strips where appropriate, trimming them if necessary. You will not require more foam strips than provided.
- Using the M4 nuts, bolts and washer (Item 2, 3 & 4), fasten the extension guard into place. Please see 'Fig. 2' for reference. Please be careful not to over tighten the fixings.
- Installation of the Triumph Trident 660 Spray Guard Hugger Extension is now complete.



FIG. 1

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!

076944 Triumph Trident 660 Spray Guard-Hugger Extension 2021> Fitting Instructions

The images below will assist with identification and application of the components provided in the fitting kit.

FIG. 2




FIG. 3

Try to keep the holes as central as possible on the fixing tabs. Reference 'FIG. 3' for assistance.

The images in 'FIG. 3' reference the foam pad strip (Items 5 & 6) placement.

The areas highlighted in green mark the correct positioning. Areas highlighted in red are to be avoided, as these are radius' and will hinder the fitting quality.

The top 2 images should use the thin foam pad strips (Item 6) and the bottom two images using only Item 5. Trimming to size may be required.

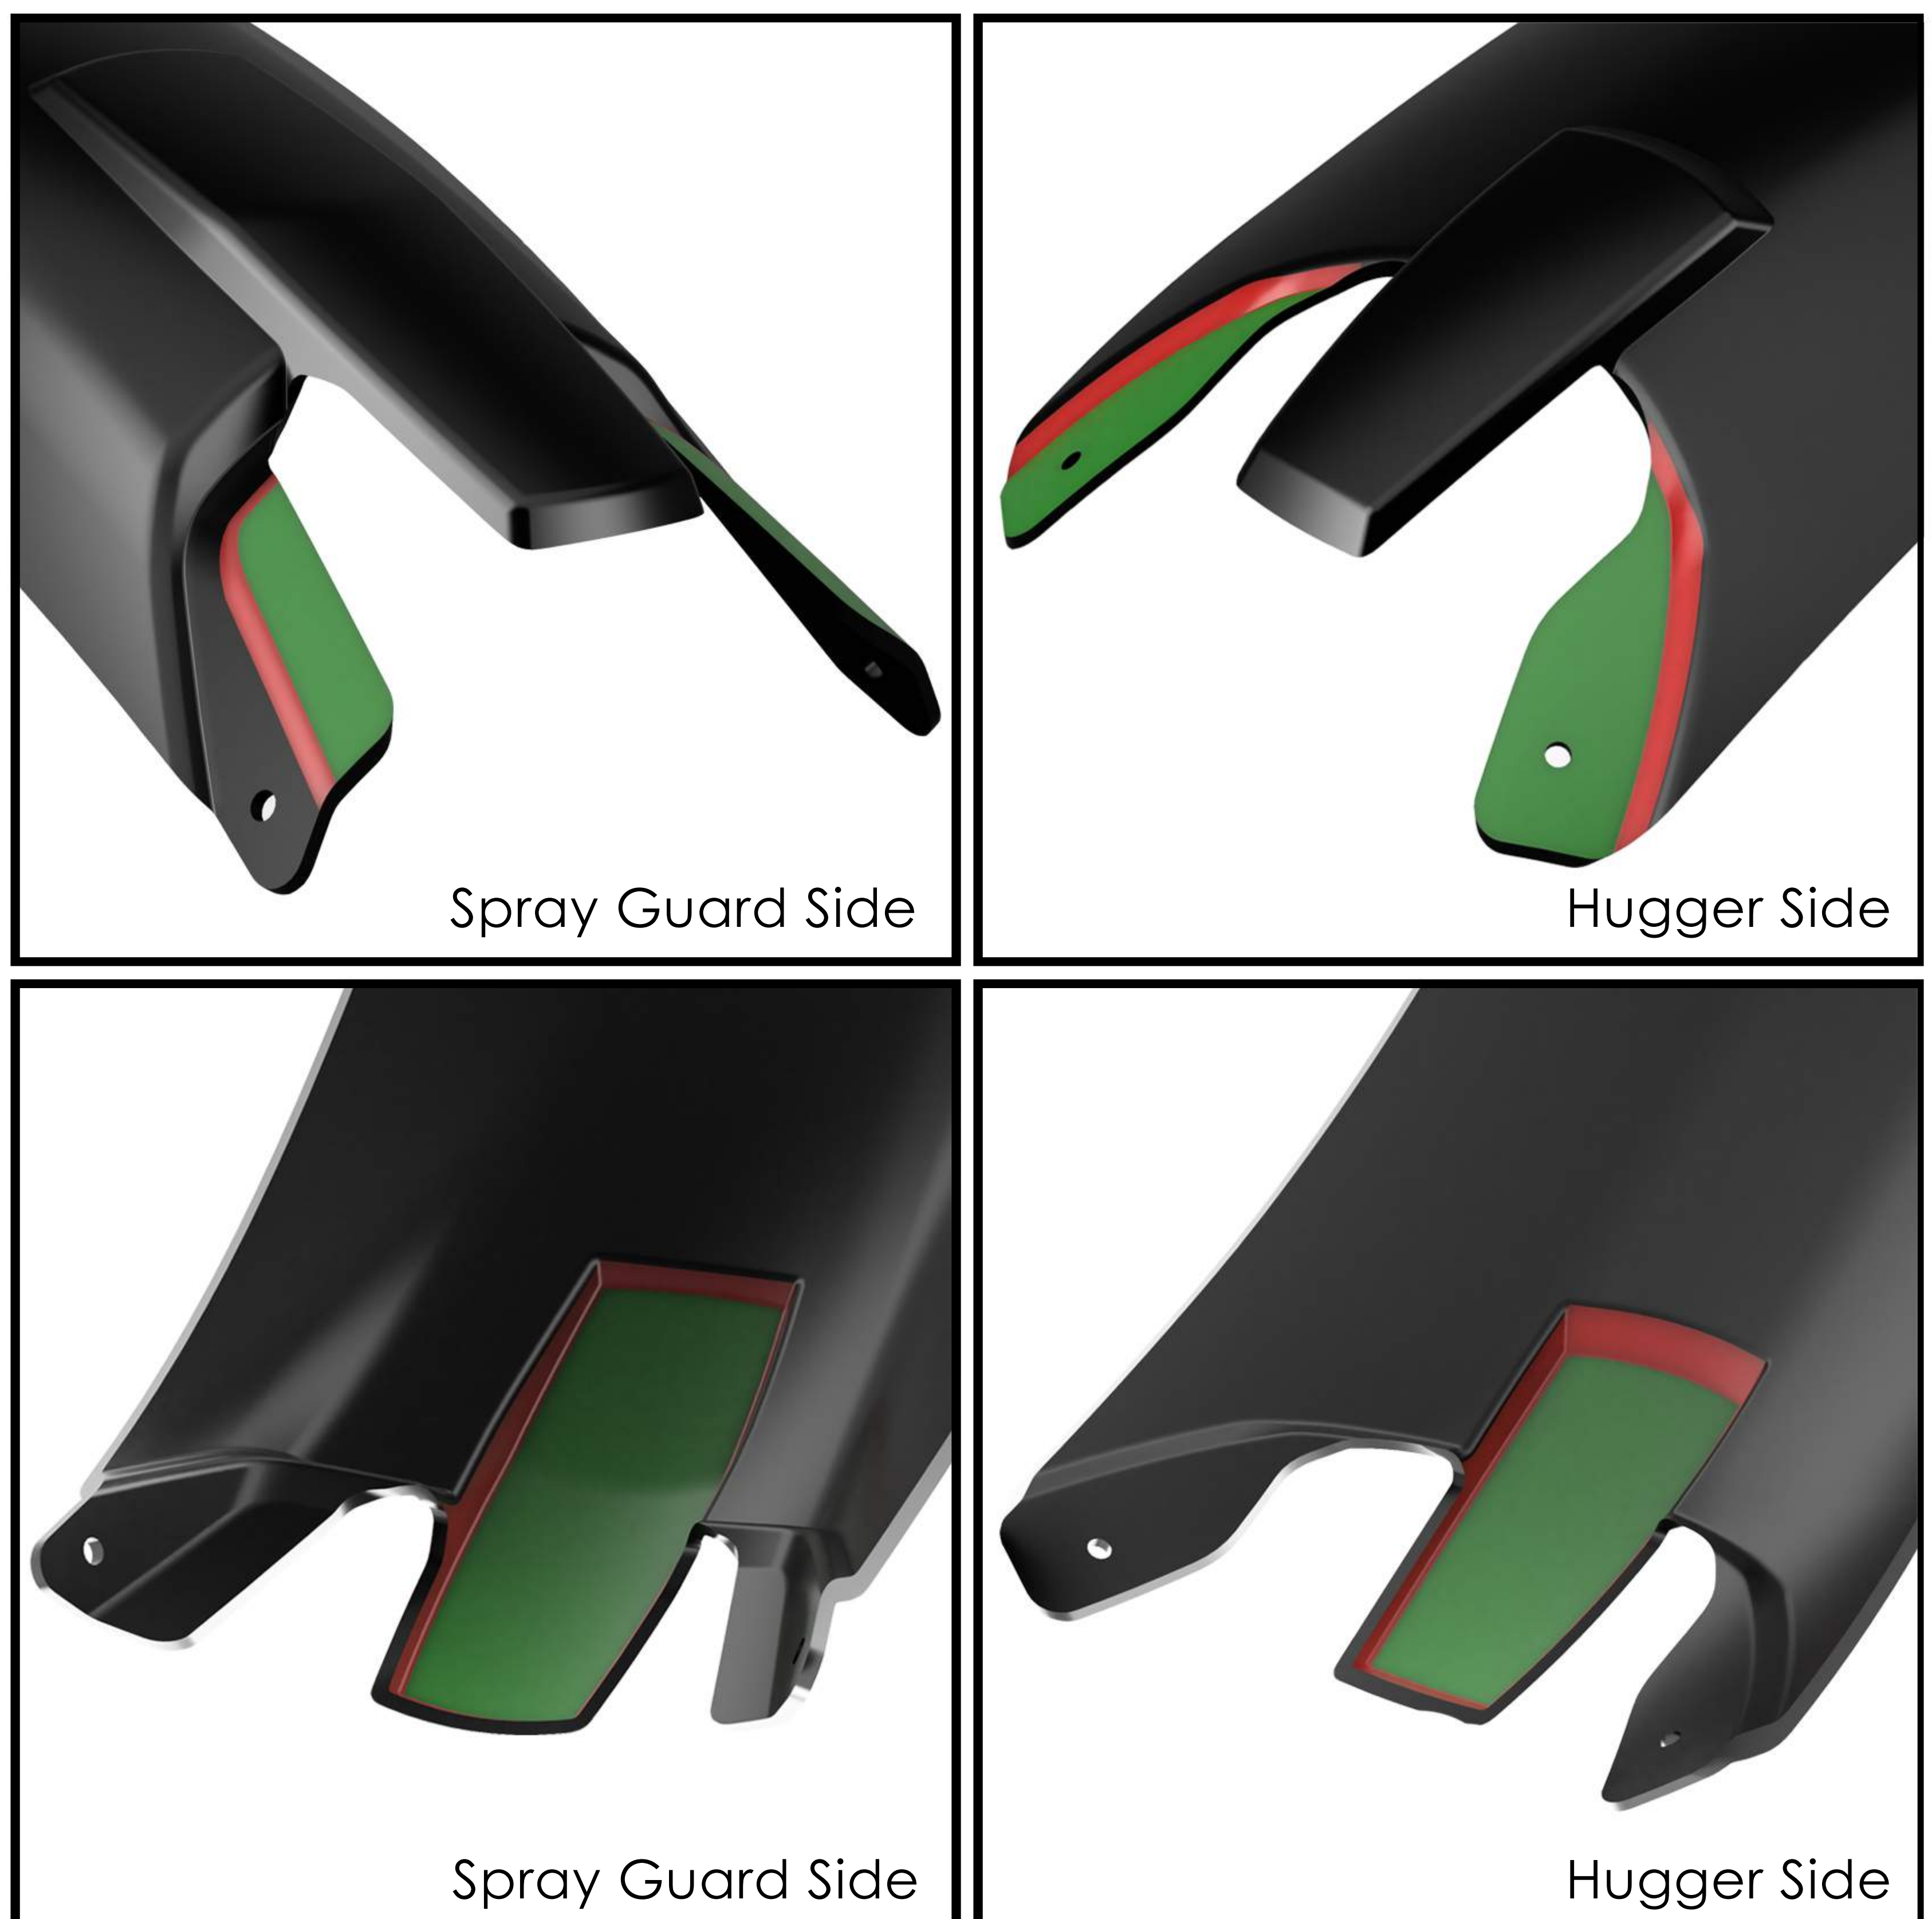

Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!