



079750 Royal Enfield Himalayan Hugger Fitting Instructions

Kit includes:

2X	M6 x 12mm Flanged Button Head Bolts	CBOLM60007
2X	M6 x 20mm Button Head Bolts	CBOLM60010
2X	Rubber Grommets	CGROM60001
2X	Steel Collars	CSPAM60004
2X	M6 Black Plastic Washers	CWASM60003


Note: the 2022 models do not have a forward mounting hole on the right-hand side of the swingarm (non-chainguard side). See the red asterisk * below.

The hugger can still be fitted and works as intended regardless of this.

- Remove the chainguard and unclip the brake hose line from the forward two supports. The bolts holding the two brake hose supports are to be replaced (see diagram below).
- Fit the **2X CGROM60001** & **2X CGROM60004** to the right-hand side of the Hugger.
- Now feed the Pyramid Hugger over the rear tyre and into fitting position. For fixing points **A & B** use **2X CBOLM60010**, **2X CGROM60001** & **2X CSPAM60004** & for fixing points **C & D** use **2X CBOLM60007** & **2X CWASM60003**.

Note: The ABS supports are to be refitted on top of the Pyramid Hugger at fixing points **A & B** using the new fixings supplied. It is easier to tighten all bolts loosely before fully tightening for a final fit.

- Be sure to check all fixings periodically.

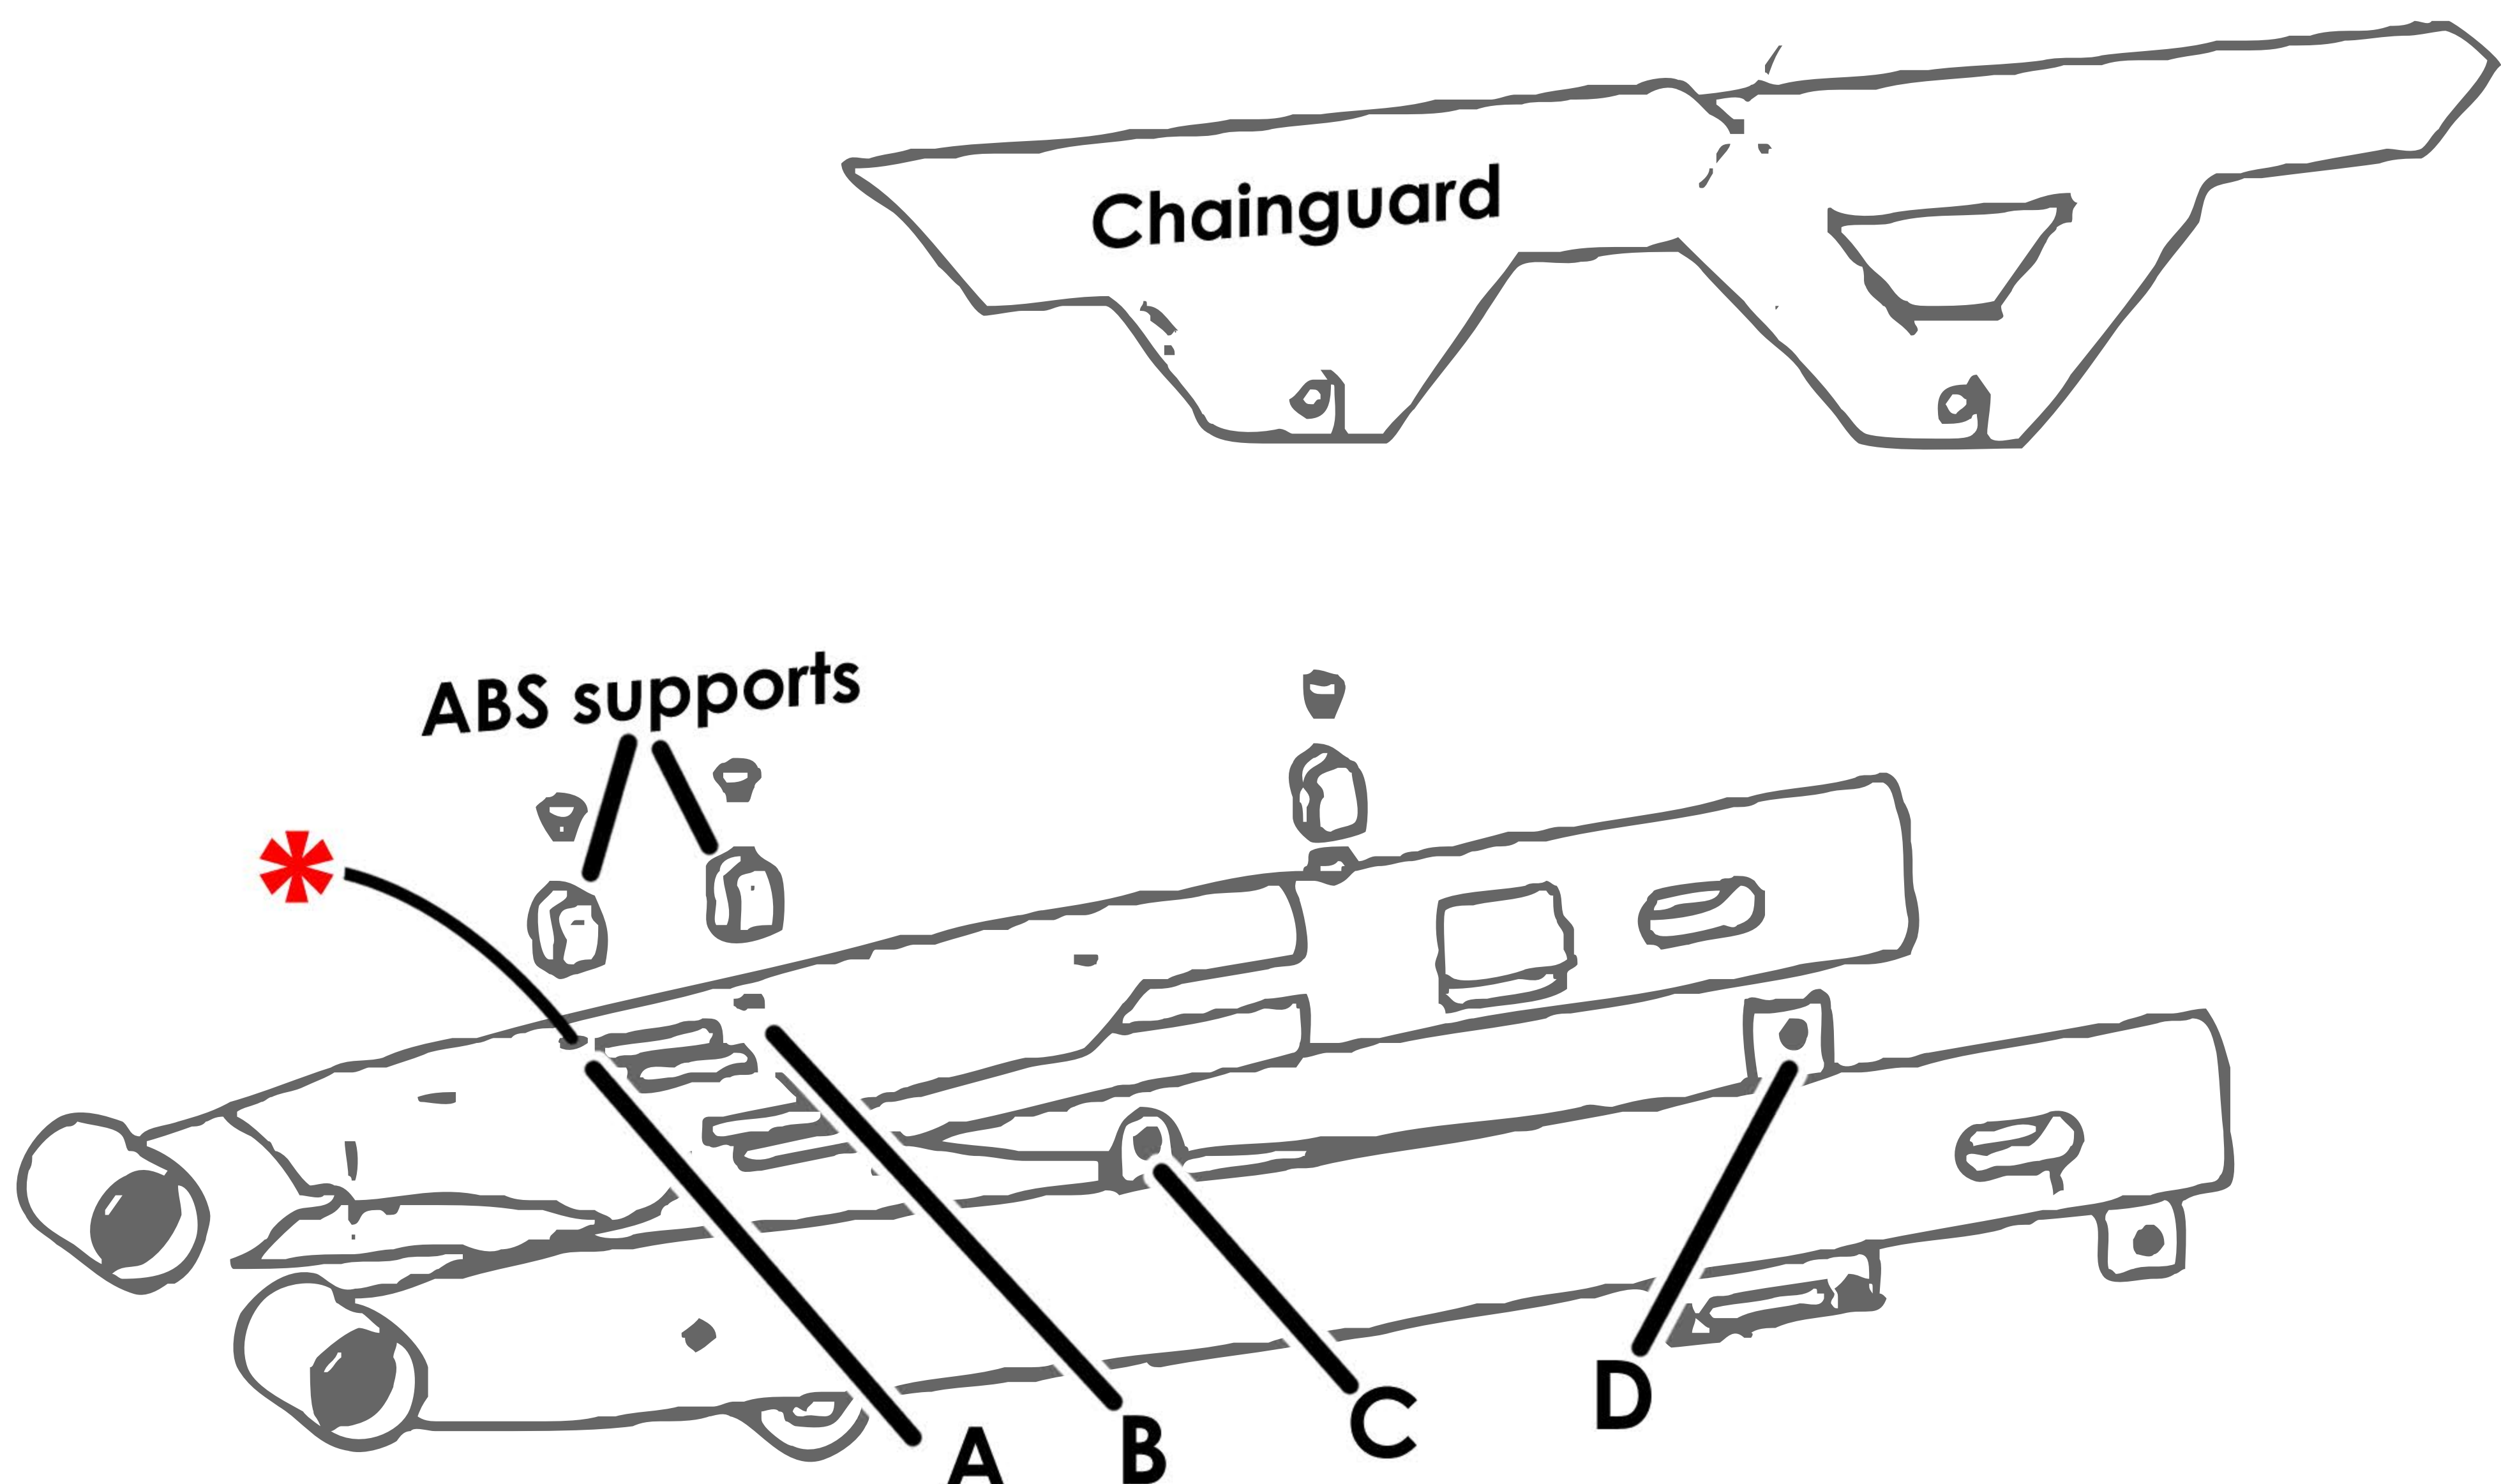

Any questions?
sales@pyramid-plastics.co.uk
01427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!



PDF instructions

