



08024 Honda CRF1000L Africa Twin Wind Deflector Fitting Instructions


Kit Includes:

● 2X M5 X 20 _{mm} Bolt	CBOLM50009
▲ 2X M6 X 25 _{mm} Bolt	CBOLM60011
■ 4X M6 Spacer	CSPAM60009
◆ 2X M6 X 12 _{mm} Steel Collar	CSPAM60005

- Remove the OEM bolts from the places shown below (see diagram).

Please note: the part will flex slightly when fully tightened at the forward mounting points - this isn't an issue and will not damaged the product.

Disclaimer: This material is not petrol resistant and will discolour if petrol comes into contact with the product.

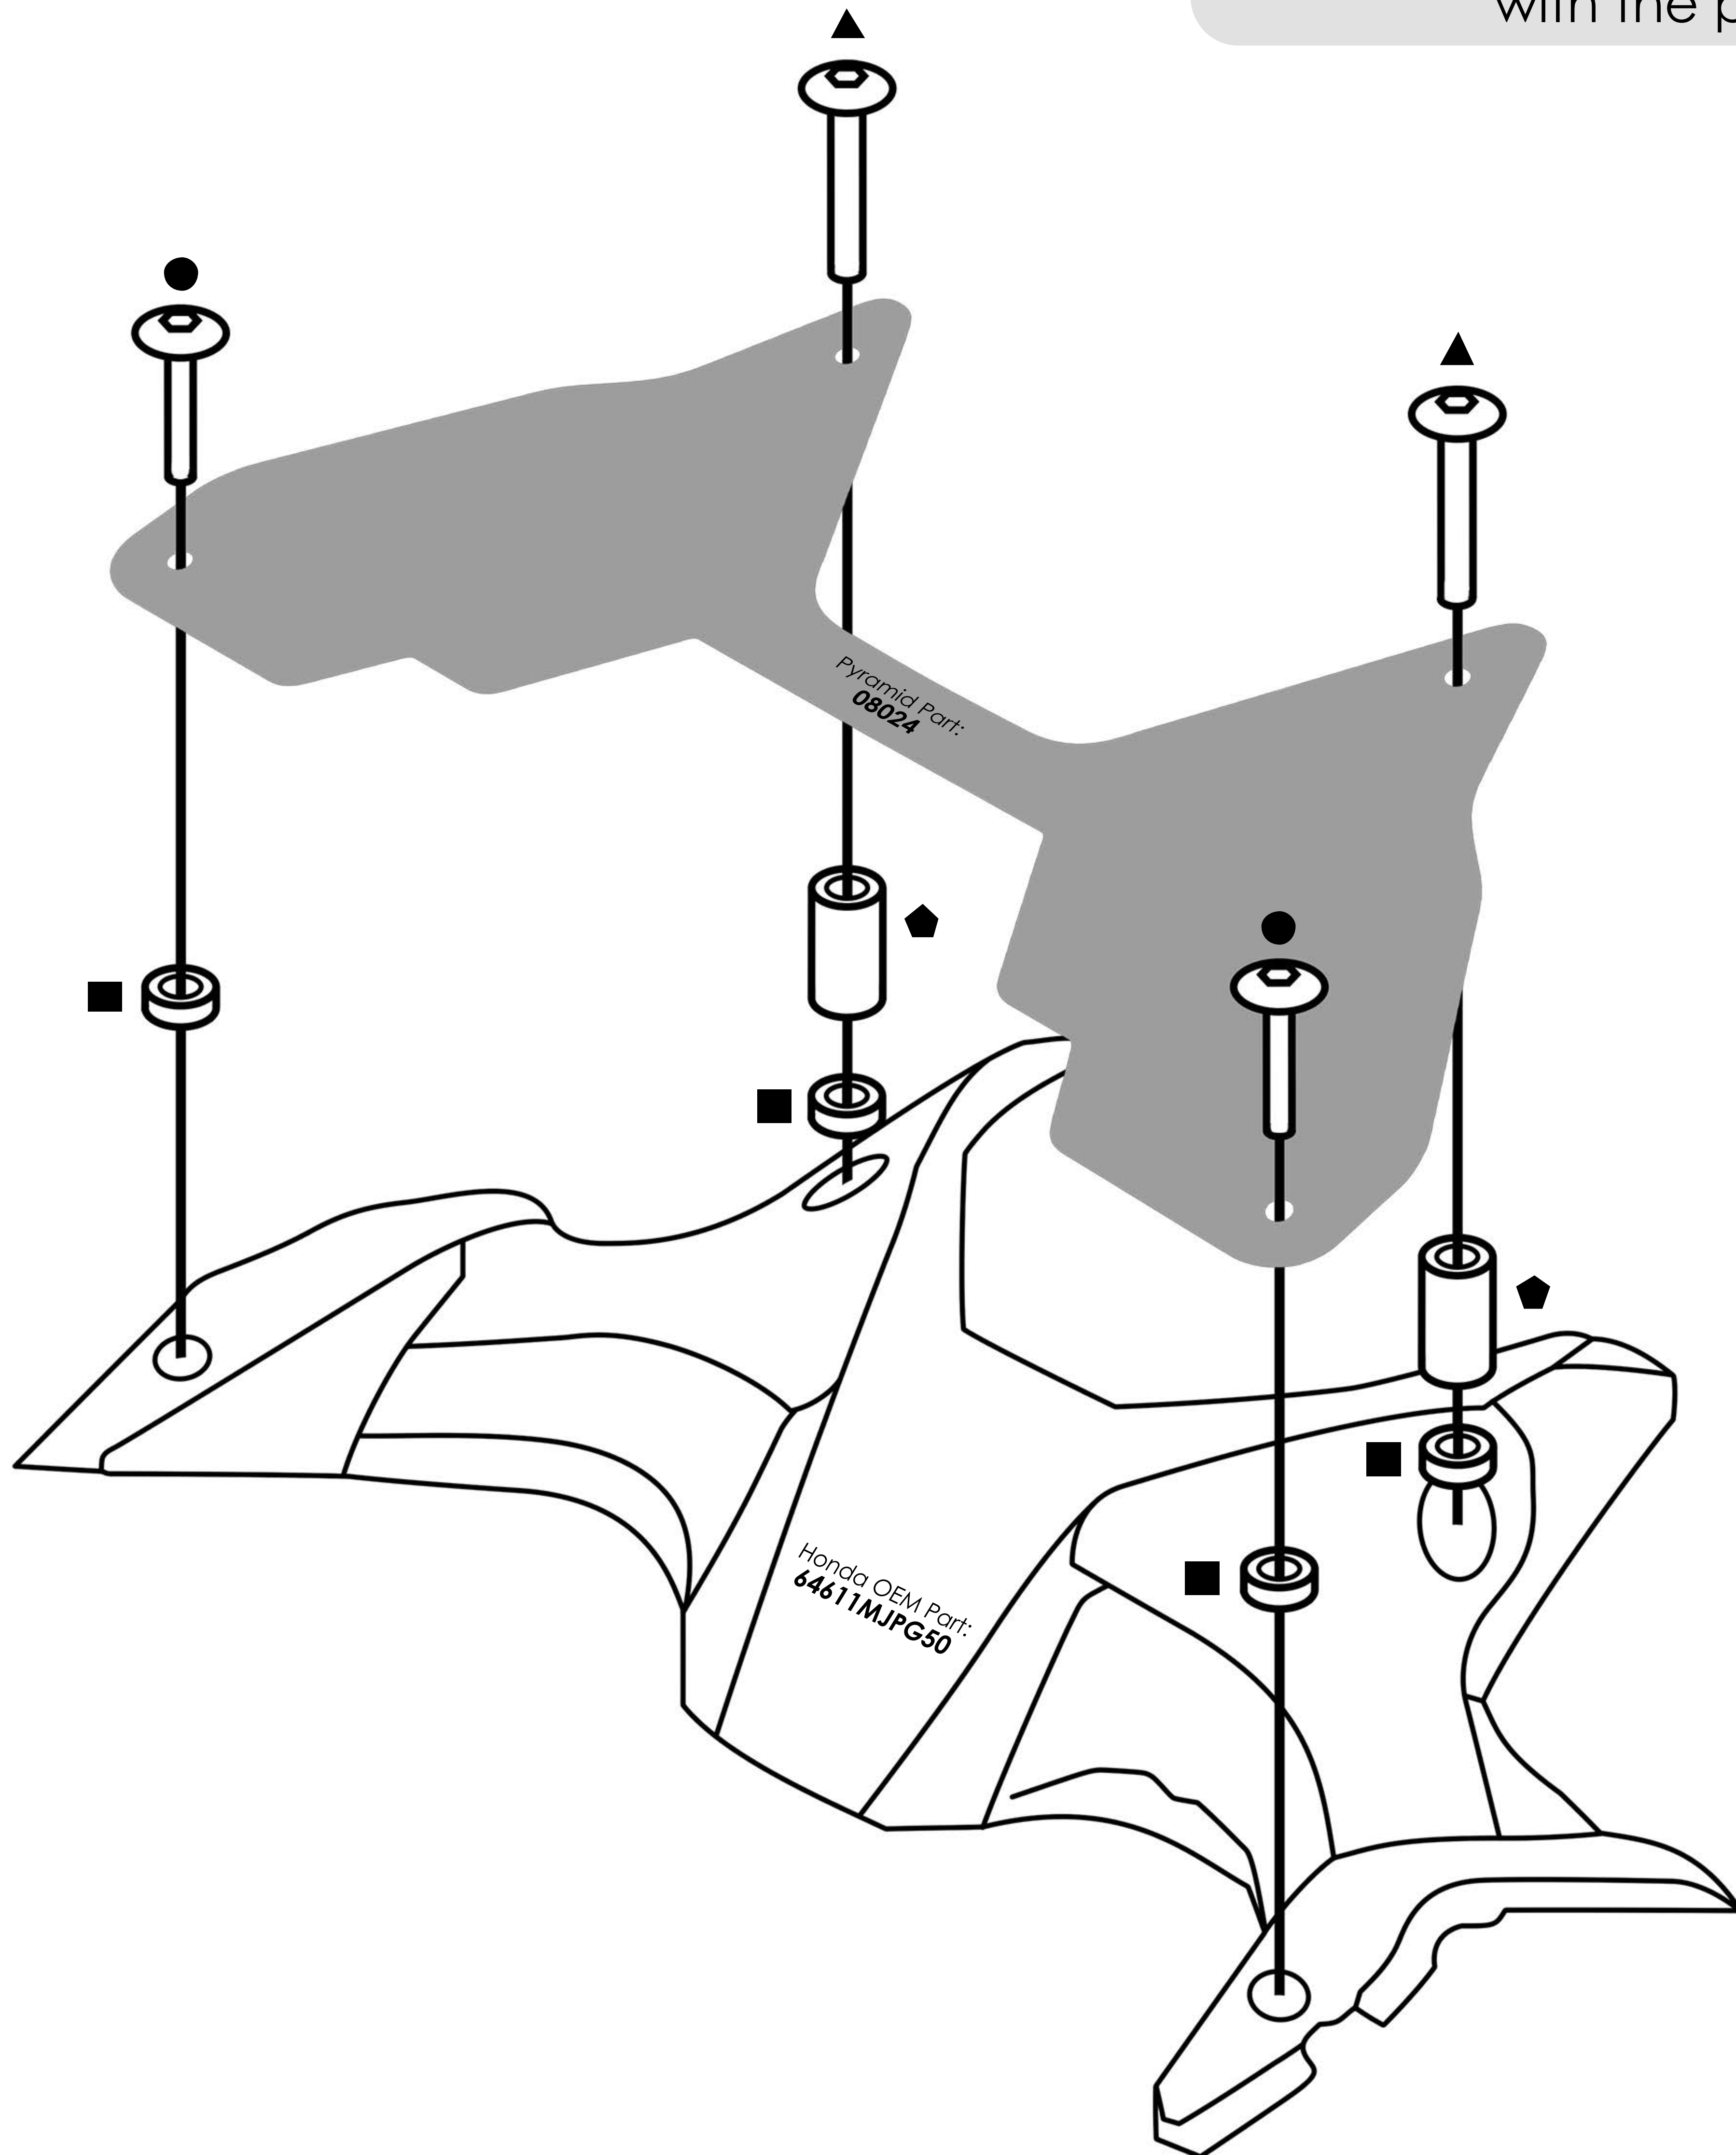

Contact us:
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

