



**08028** Honda CRF1100L Africa Twin Adventure Sports Wind Deflector Fitting Instructions


Kit Includes:

1X	Wind Deflector	C08028
2X	M6 X 20mm Bolt	CBOLM60009
2X	M5 X 25mm Bolt	CBOLM50010
2X	Large Spacer	CSPAM60011
2X	Small Spacer	CSPAM60009
2X	M5 Washer	CWASM50001
2X	M6 Washer	CWASM60003

- Remove the OEM bolts from the places shown below (see diagram).  
Re-fit using the same mounting points with the fittings provided.

Please note: the part will flex when fully tightend. This will not damage the product.

**Disclaimer:** This material is not petrol resistant and will discolour if petrol comes into contact with the product.

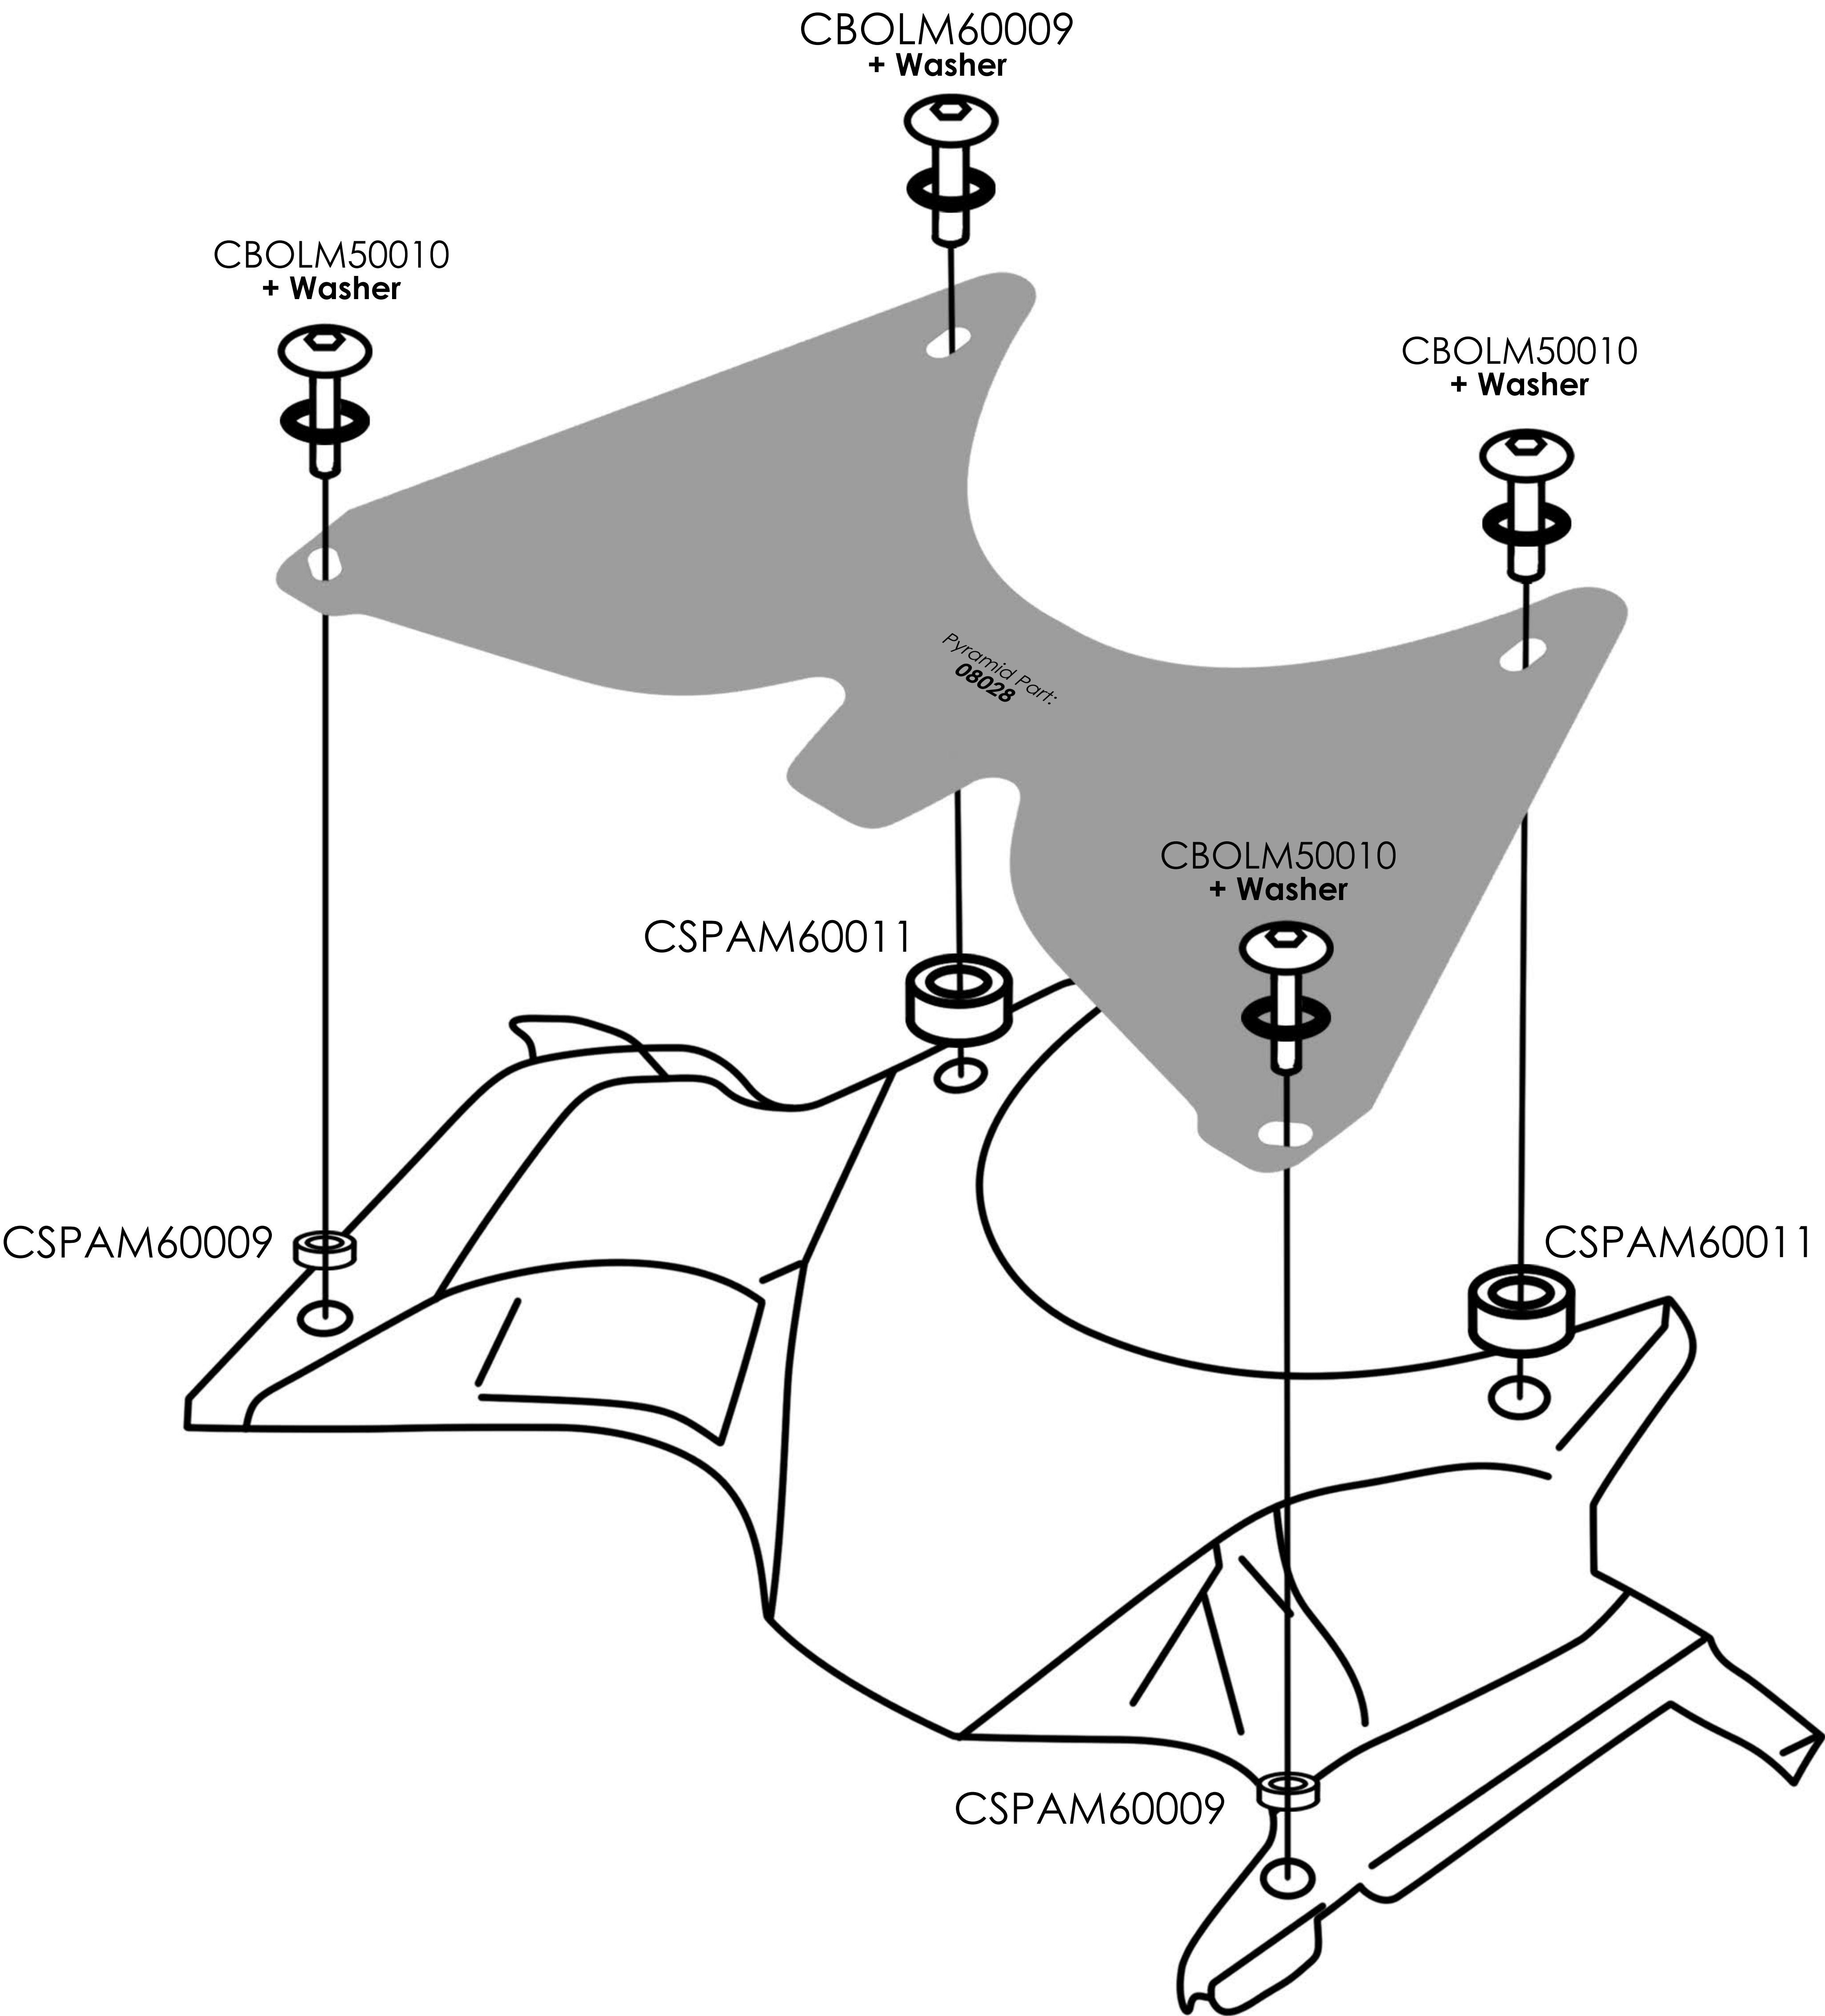

Contact us:  
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

