

08035 Honda NT-1100 Wind Deflector 2022> Fitting Instructions

Kit Includes:

1.	X1	08035	NT-1100 Wind Deflector
2.	X2	CBOLM50001	M5 x 30mm Flanged-Button Bolt
3.	X2	CSPAM60014	M6 x 10mm Black Nylon Spacer
4.	X2	CWASM60004	M6 Black Penny Washer
5.	X2	CCAP0003	M5 Bolt Cap

Please note: The M5 bolt caps are not essential to the fitment of the Pyramid Wind Deflector but we believe they greatly enhance the cosmetic appearance of the part.

Assembly Instructions

The Pyramid Wind Deflector is to be fitted using the 2 fixing areas located at the top of the tank and above the upper fairings of the motorcycle.

- Begin by removing the existing M5 bolts located on either side of the motorcycle, as highlighted in 'FIG. 2'. The Pyramid logo will help with the orientation!
- Proceed by orientating the Wind Deflector (Item 1) in the position shown in 'FIG. 3'. Place 1 x M6 washer (Item 4) and 1 x M6 spacer (Item 3) on each side of the Wind Deflector, both in the orientation illustrated in 'FIG. 3'.
- Continue by threading 1 x M5x30mm bolt (Item 2) through the designated mounting locations on each side of the motorcycle. Tighten both bolts until sufficient resistance is met. Please ensure these bolts are not overtightened to avoid deforming the Wind Deflector.
- Complete the installation by inserting 1 x M5 bolt cap (Item 5) over both bolt heads to maintain the all black finish. The Wind Deflector has now been fully fitted, as shown in 'FIG. 1'.

Please Note: We advise that all fixings are checked periodically.

FIG. 1



FIG. 2


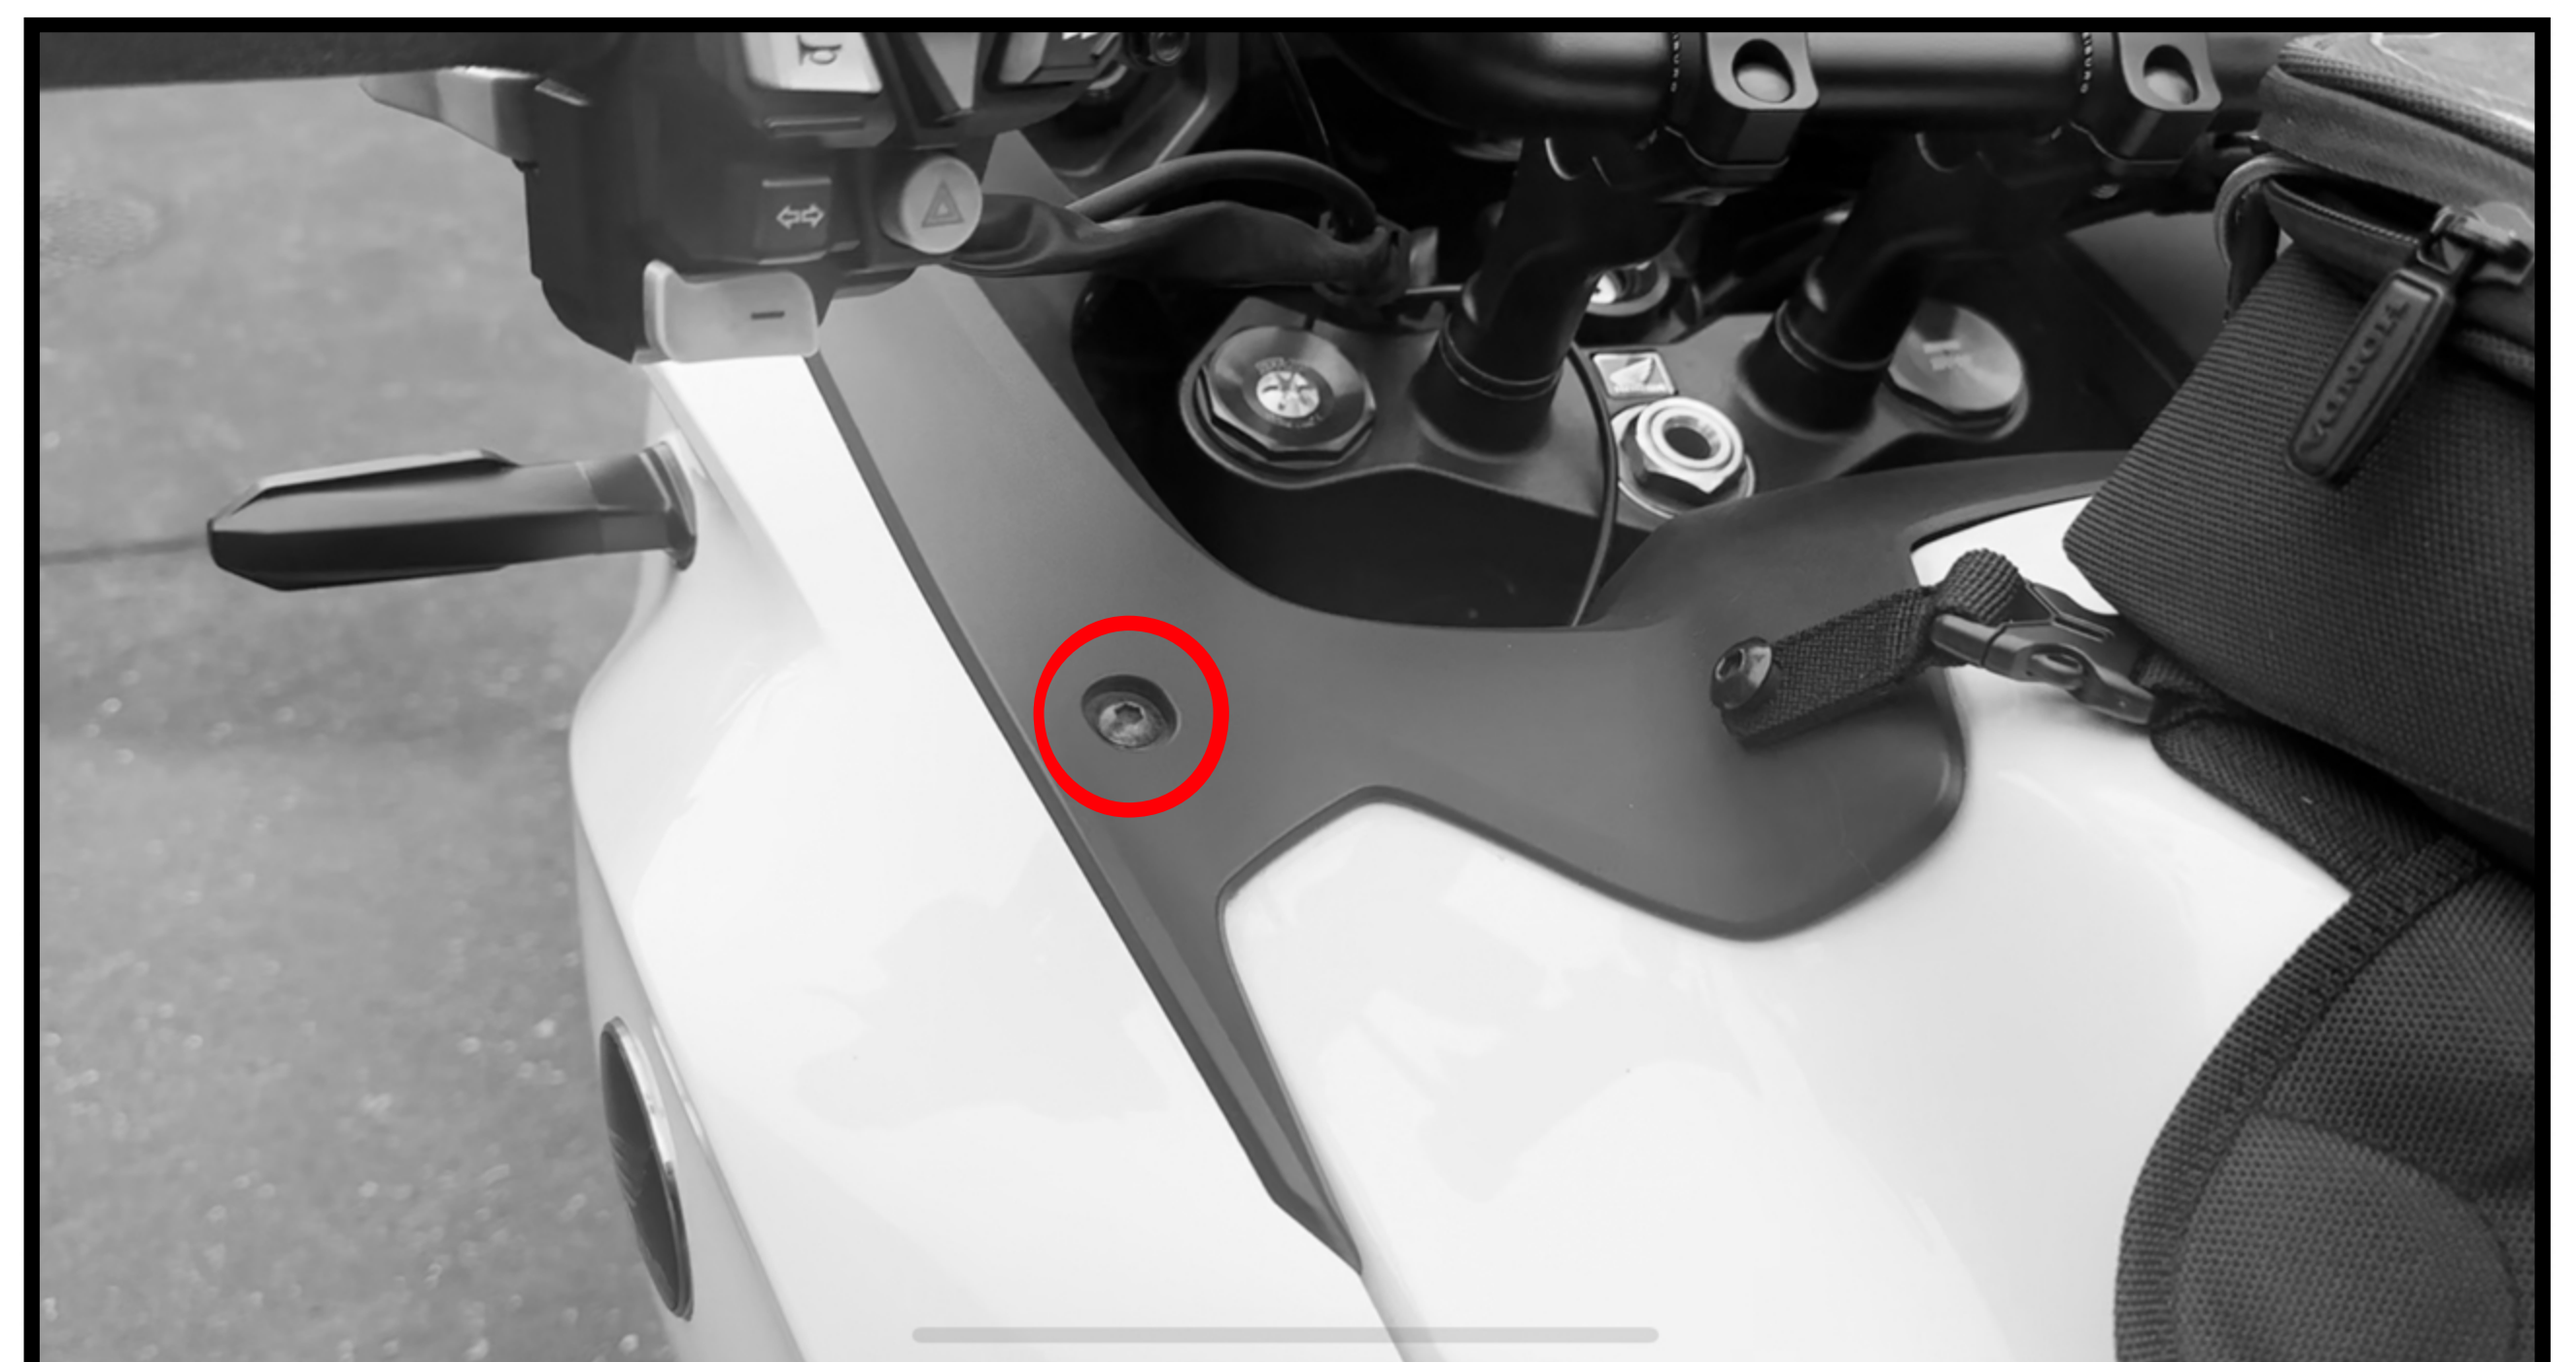


FIG. 3



Any questions?
sales@pyramidmoto.co.uk
 +44 (0)1427 677990
www.pyramidmoto.co.uk

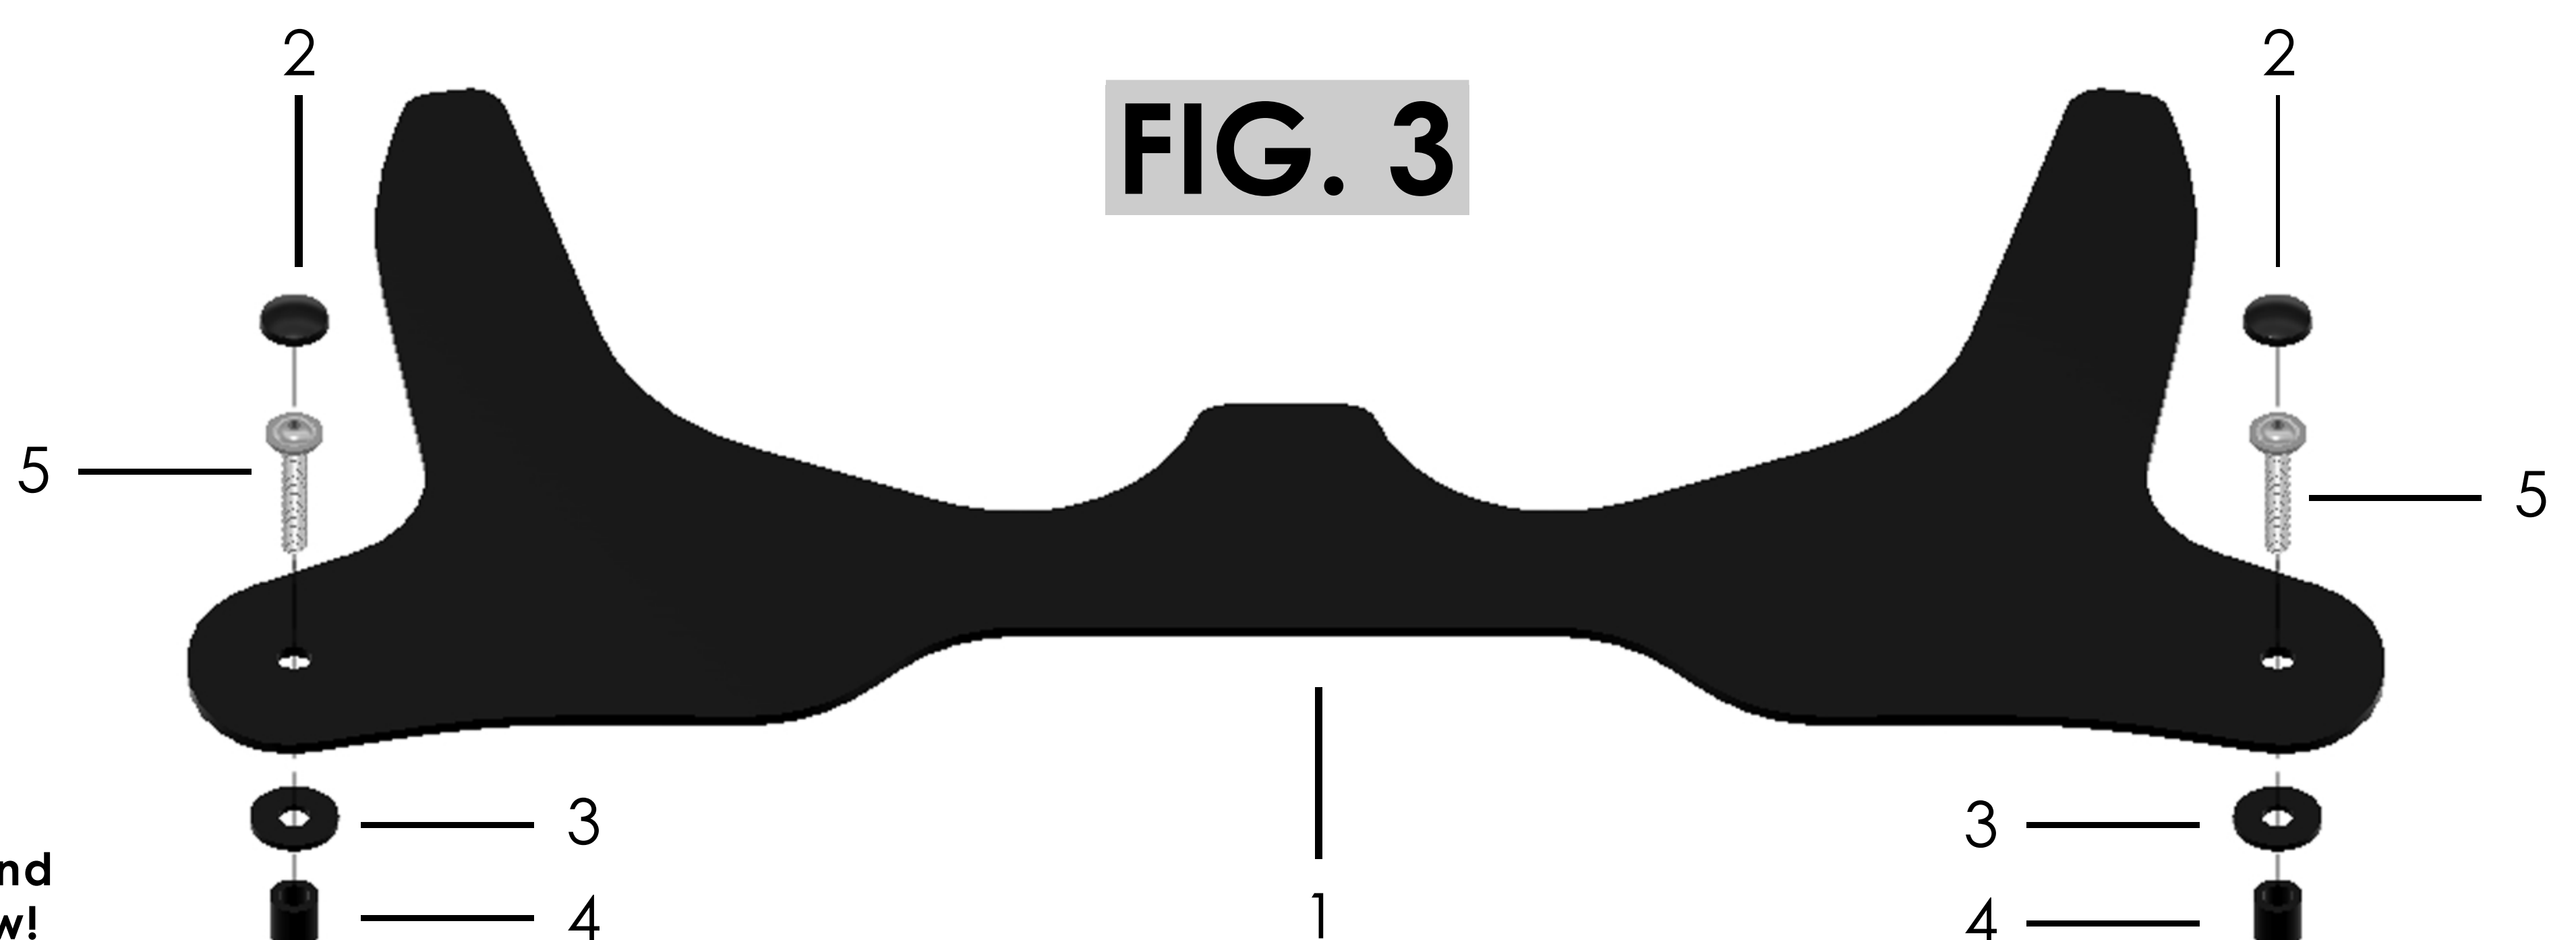

Follow us on social media and feel free to leave us a review!