


Twin Headlight Screen Kit

Fitting Instructions Part # 08451

Fitting kit contents

- 1 x M6x20 Bolt – CBOLM60020
- 1 x M6 'Nyloc' Nut – CNUTM60003
- 1 x Bracket – CFK08450
- 2 x Penny Washers – CWASM60008
- 1 x Screen Assembly – C08451#

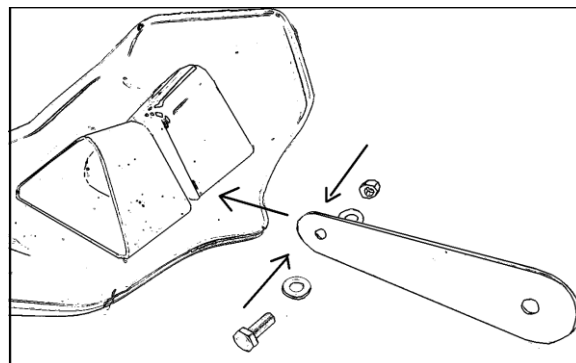

1. Turn your twin headlight unit over and unscrew the two screws which hold the lenses on.

2. Remove both lenses pulling the wiring through with them.

3. Un-fasten the nut holding the two light cases together and remove the washer between them. Insert the bracket in between the light cases and bolt the whole assembly together using the original nut and bolt.

4. Finally attach the screen to the bracket with the 'Nyloc' nut washers and bolt provided. Before tightening securely ensure the screen is adjusted to your required angle.

