

PYRAMID



085104 Honda NX 500 & CB500X Spray Guard Fitting Instructions

Kit Includes:

1X Fibreglass Guard	C085200
1X Bracket (2 parts)	CFK085202
2X M8 x 25mm Bolt	CBOLM80010
2X M8 Nyloc Nut	CNUTM80003
2X M8 Washer	CWASM80004

Pre-assembled

Note: You are advised NEVER to attach additional items ANYWHERE on this guard – such as mounting plates, indicators, lights, licence plates, crash protectors, etc as this will invalidate the warranty.



The assembled spray guard is ready to install without the need for adjustment. Remove the spindle nut, washer and adjustment block from the right-hand side of the bike.

Fit the spray guard where the original adjustment block was previously situated. Please note that you will need to reuse the original nut + washer in conjunction with the spray guard bracket. **See below.**

Chain adjustment should allow 15-20mm of slack at the centre of the bottom chain run.

The two screw adjusters left and right, should have equal lengths of exposed threads. **See red circle in picture below.**

Finally torque the wheel nut to the correct value of **88Nm**.

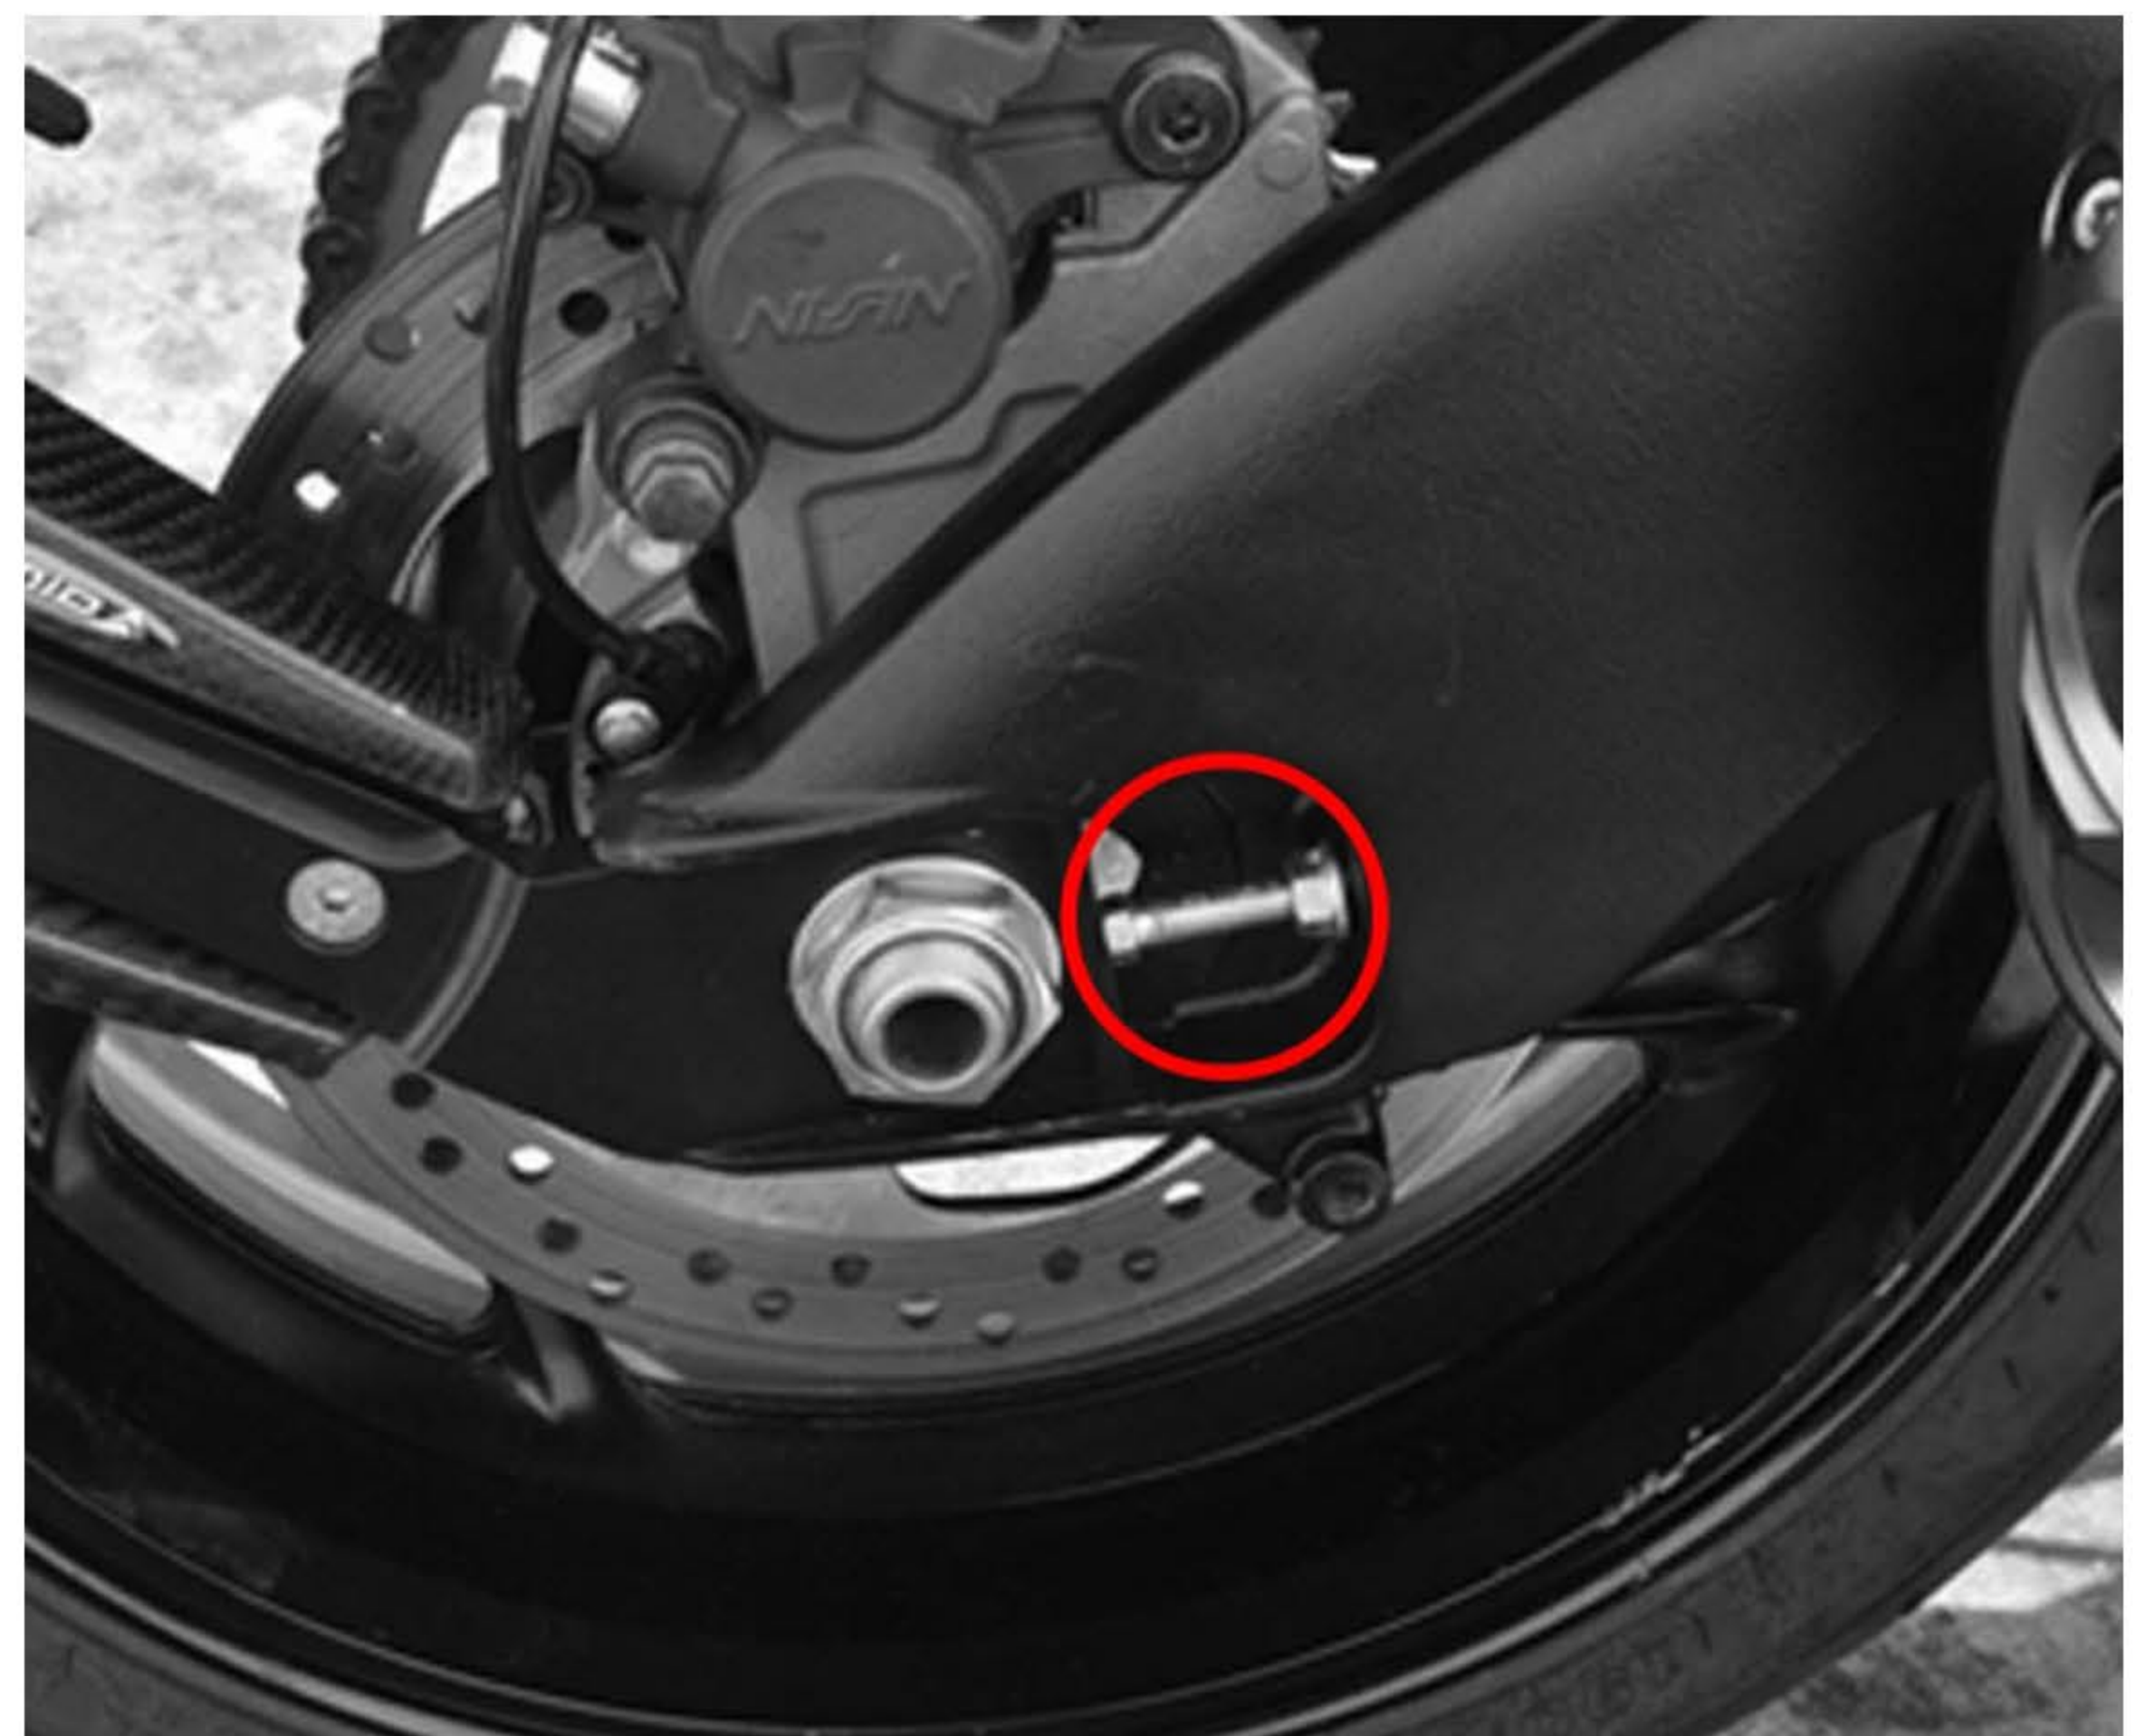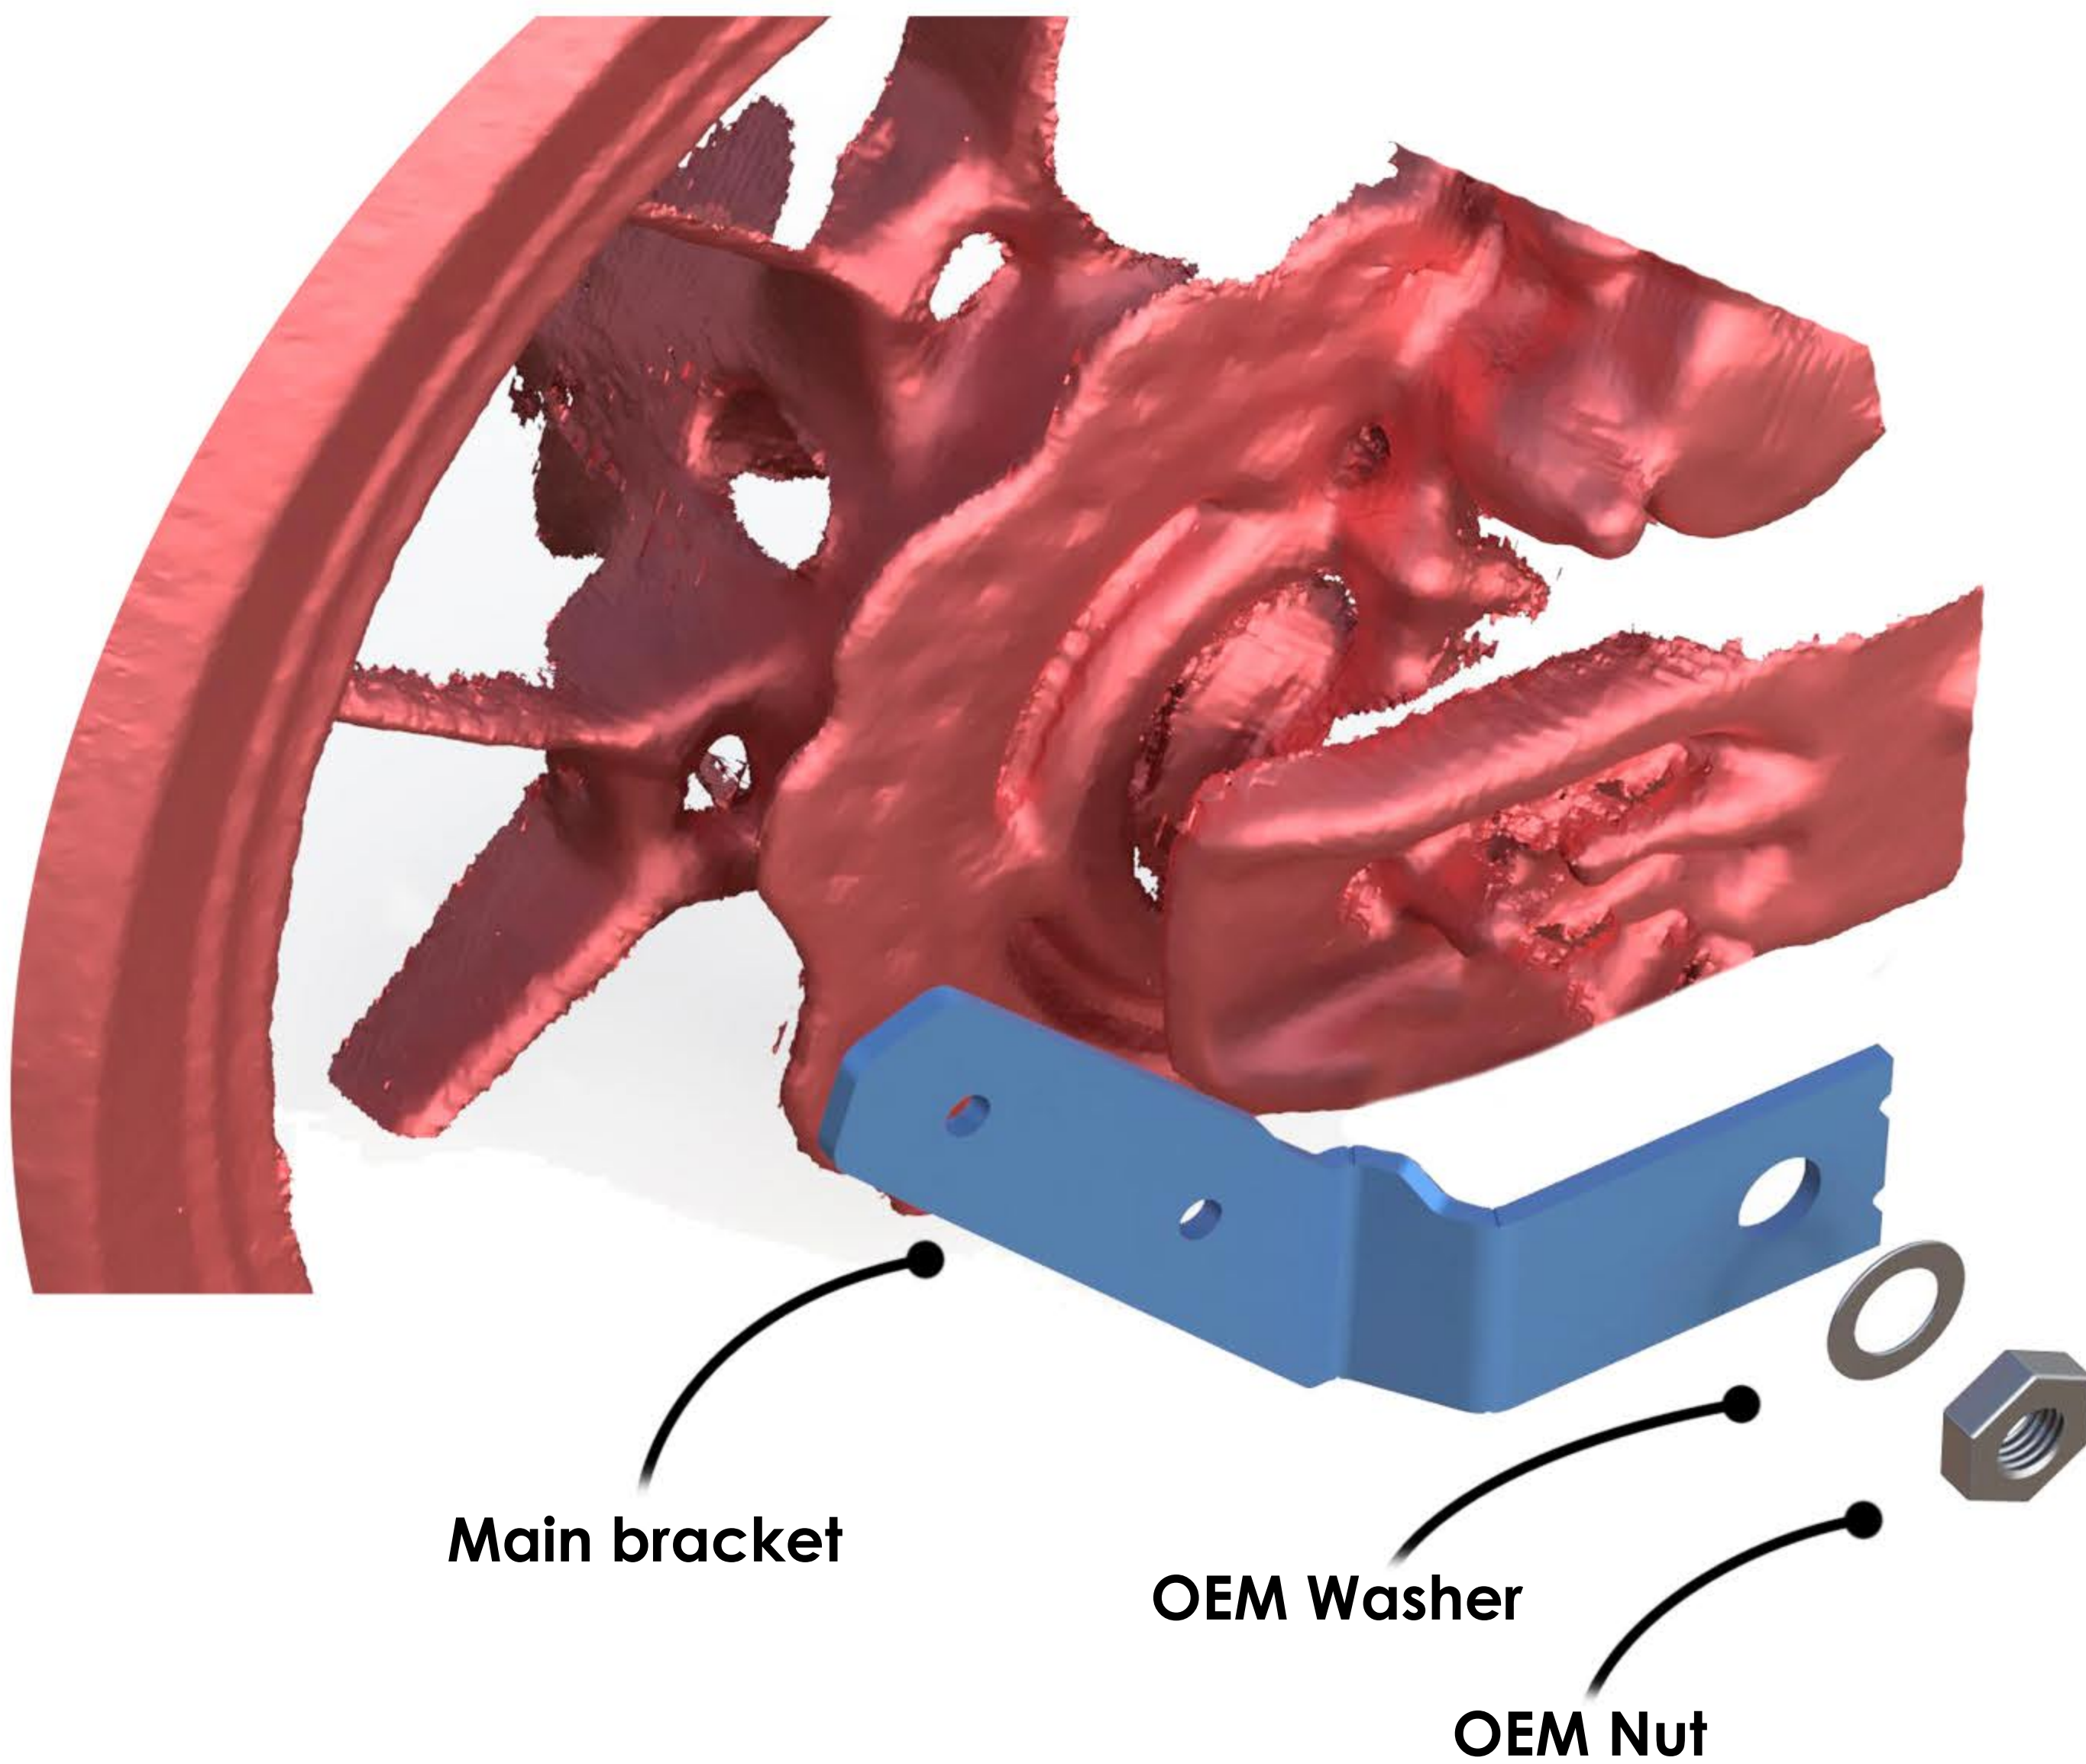

sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!