

# PYRAMID



## 085104 Honda NX 500 & CB500X Spray Guard Fitting Instructions

### Kit Includes:

1X Fibreglass Guard	C085200
1X Bracket	CFK085202
2X M8 x 25mm Bolt	CBOLM80010
2X M8 Nyloc Nut	CNUTM80003
2X M8 Washer	CWASM80004

**Pre-assembled**

**Note: You are advised NEVER to attach additional items ANYWHERE on this guard – such as mounting plates, indicators, lights, licence plates, crash protectors, etc as this will invalidate the warranty.**



The assembled spray guard is ready to install without the need for adjustment. Remove the spindle nut, washer and adjustment block from the right-hand side of the bike.

Fit the spray guard where the original adjustment block was previously situated. Please note that you will need to reuse the original nut + washer in conjunction with the spray guard bracket. **See below.**

Chain adjustment should allow 15-20mm of slack at the centre of the bottom chain run.

The two screw adjusters left and right, should have equal lengths of exposed threads. **See red circle in picture below.**

Finally torque the wheel nut to the correct value of **88Nm**.

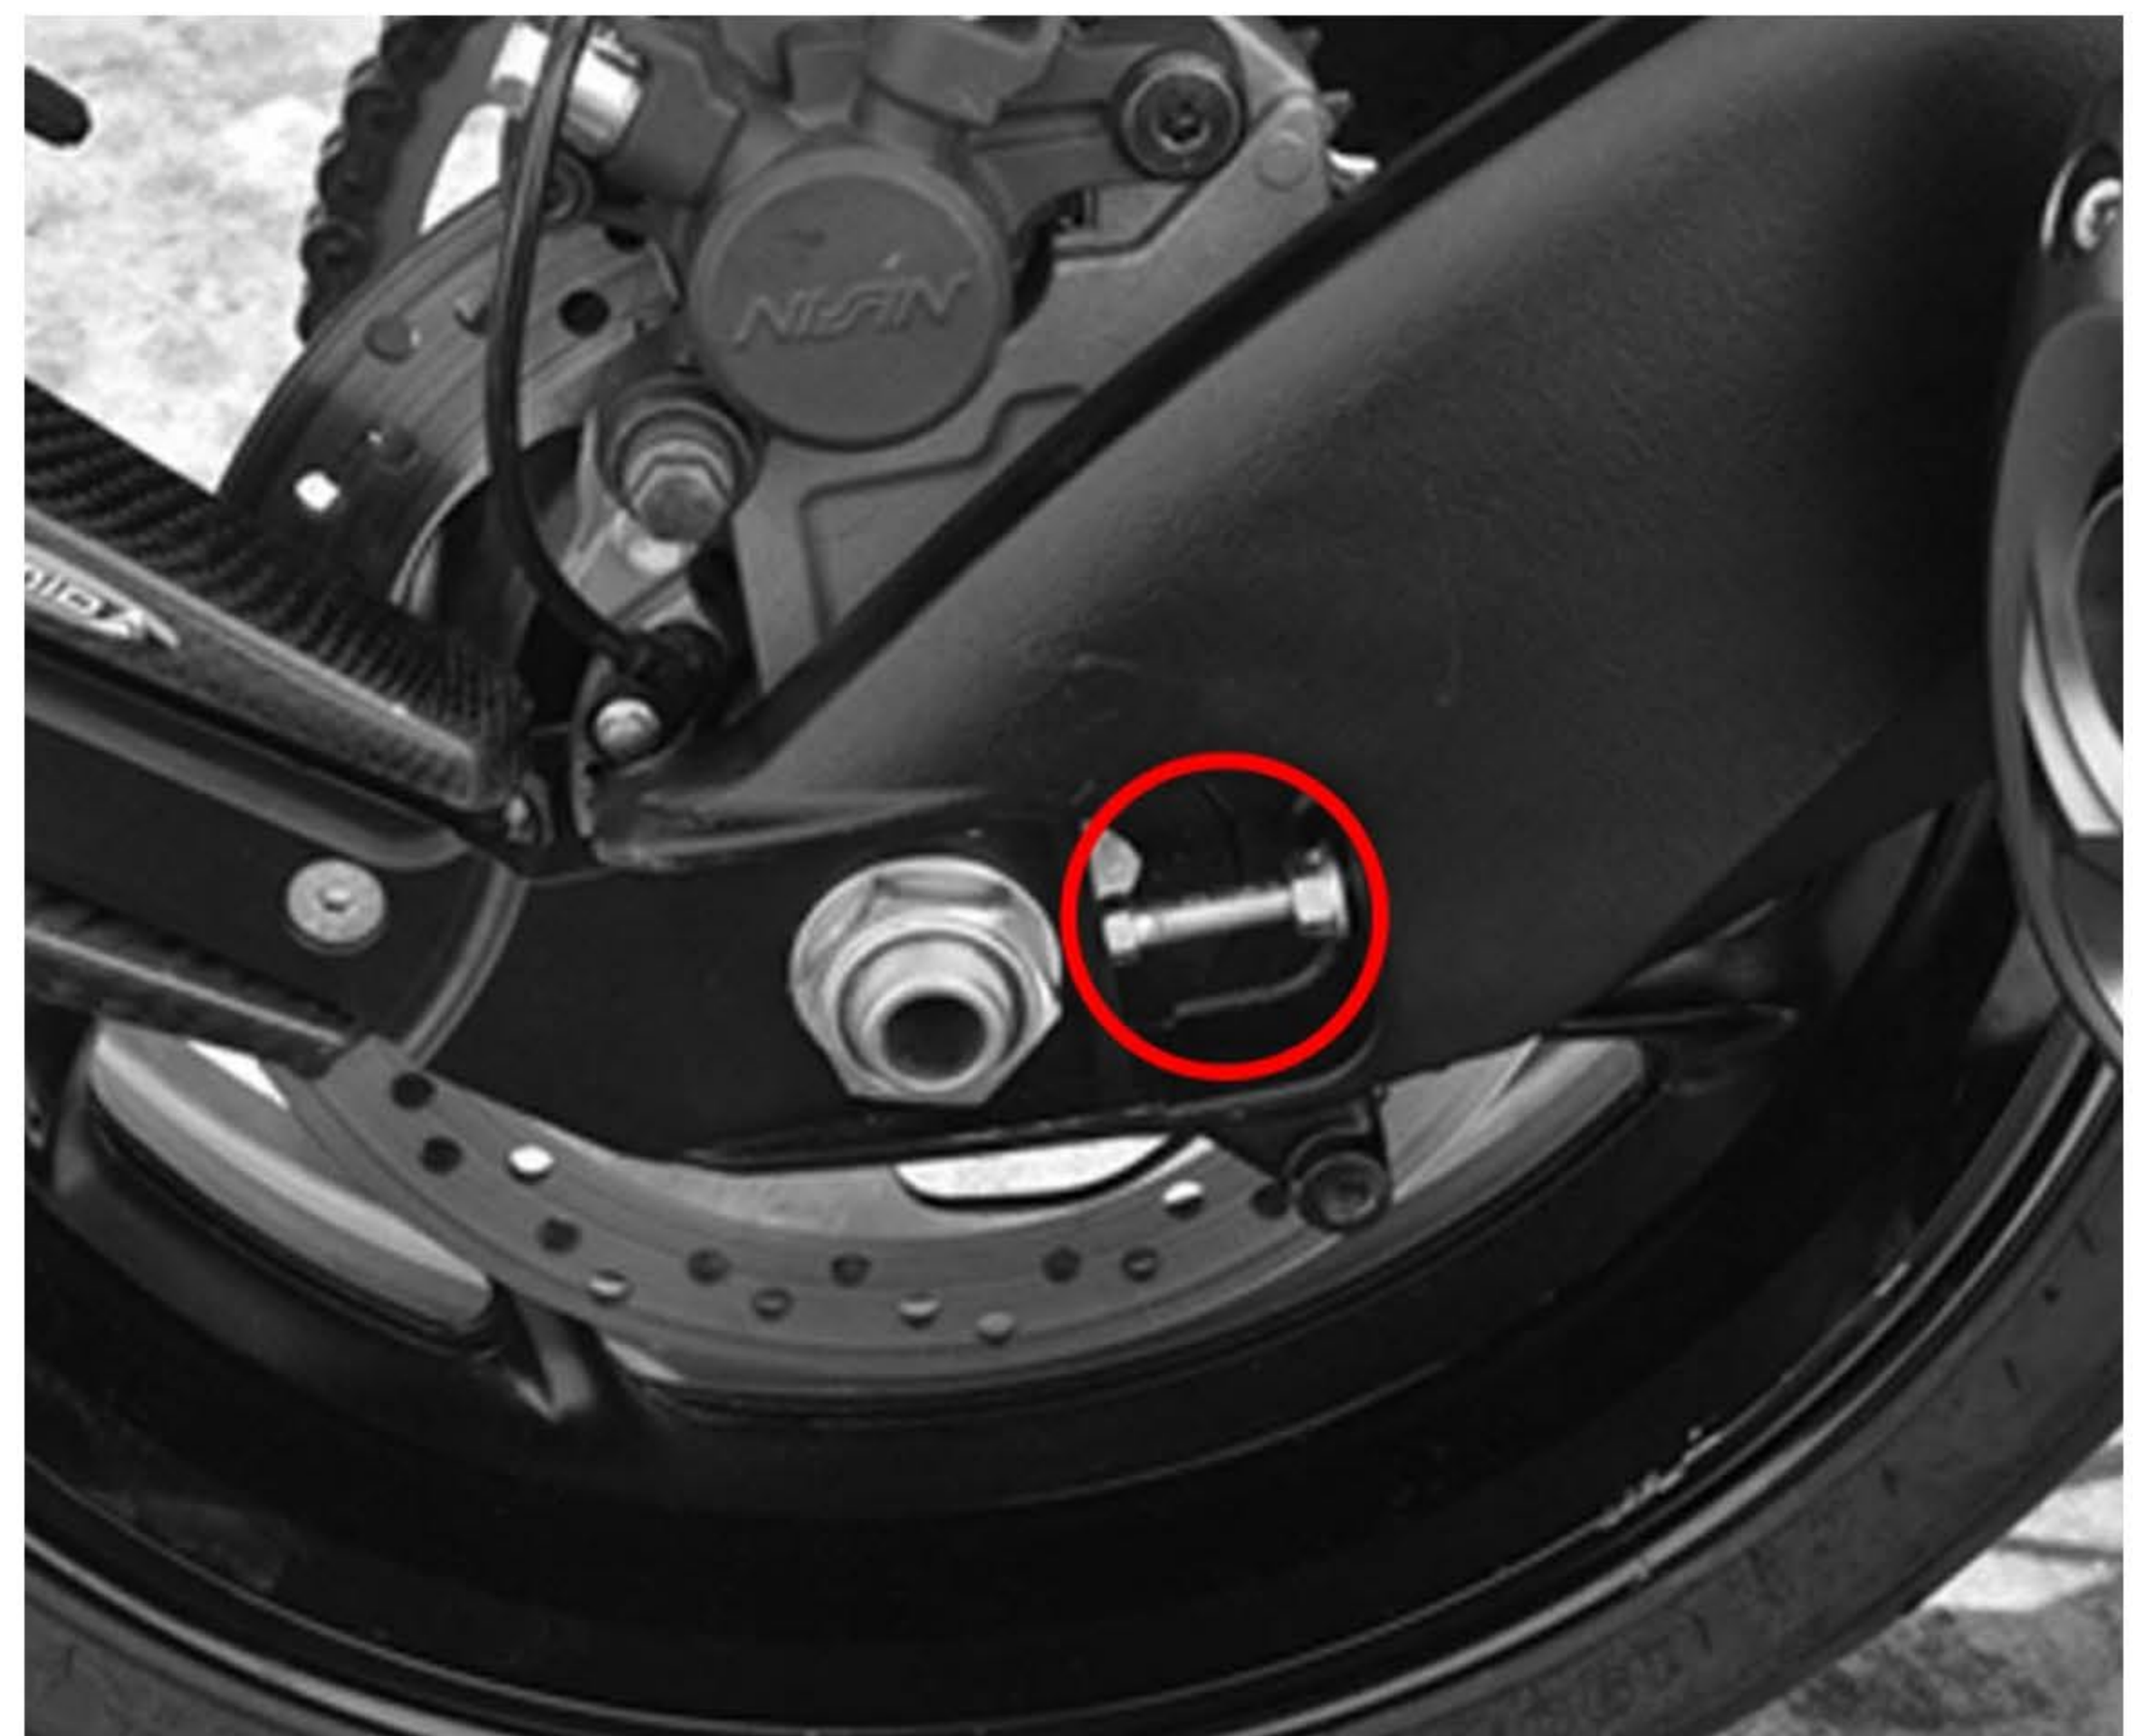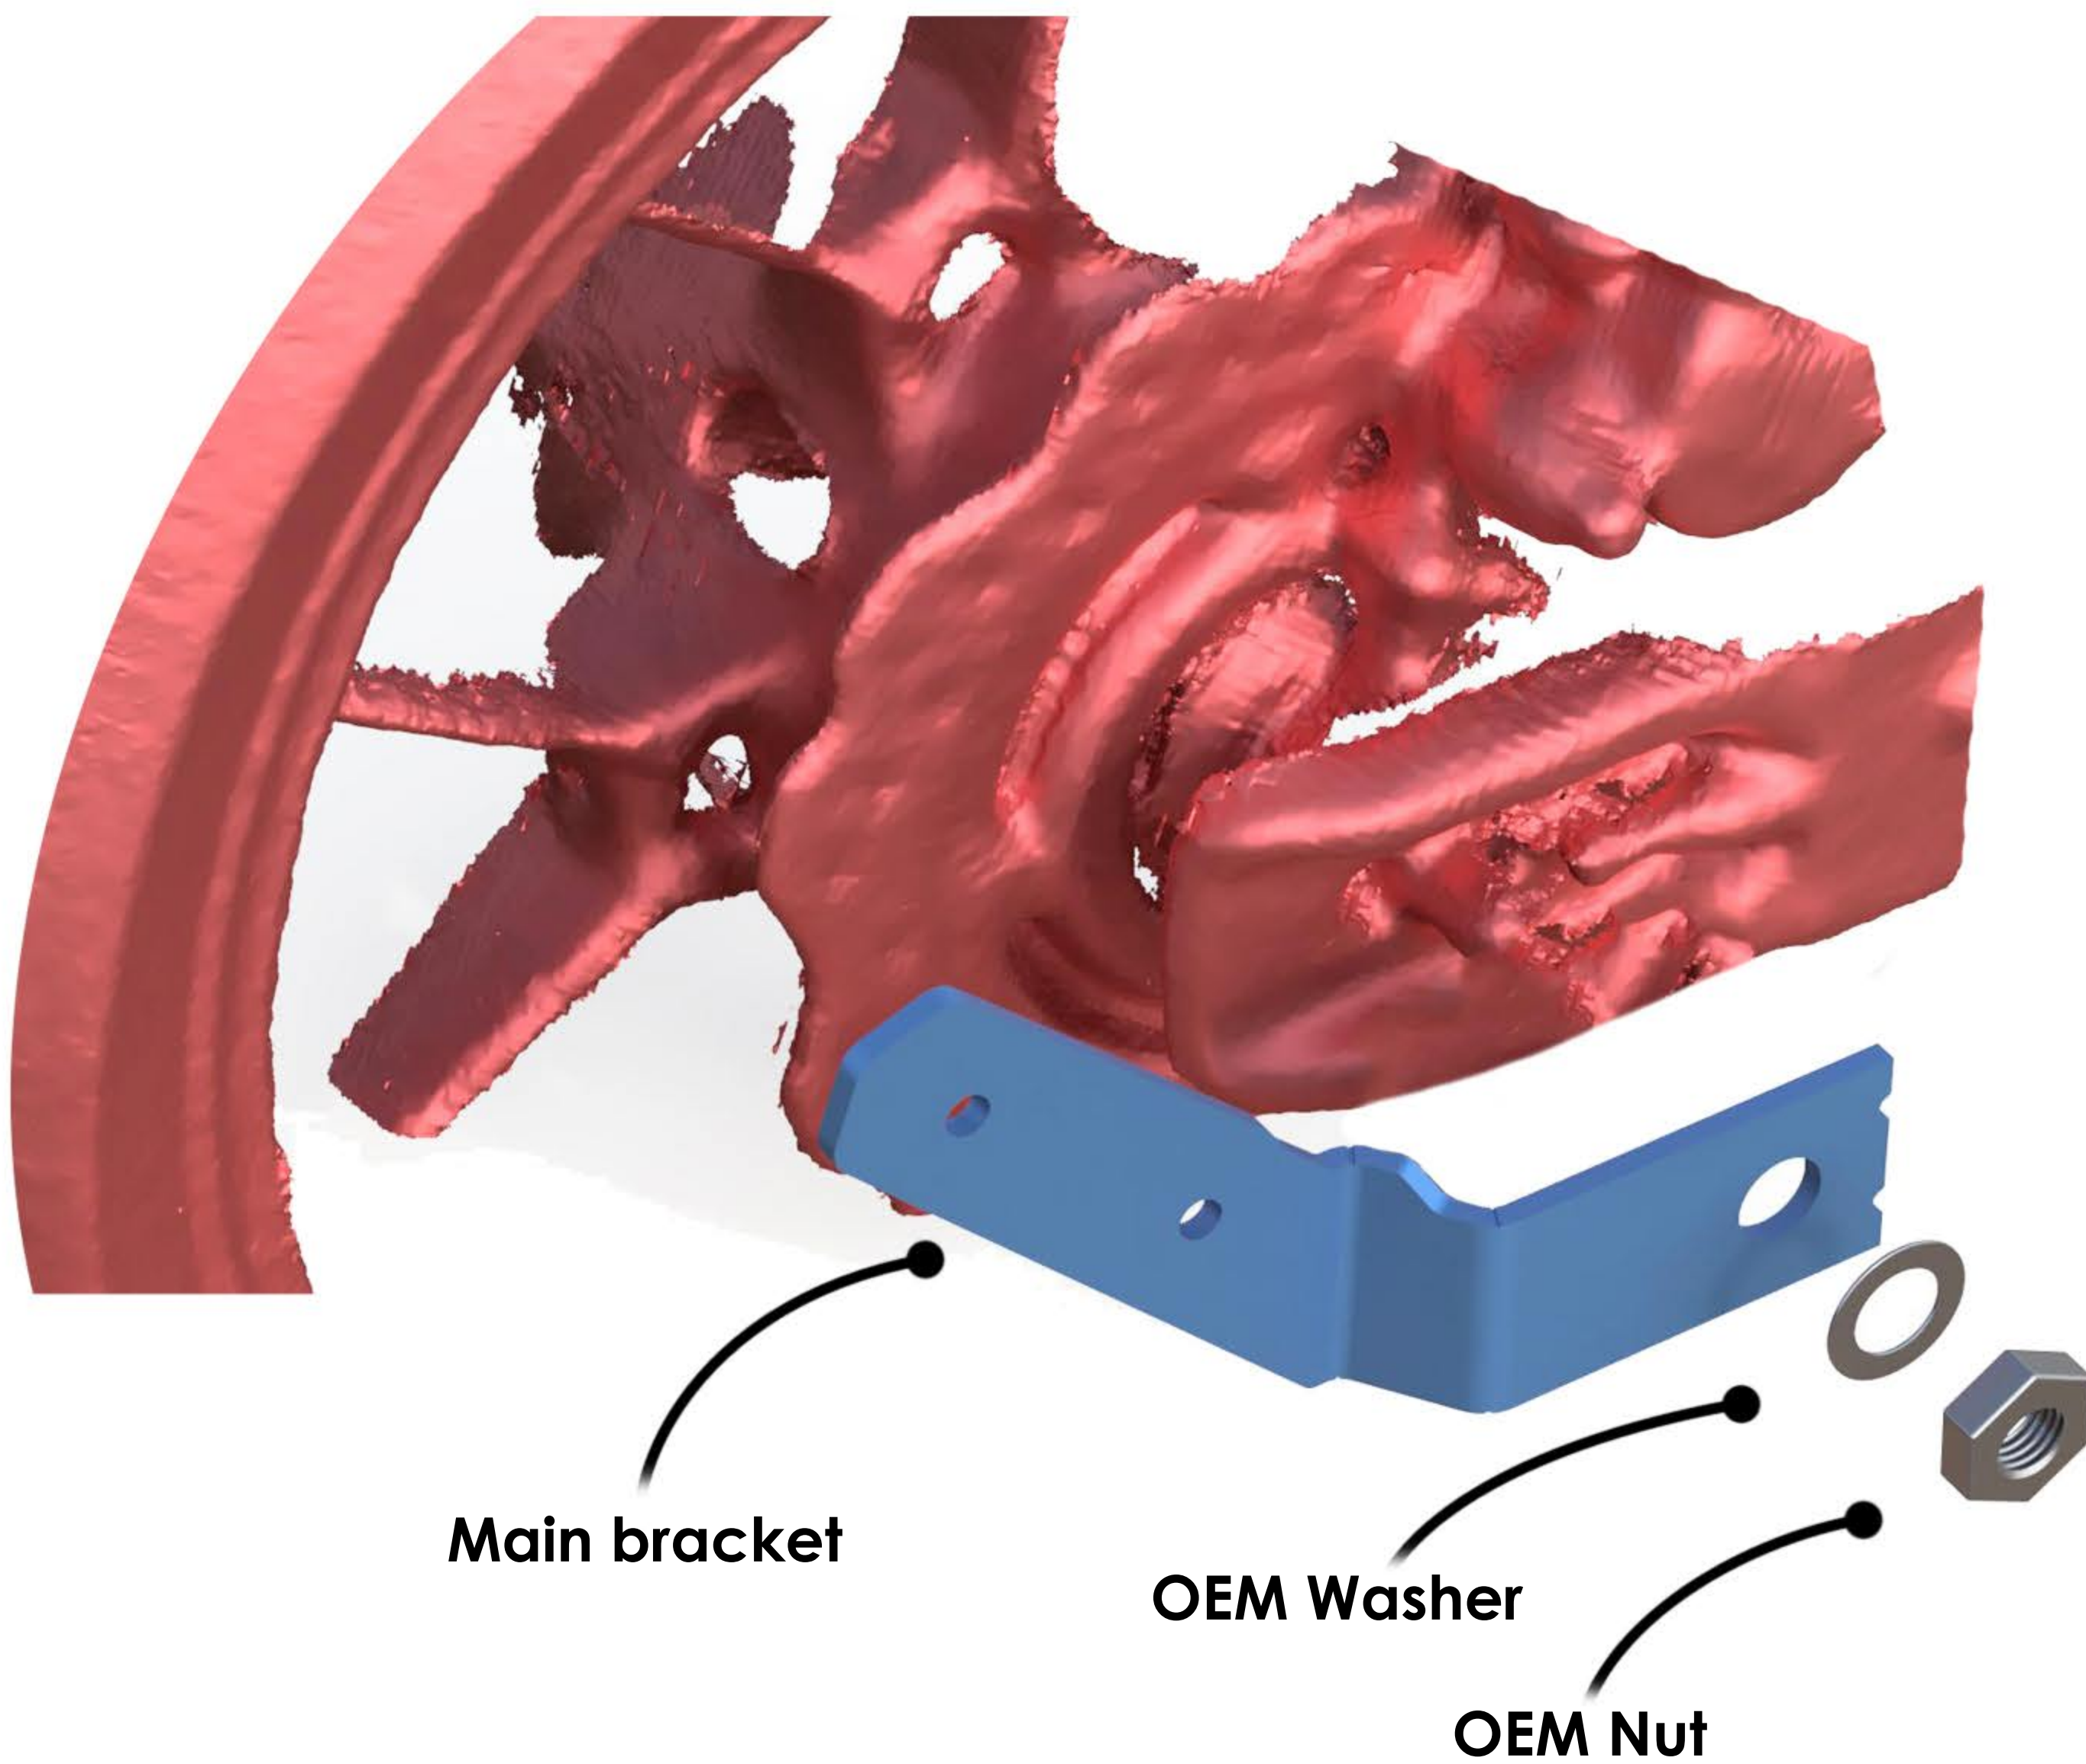

sales@pyramidmoto.co.uk  
+44 (0)1427 677990  
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!