

# PYRAMID



## 085203 Yamaha MT-09/Tracer 9 Spray Guard Fitting Instructions

### Kit Includes:

1X Fibreglass Guard	C085200
1X Bracket (2 parts)	CFK085203
2X M8 x 25mm Bolt	CBOLM80010
2X M8 Nyloc Nut	CNUTM80003
2X M8 Washer	CWASM80004

Pre-assembled

**Note: You are advised NEVER to attach additional items ANYWHERE on this guard – such as mounting plates, indicators, lights, licence plates, crash protectors, etc as this will invalidate the warranty.**


The assembled spray guard is ready to install without the need for adjustment. Remove the spindle nut, washer and adjustment block from the right-hand side of the bike.

Fit the spray guard where the original adjustment block was previously situated. The small rectangular block supplied is fitted on top of the main bracket. Please note that you will need to reuse the original washer in conjunction with the spray guard bracket. **See below.**

Chain adjustment should allow 15-20mm of slack at the centre of the bottom chain run.

The two screw adjusters left and right, should have equal lengths of exposed threads. **See red circle in picture below.**

Finally torque the wheel nut to the correct value of **146Nm**.

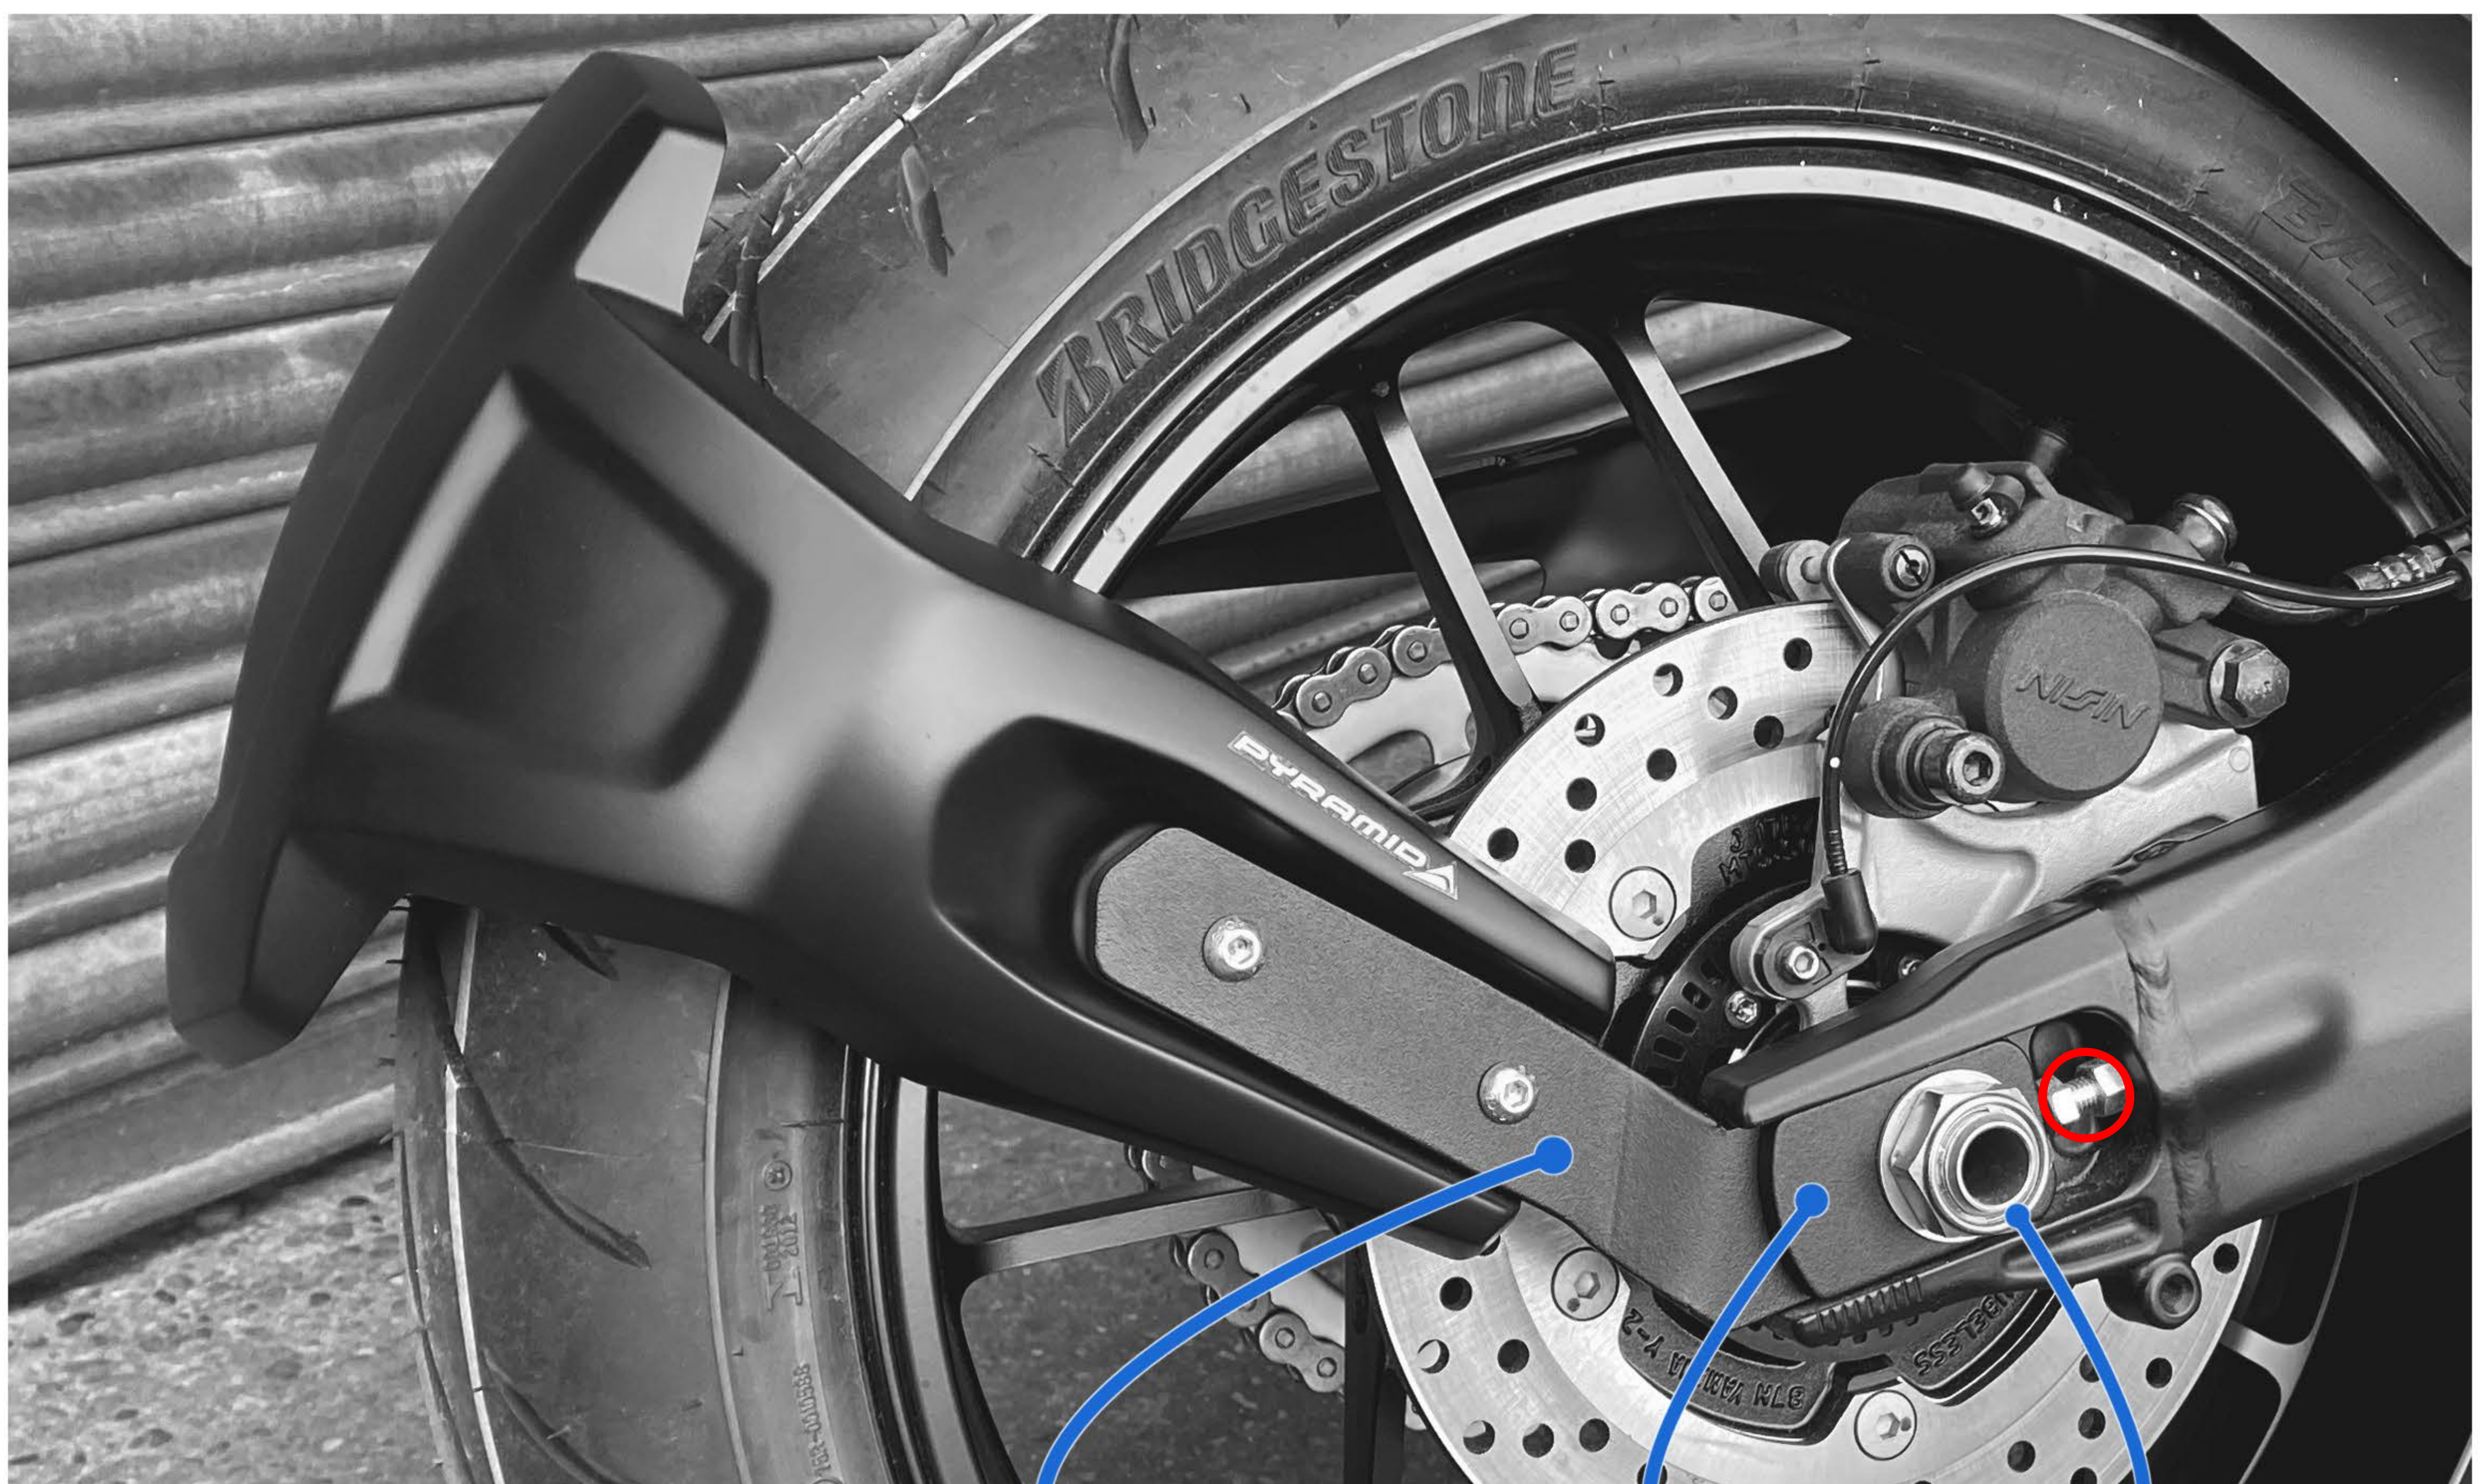

Main Bracket

Small rectangular block

Original nut + washer

sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

let's  
Ride