



085300 Kawasaki Versys 650 Spray Guard Fitting Instructions

Kit Includes:

1X Fibreglass Guard	C085601	Pre-assembled
1X Aluminium Bracket	CFK085300	Pre-assembled

Note: You are advised NEVER to attach additional items ANYWHERE on this guard – such as mounting plates, indicators, lights, licence plates, crash protectors, etc as this will invalidate the warranty.

- The assembled Fibreglass Guard and Aluminium Bracket are ready to install without the need for adjustment. A paddock stand is required as it is essential to reverse the wheel spindle (including chain tensioning block) so that the nut is on the right-hand side of bike – thus enabling fitment of the Spray Guard.
- The Aluminium Spray Guard Bracket now fits where the original chain tensioning block was previously situated. Please note that you will need to reuse the original washer in conjunction with the Spray Guard Bracket. **See Picture below.**

Chain adjustment should allow 15-20mm of slack at the centre of the bottom chain run.


The two screw adjusters left and right, should have equal lengths of exposed threads. **See red circle in picture below.**

Finally torque the wheel nut to the correct value of **108Nm**.



Kawasaki

Versys

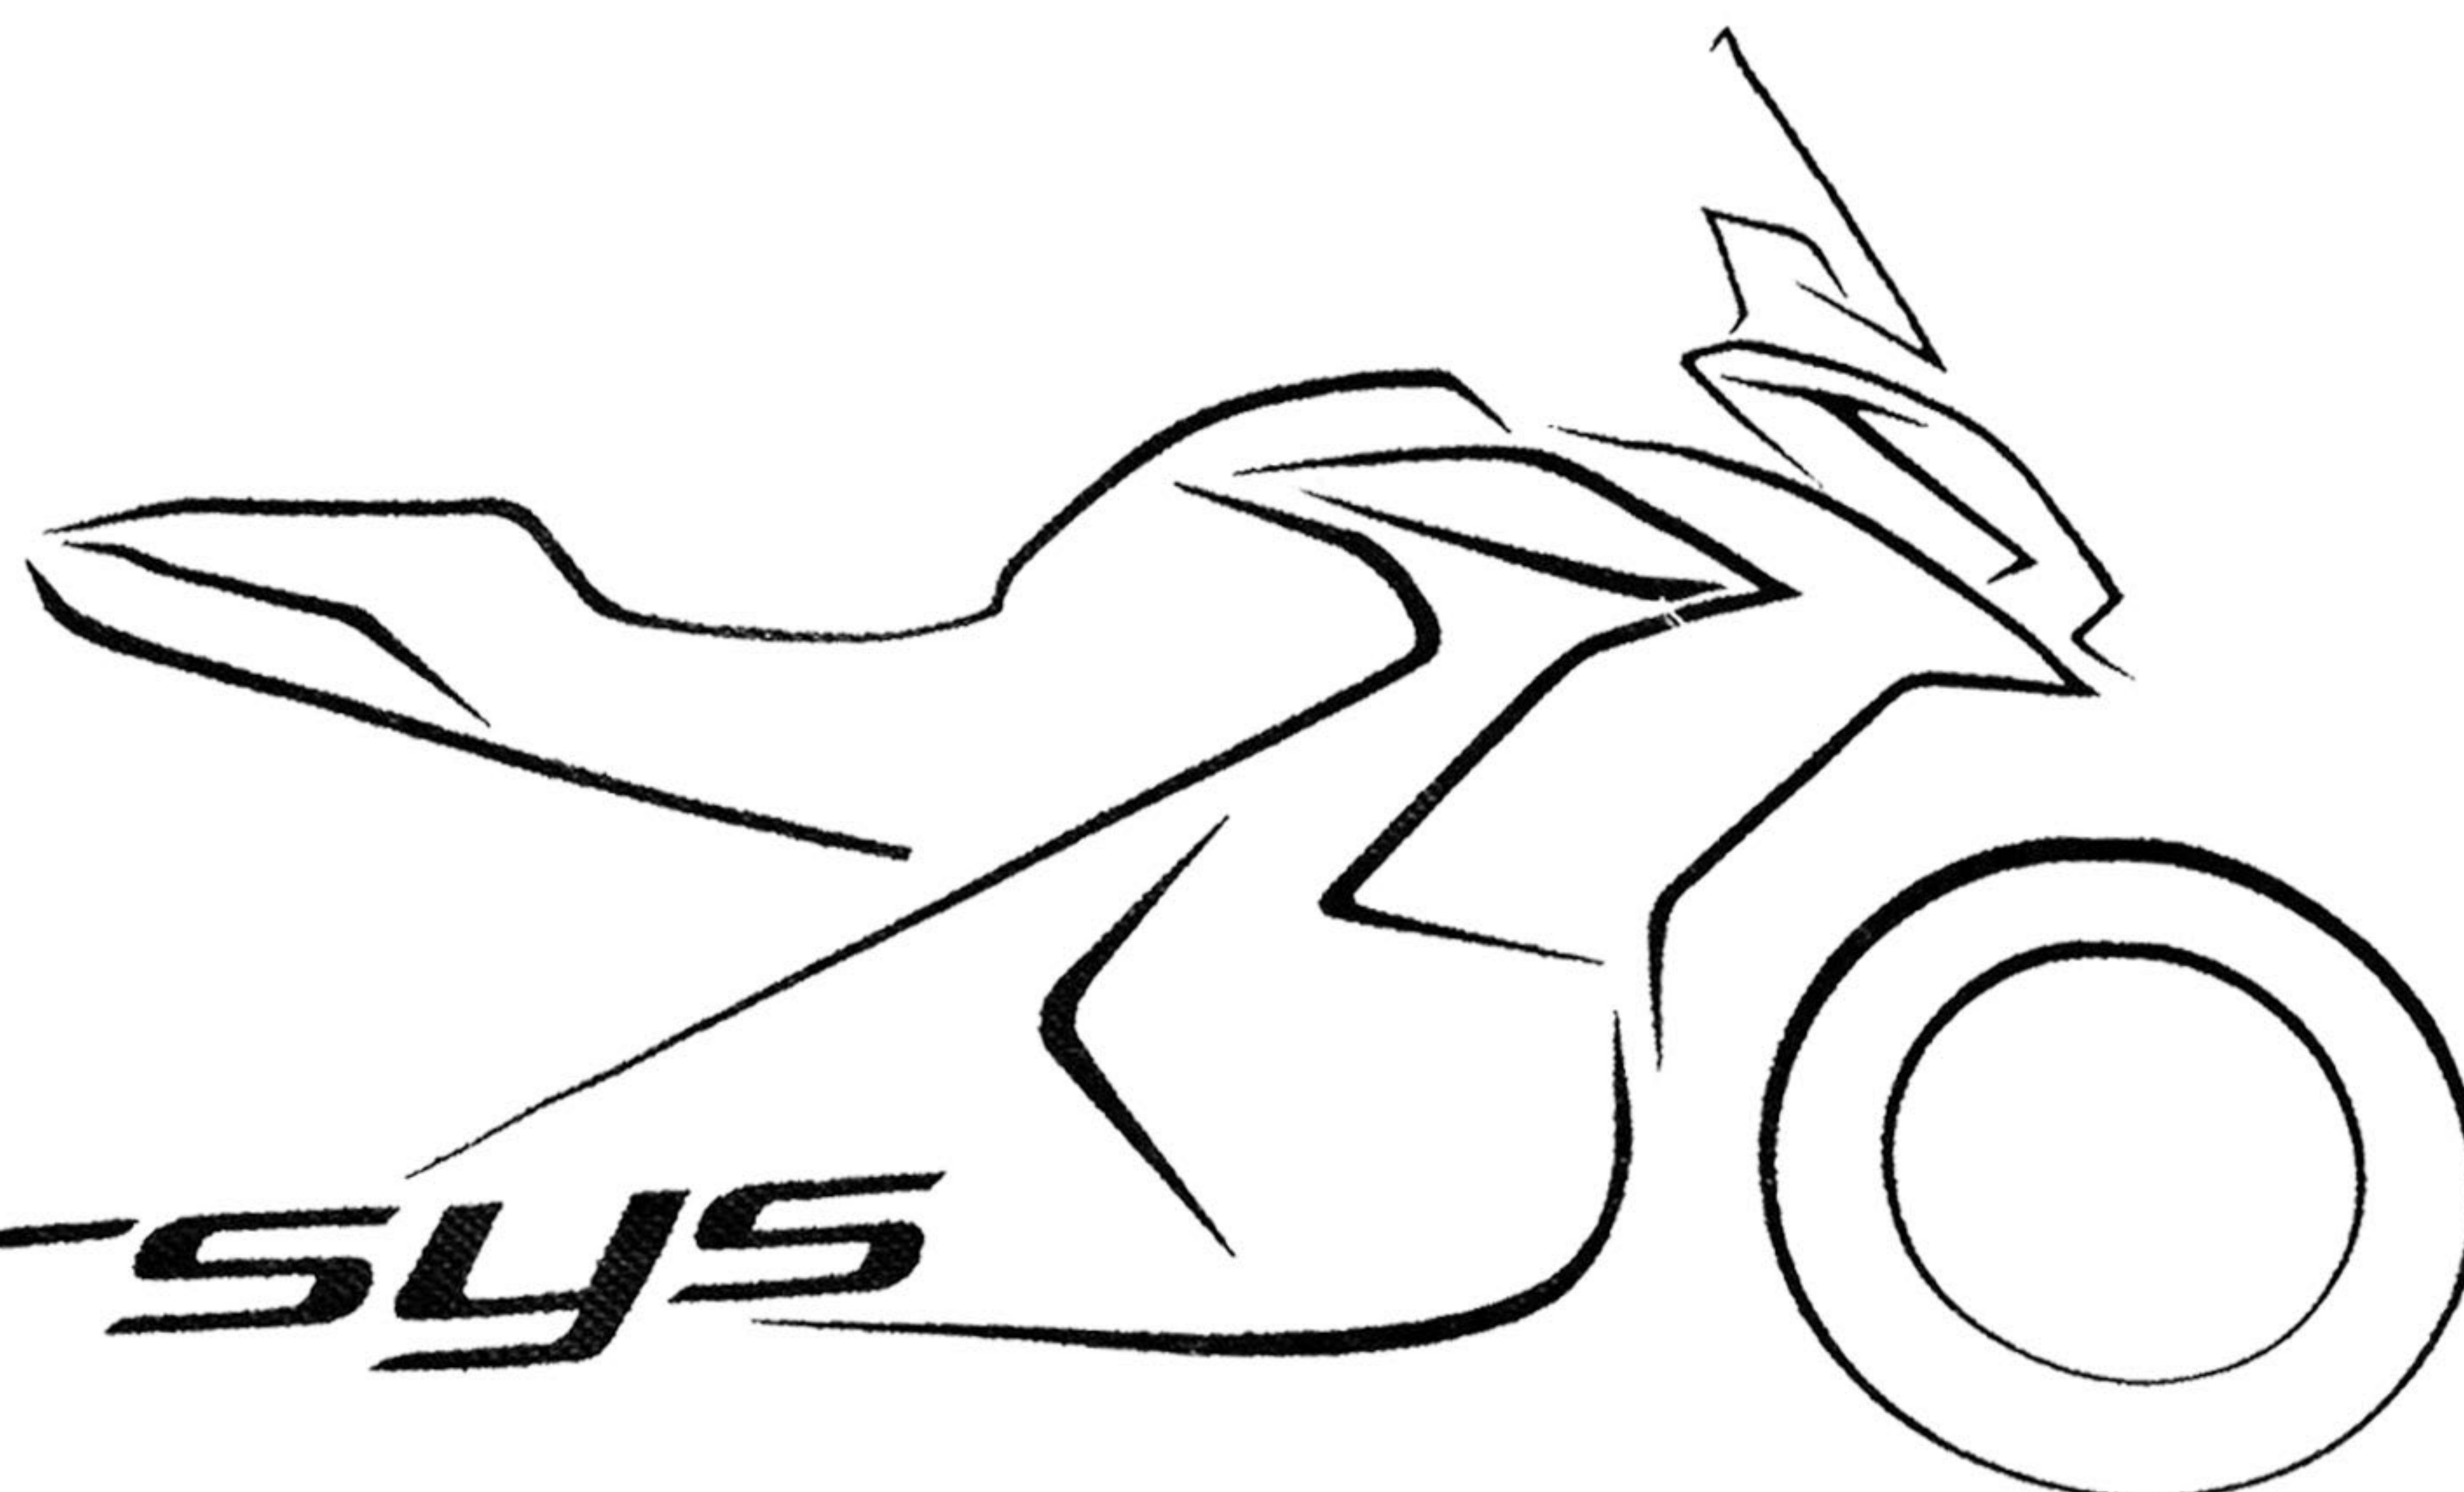

Got questions?

sales@pyramid-plastics.co.uk

+44 (0)1427 677990

www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!