



# 089400 BMW R1200GS & R1250GS Frame End Caps Fitting Instructions


## Kit Includes:

X3 24mm Cap	CBUNG001
X4 39mm Cap	CBUNG002
X2 52mm Angled Cap	CBUNG003

- Ensure holes are free from debris, dirt & moisture before fitting.

### Left-hand side shown below

Left-hand side = 5 caps    Right-hand side = 4 caps

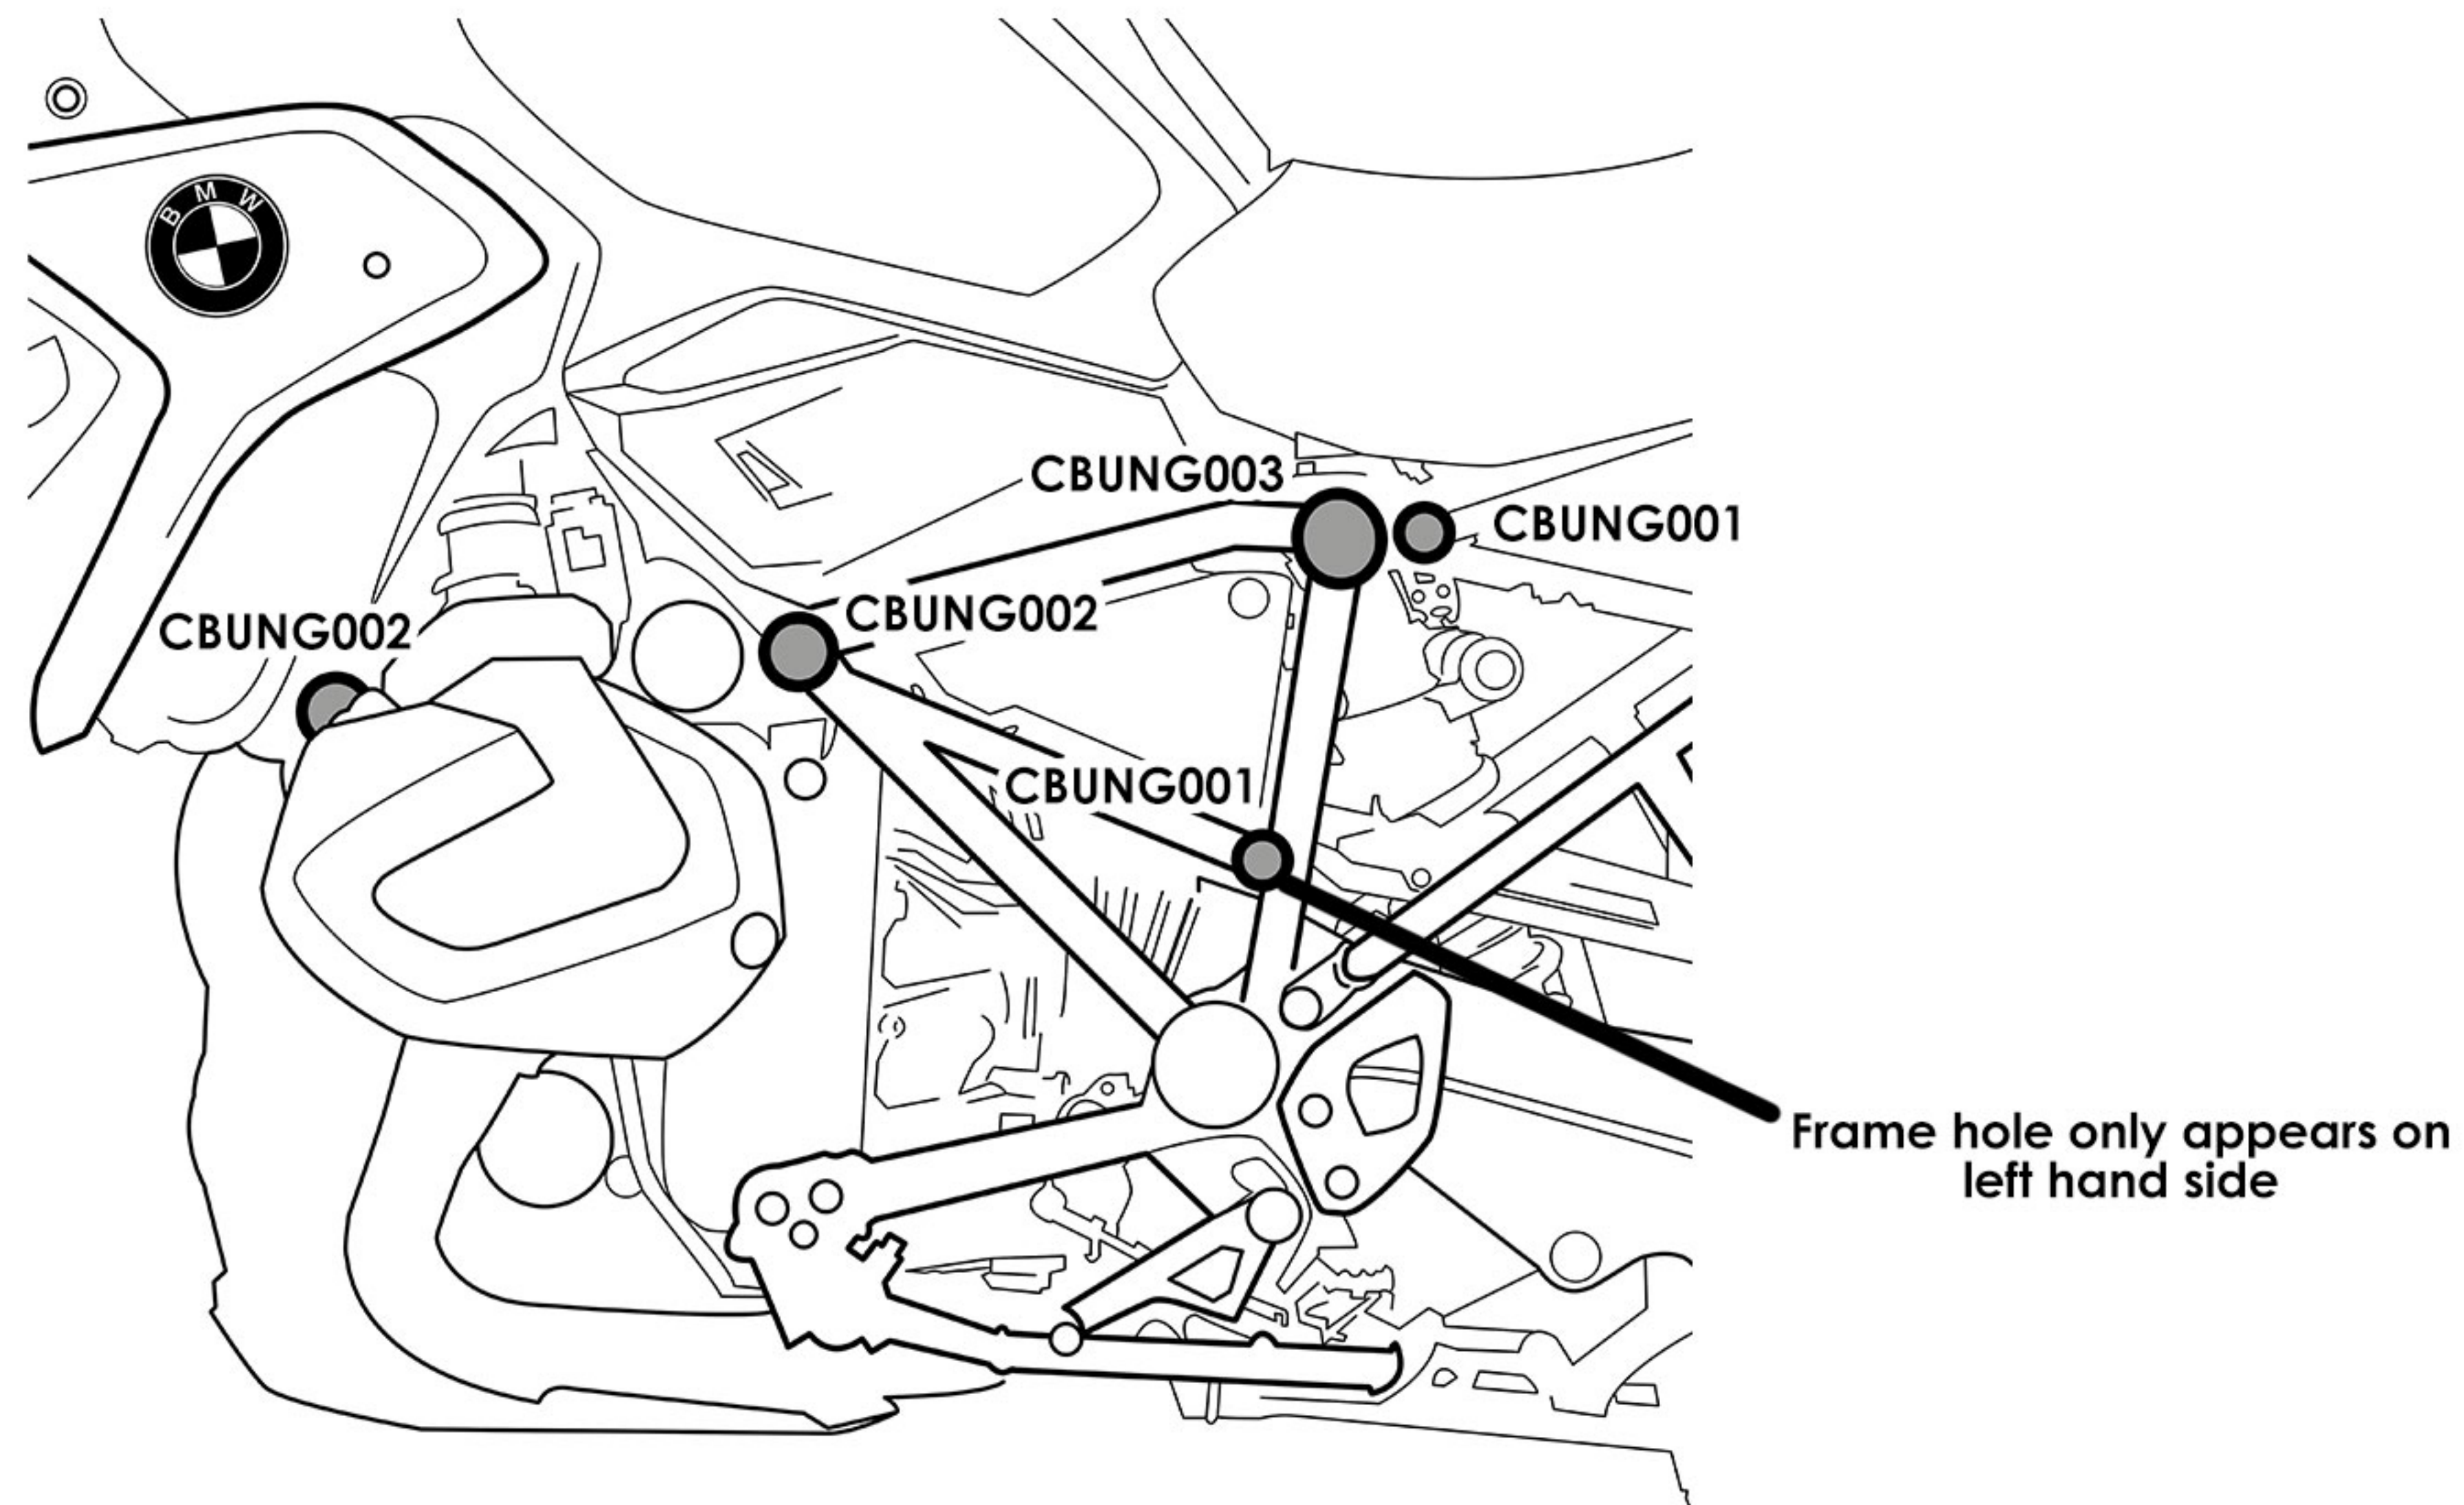

Contact us:

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!



# 089400 BMW R1200GS & R1250GS Frame End Caps Fitting Instructions


## Kit Includes:

X3 24mm Cap	CBUNG001
X4 39mm Cap	CBUNG002
X2 52mm Angled Cap	CBUNG003

- Ensure holes are free from debris, dirt & moisture before fitting.

### Left-hand side shown below

Left-hand side = 5 caps    Right-hand side = 4 caps

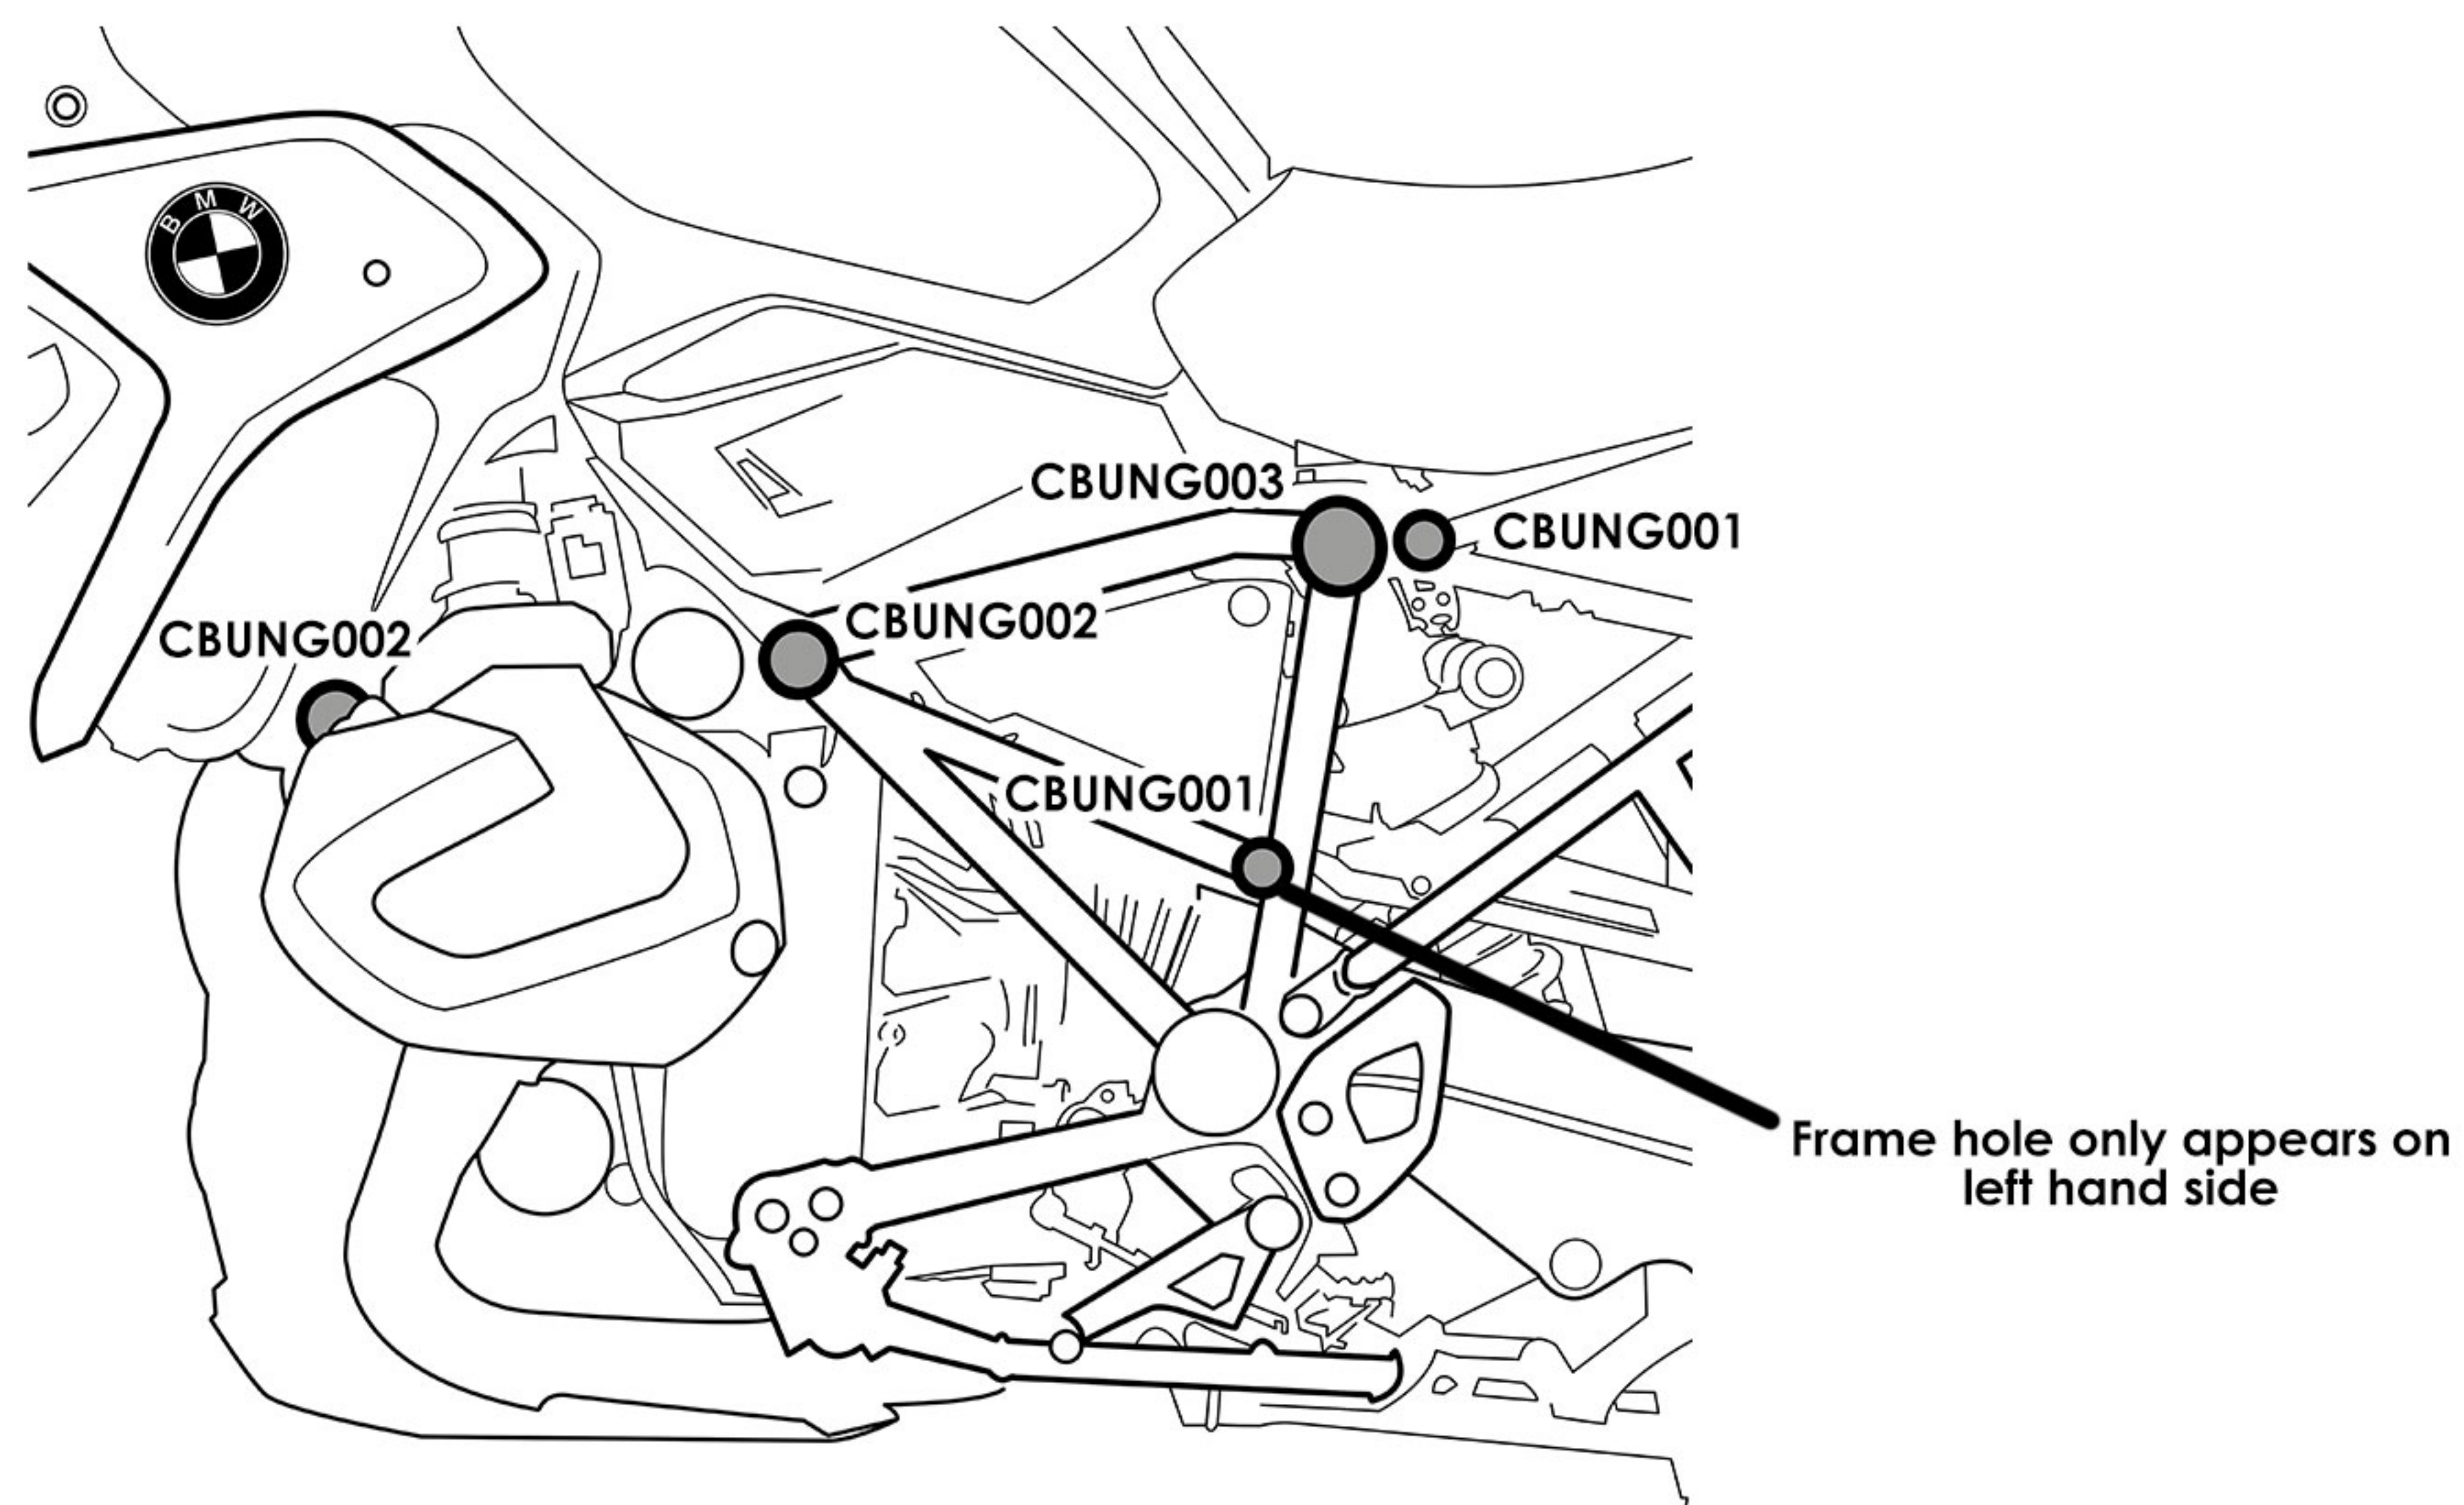

Contact us:

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

