


Kit Includes:

X1 24_{mm} Cap CBUNG001 X2 39_{mm} Cap CBUNG002 X2 50.8_{mm} Cap CBUNG033

Ensure holes are free from debris, dirt & moisture before fitting.

Left-hand side shown below

Left-hand side = 3 Caps - Right-hand side = 2 Caps

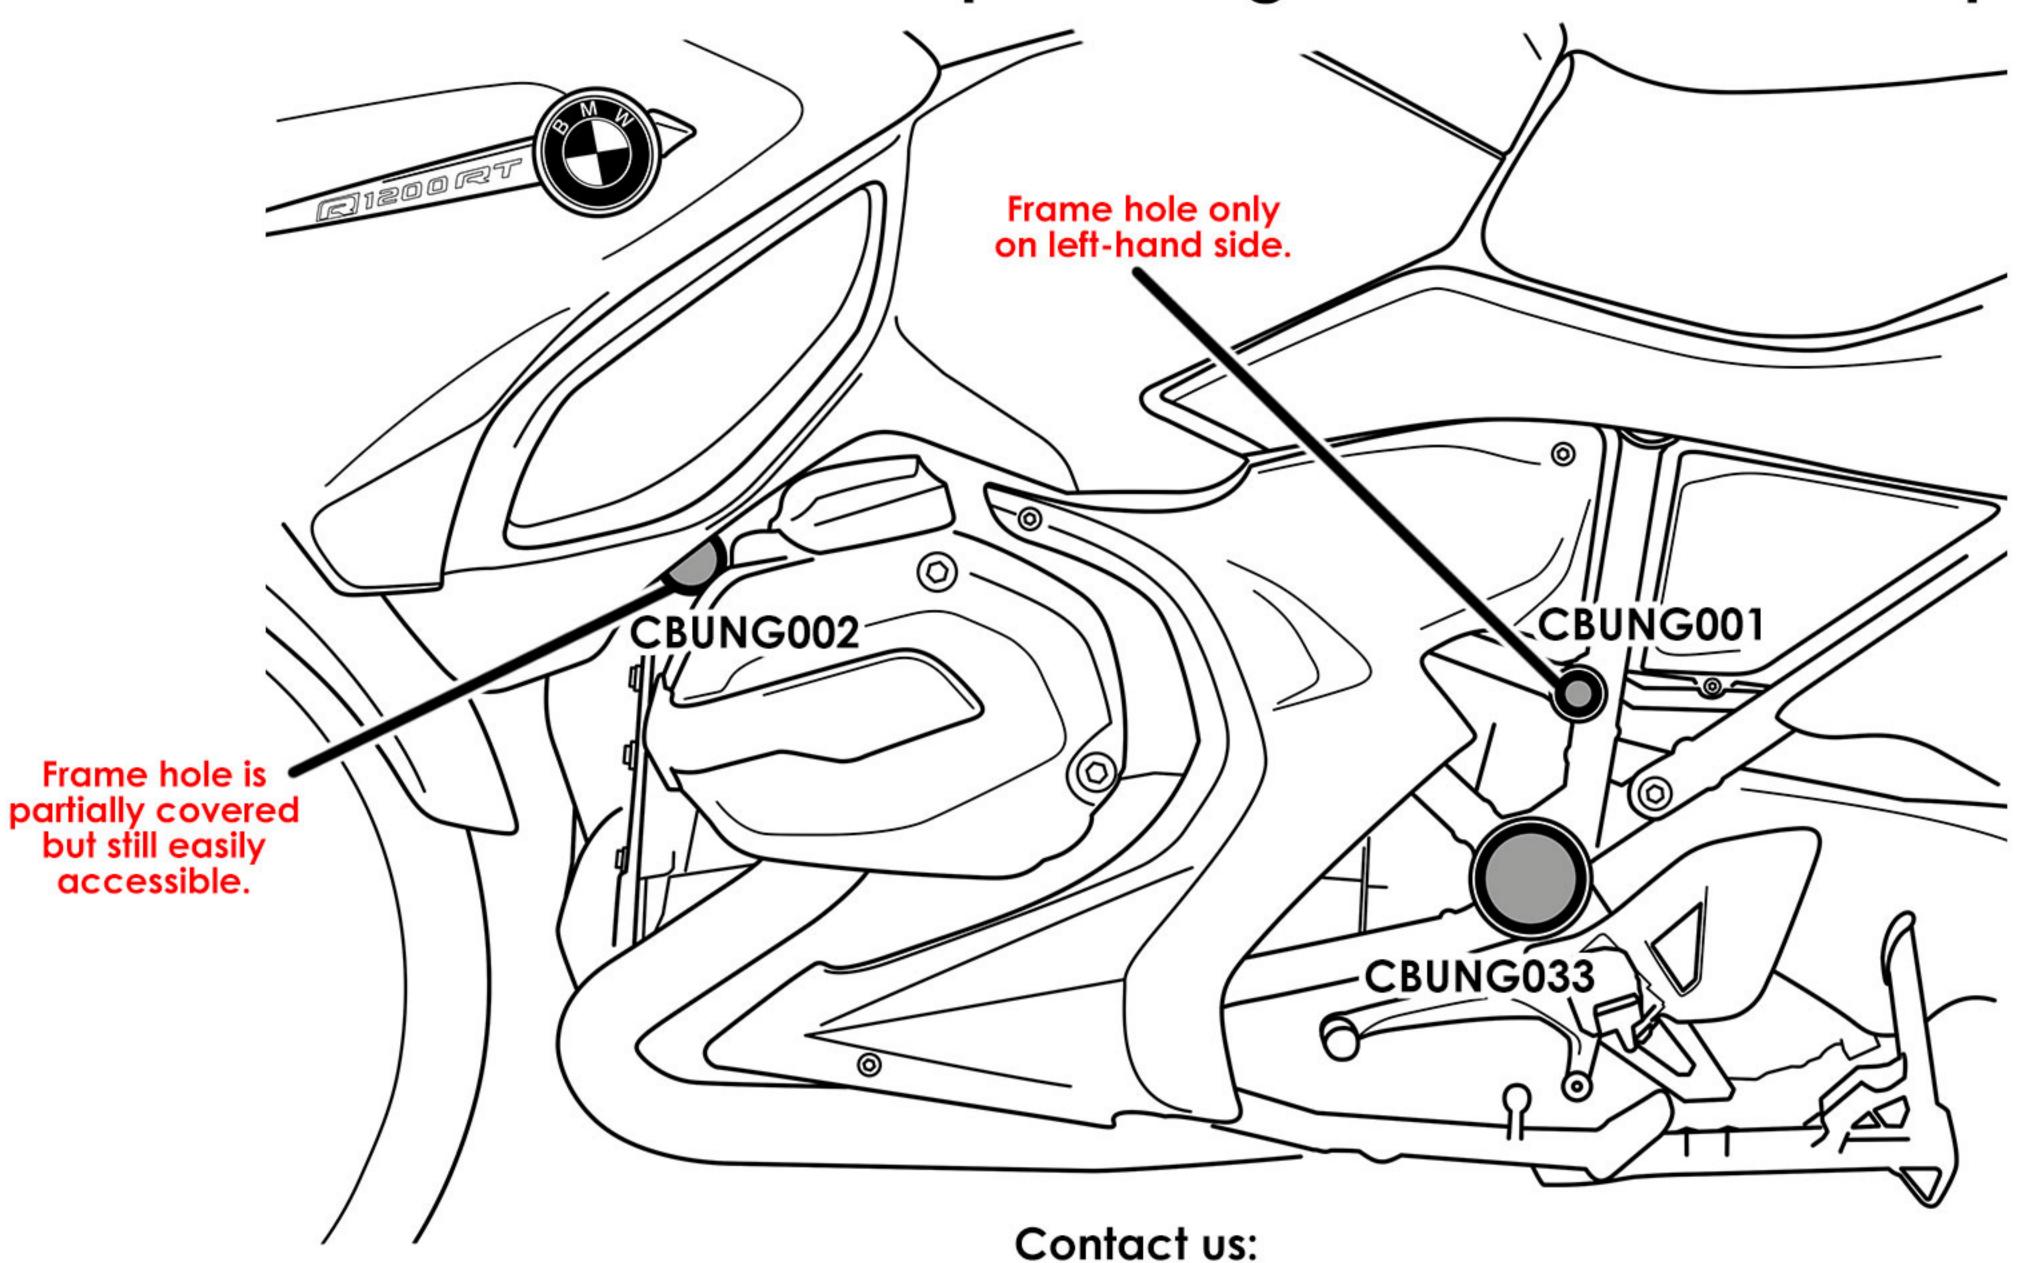

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!





089405 BMW R1200RT LC & R1250RT Frame End Caps Fitting Instructions


Kit Includes:

CBUNG001 X1 24_{mm} Cap **X2 39_{mm} Cap** CBUNG002 X2 50.8_{mm} Cap CBUNG033

Ensure holes are free from debris, dirt & moisture before fitting.

Left-hand side shown below

Left-hand side = 3 Caps - Right-hand side = 2 Caps

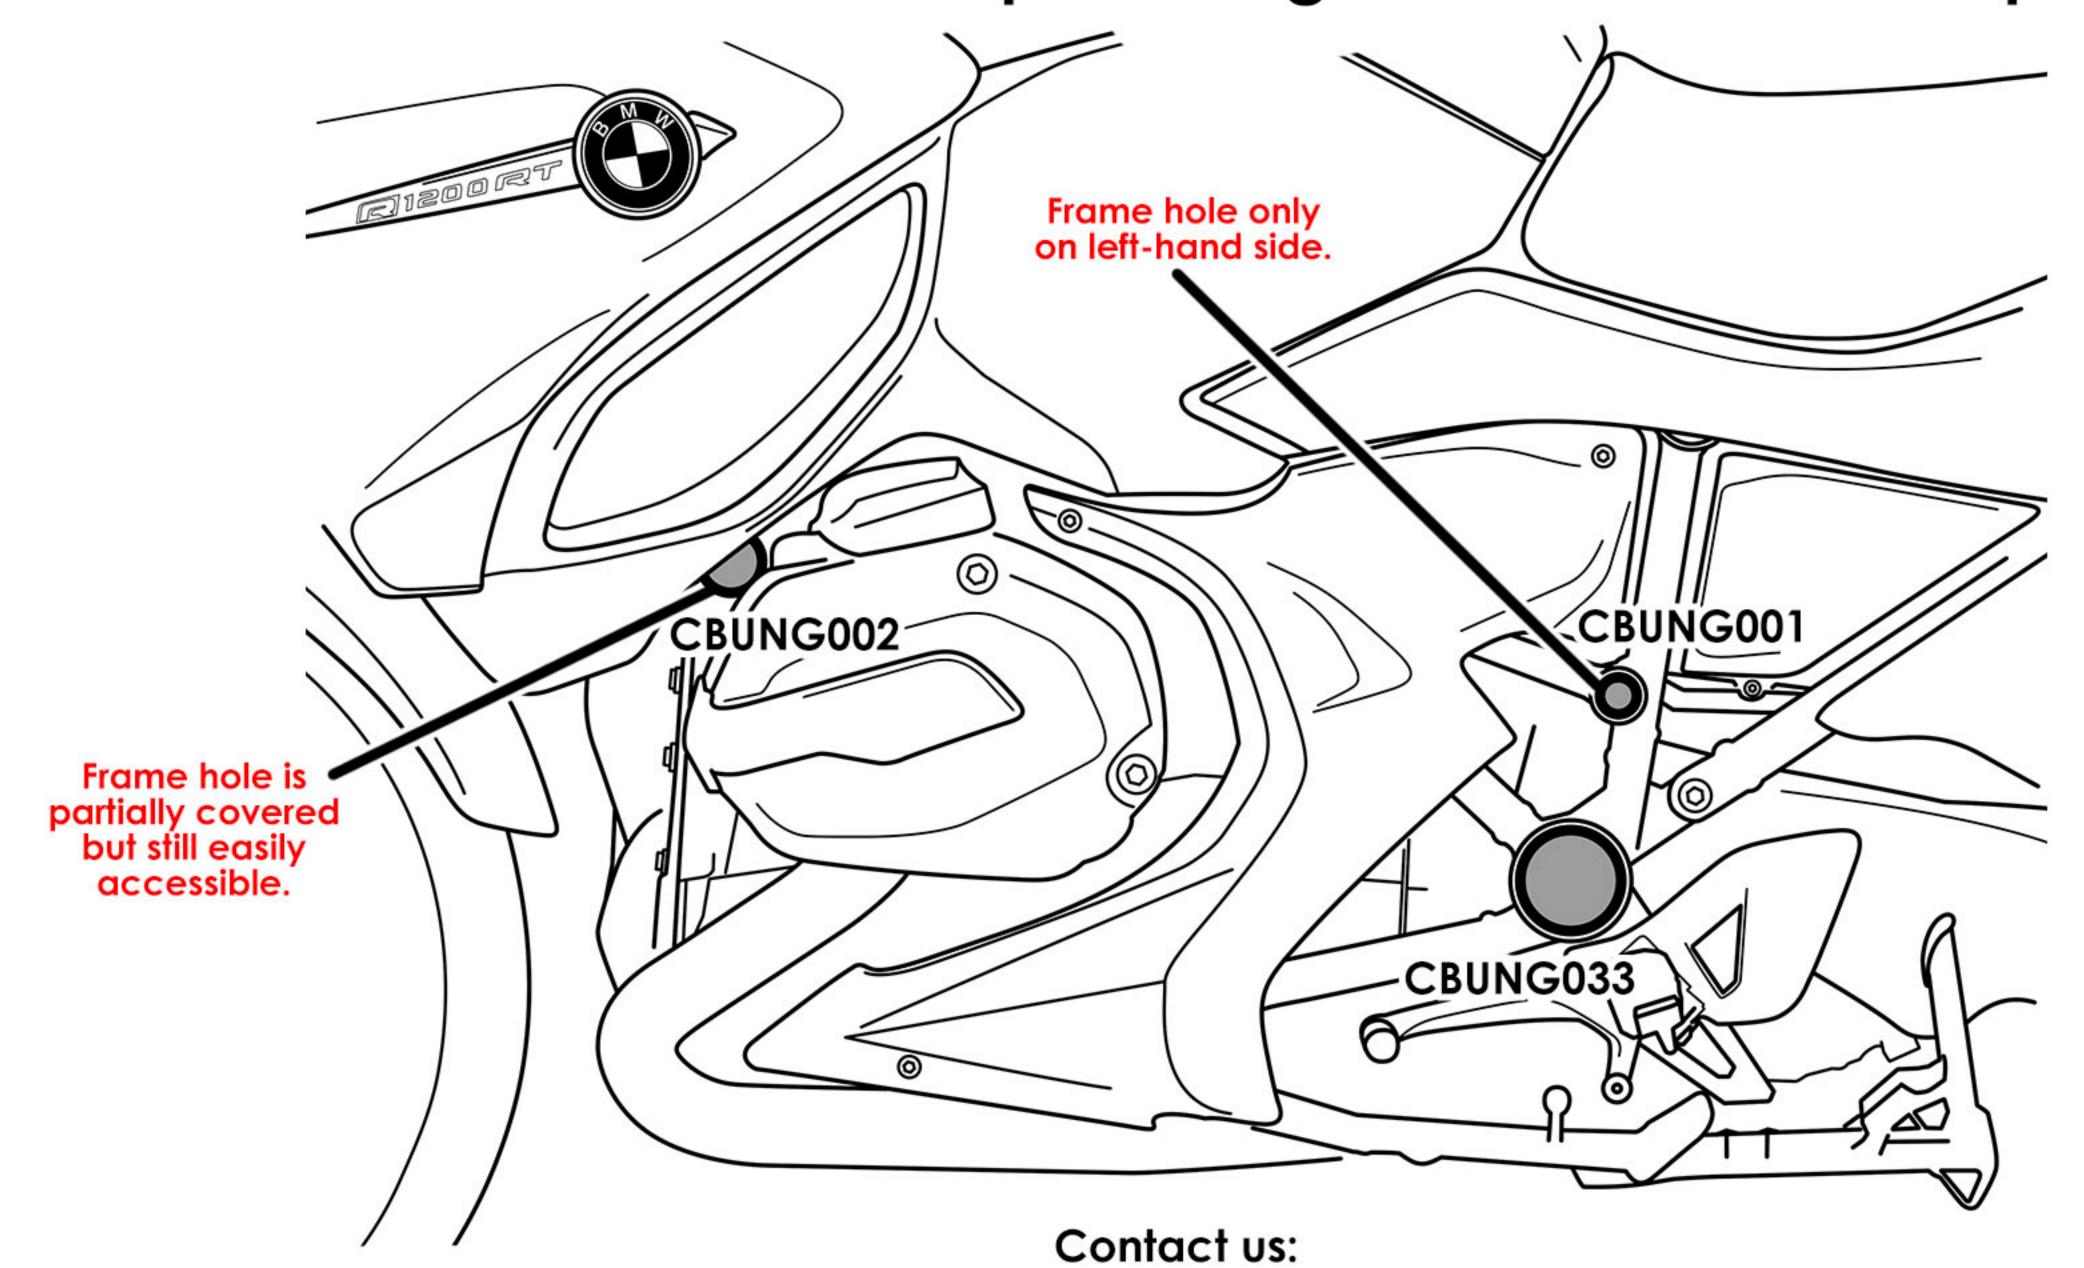

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

