



089509 Ducati Scrambler 1100 Frame End Caps Fitting Instructions

Kit Includes:

X7 26mm Cap


CBUNG019

- Ensure holes are free from debris, dirt & moisture before fitting.

Right-hand side shown below

Right-hand side = 4 Caps

Left-hand side = 3 Caps

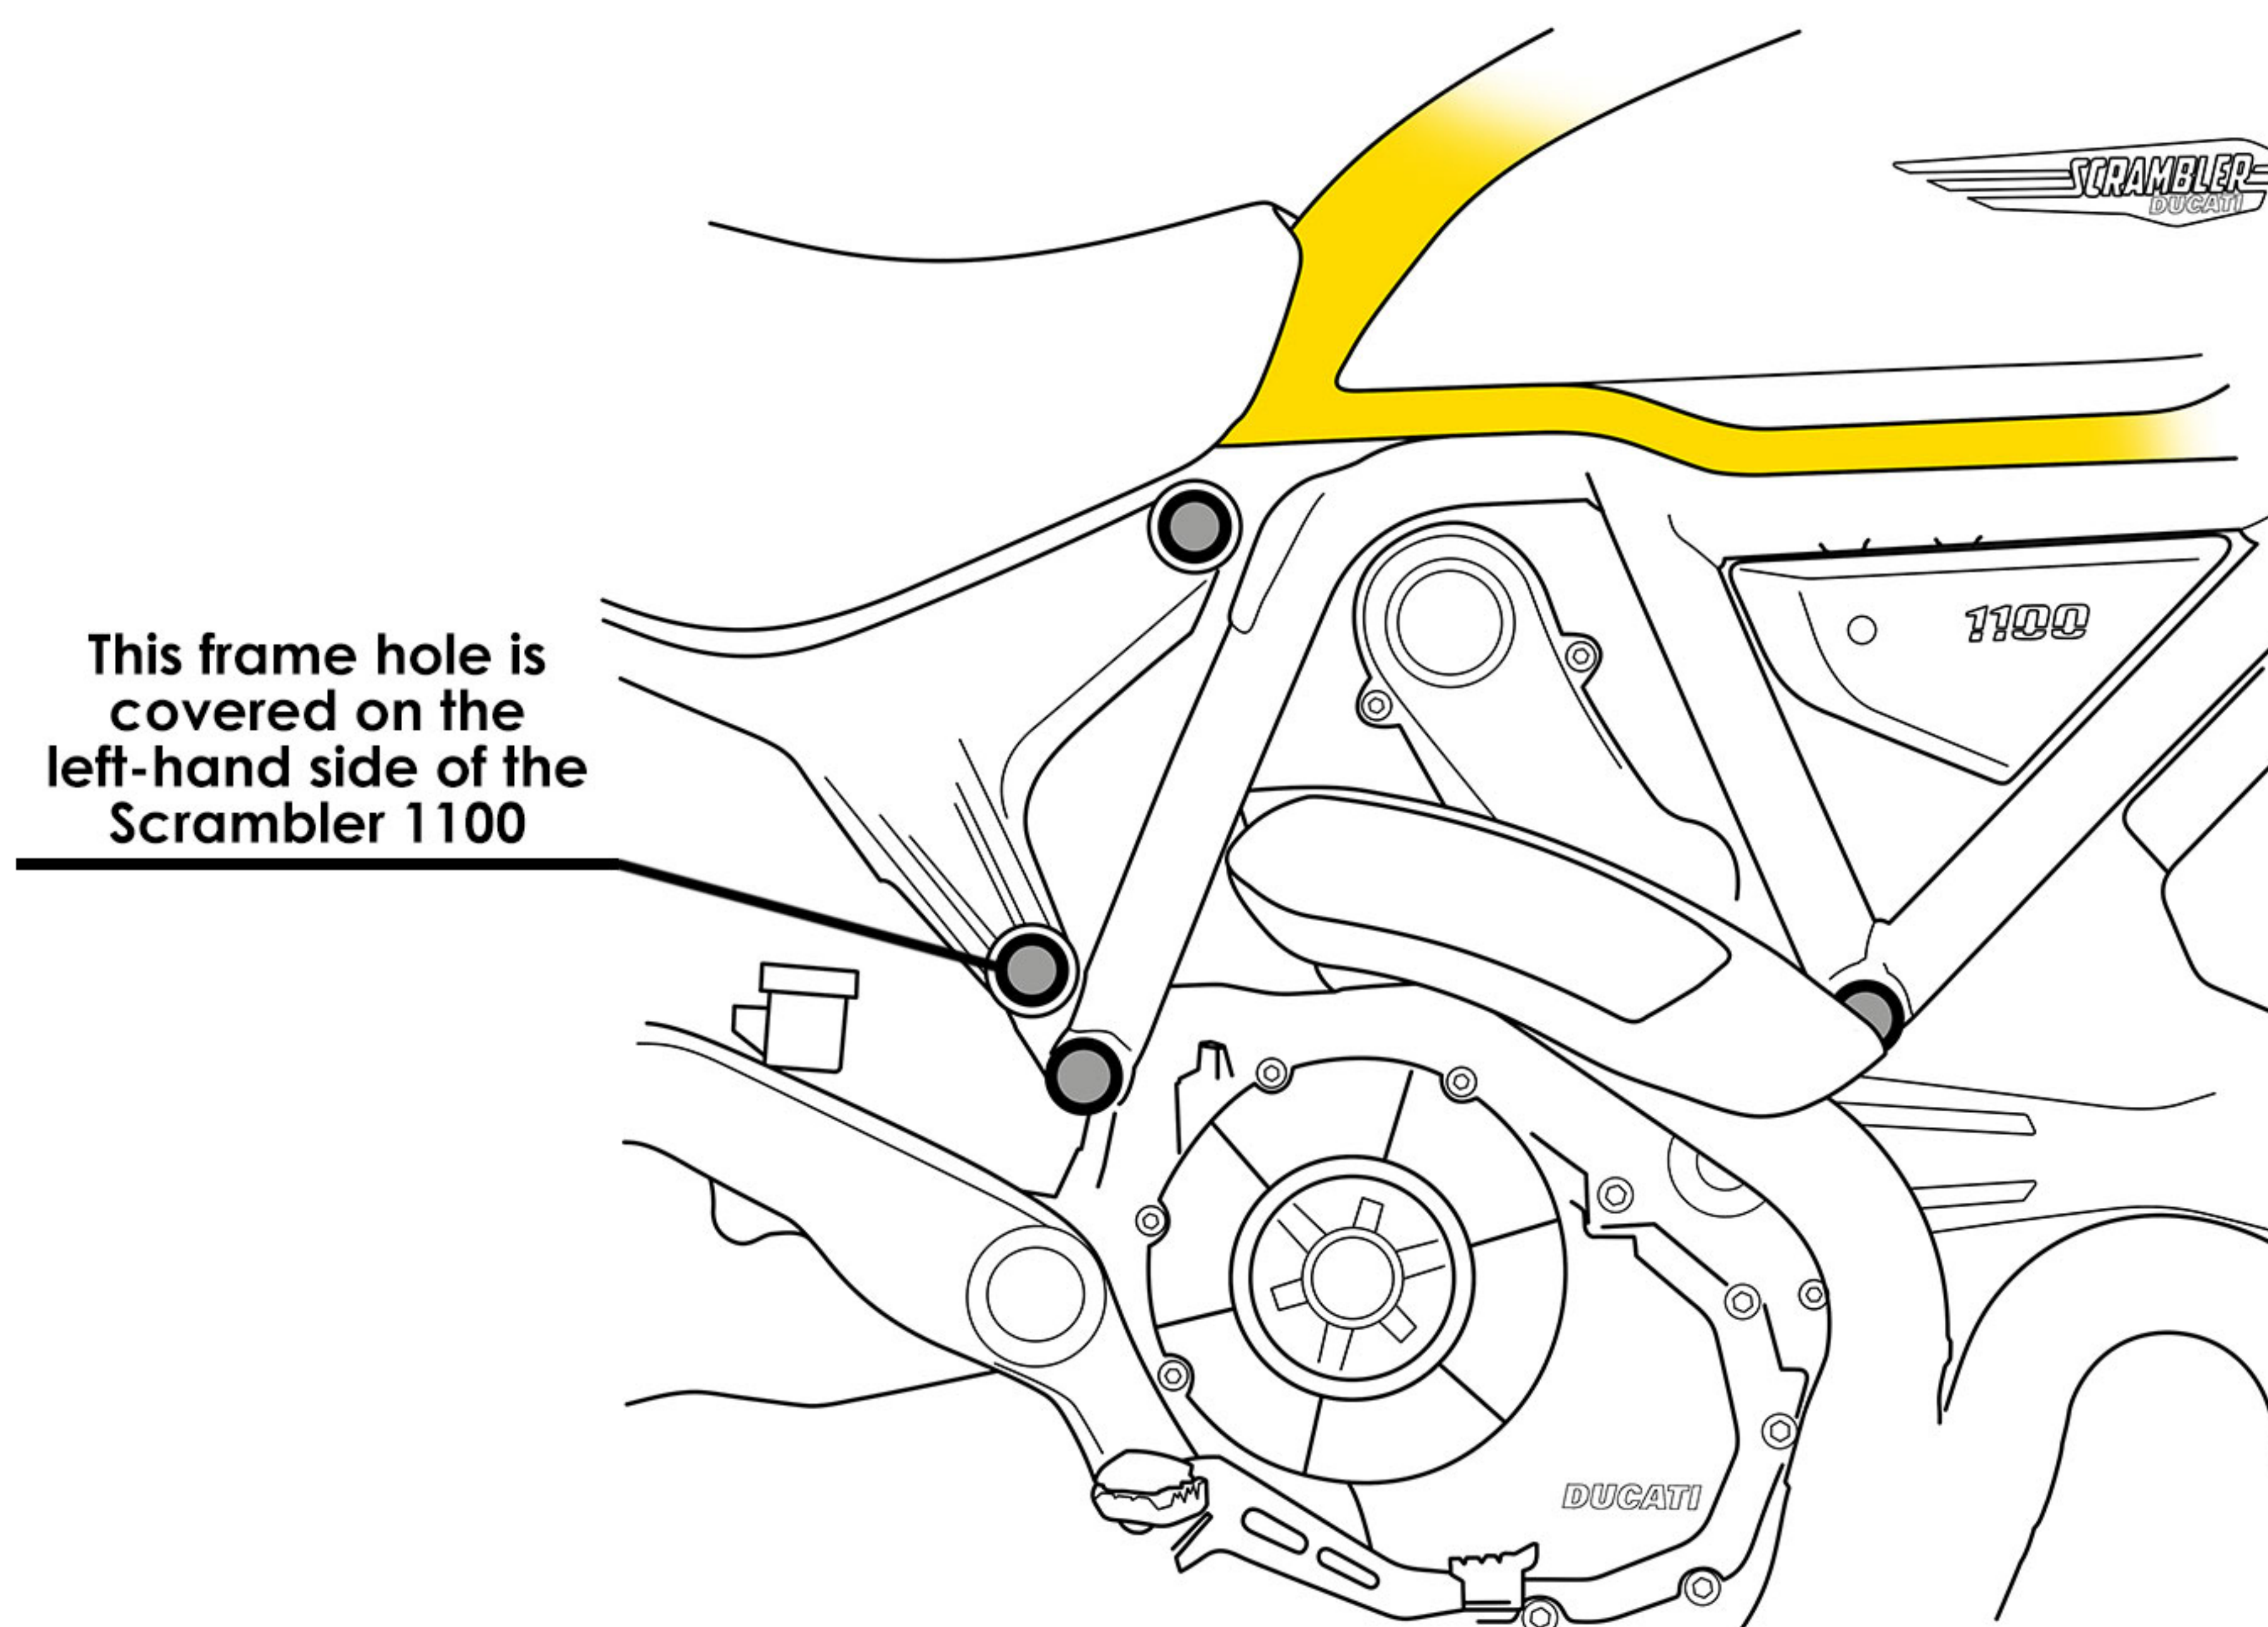

Contact us:

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!



089509 Ducati Scrambler 1100 Frame End Caps Fitting Instructions

Kit Includes:

X7 26mm Cap


CBUNG019

- Ensure holes are free from debris, dirt & moisture before fitting.

Right-hand side shown below

Right-hand side = 4 Caps

Left-hand side = 3 Caps

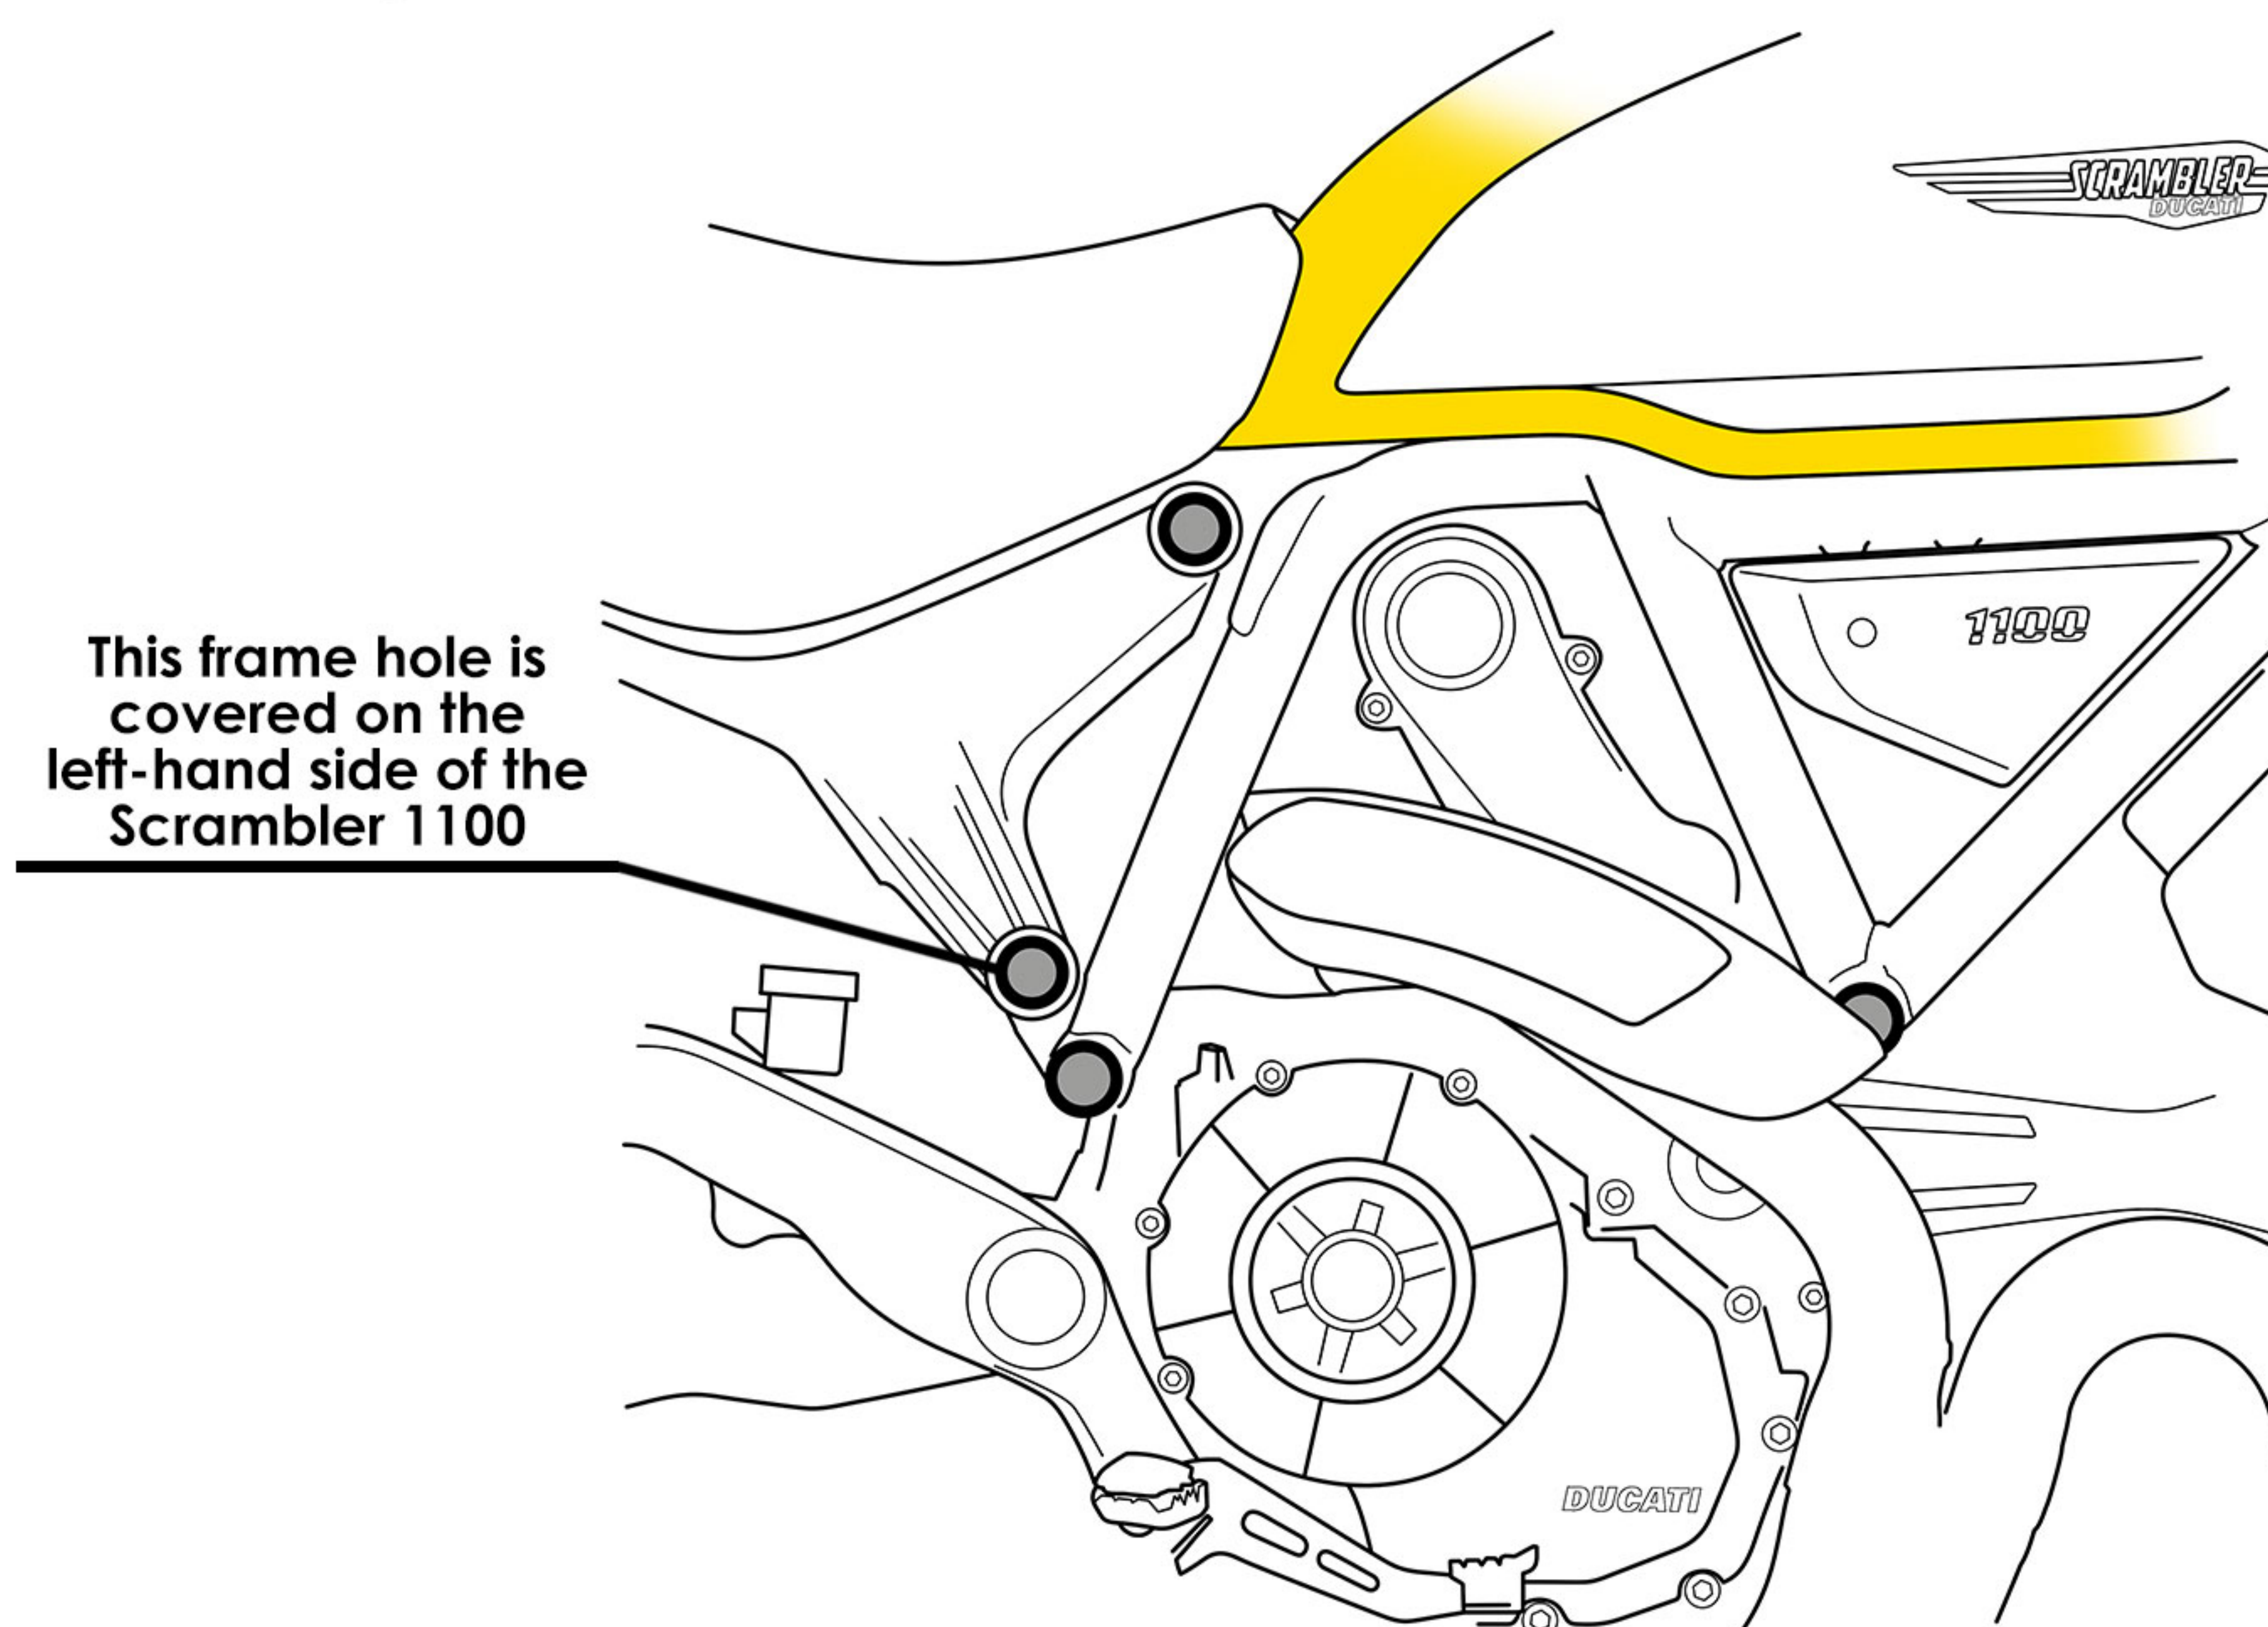

Contact us:

sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

