

09605 Triumph Tiger 1200 Headlight Guard Fitting Instructions



Kit Includes:

1X	C09605	Headlight Guard + Pair of Brackets
2X	CBOLM60001	M6 X 16mm Bolt
2X	CWASM60004	M6 Washer
4X	CFOA0001	Foam Strips (cut to 20mm length)
2X	CPNUT0001	Aluminium Nut Insert (Pre-fitted by Pyramid)

Fitting the Pyramid headlight guard is quick and simple.

- Attach the foam strips as shown in **Fig 1**.
- Remove the 2 OEM bolts shown in **Fig 2** (left and right side of bike).
- Attach the pair of brackets as shown in **Fig 2** using the 2 OEM bolts removed in the previous step. Attach the headlight guard to the brackets using the remaining fittings. The bottom of the headlight guard should rest on the foam strips on top of the beak.
- Check fixings periodically.

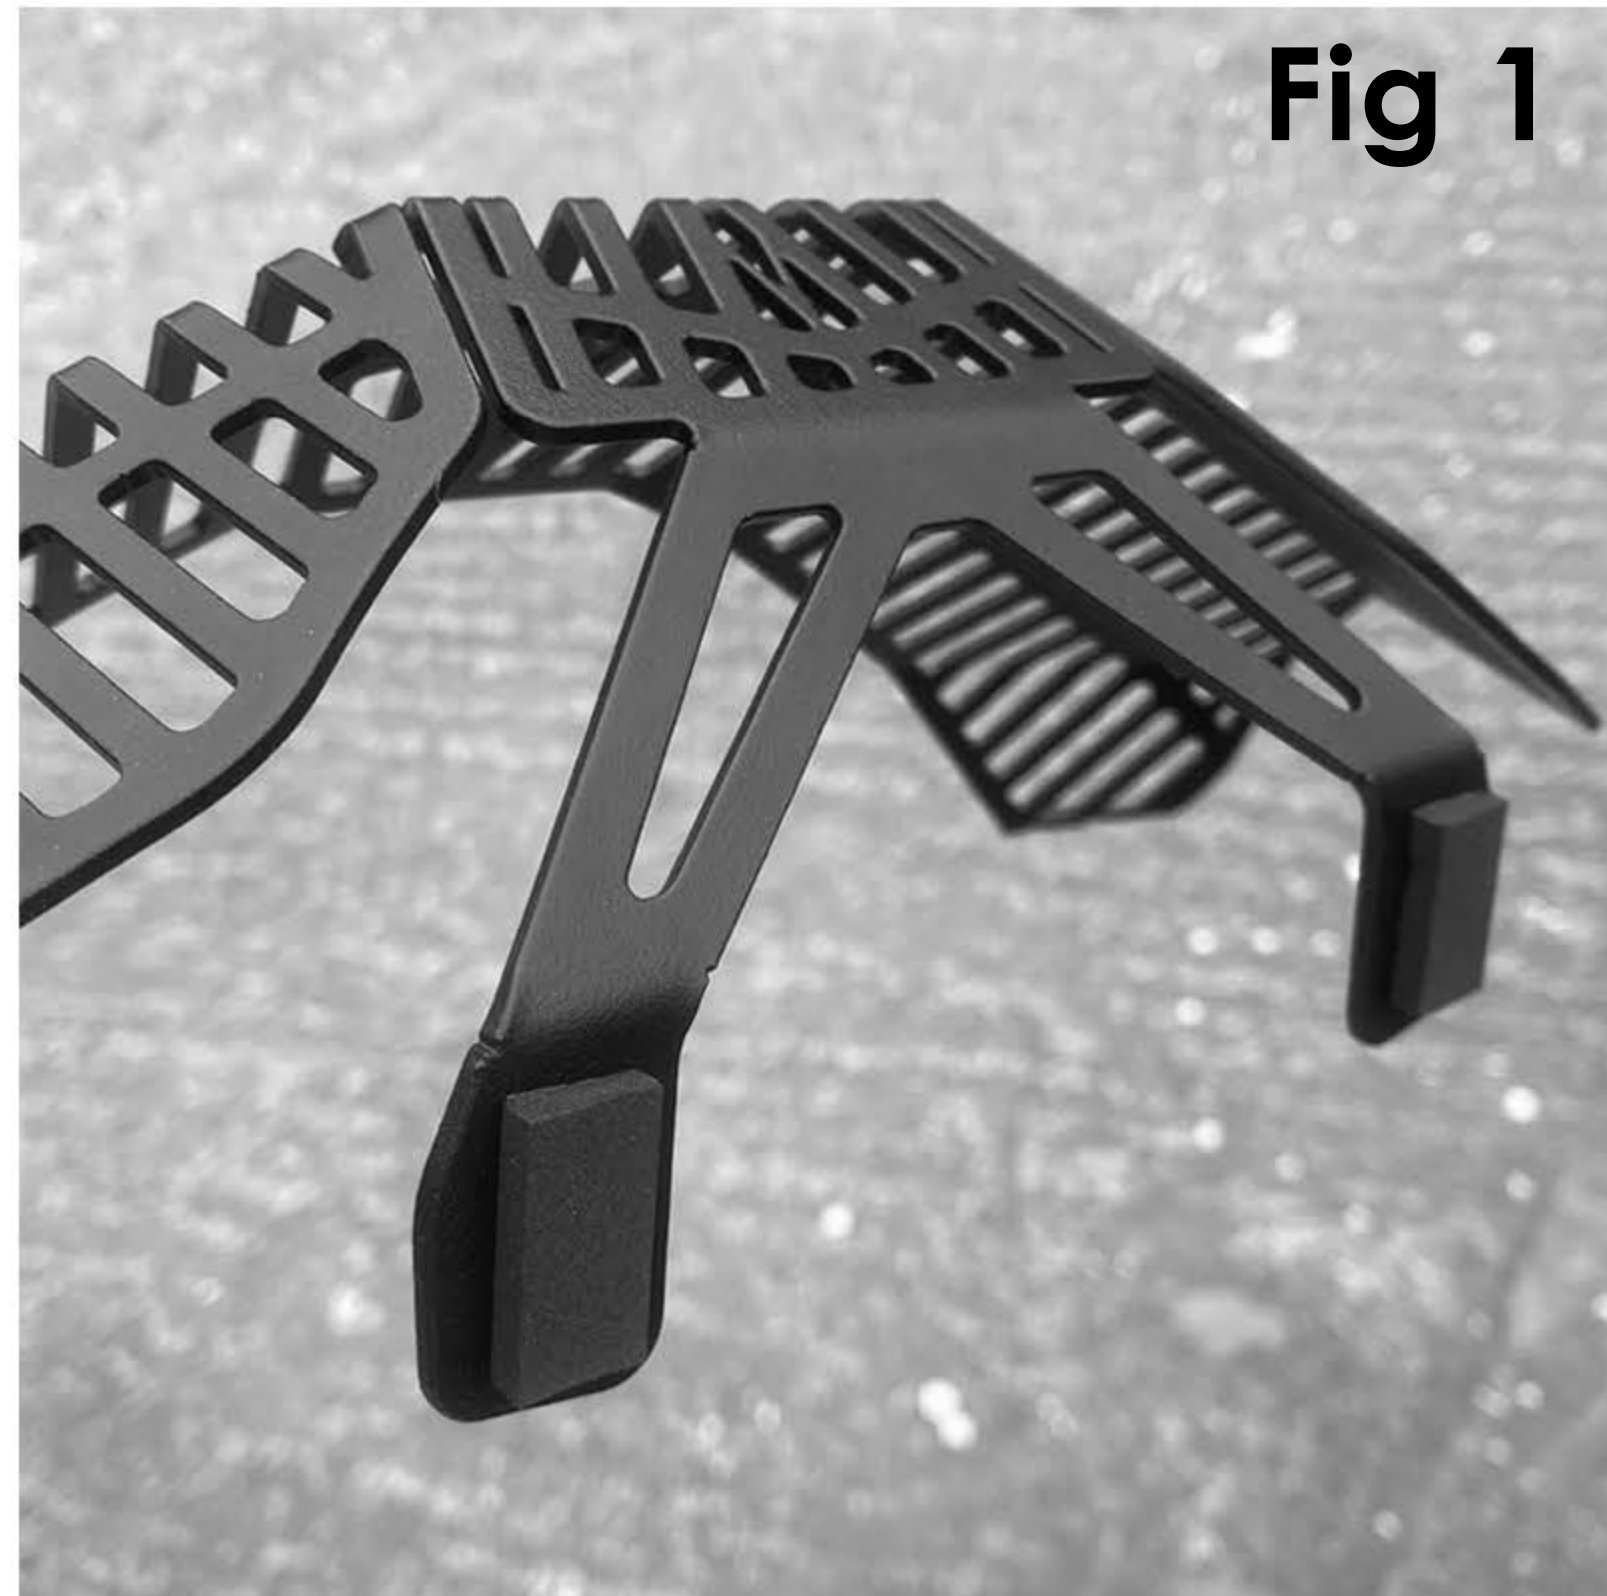


Fig 1

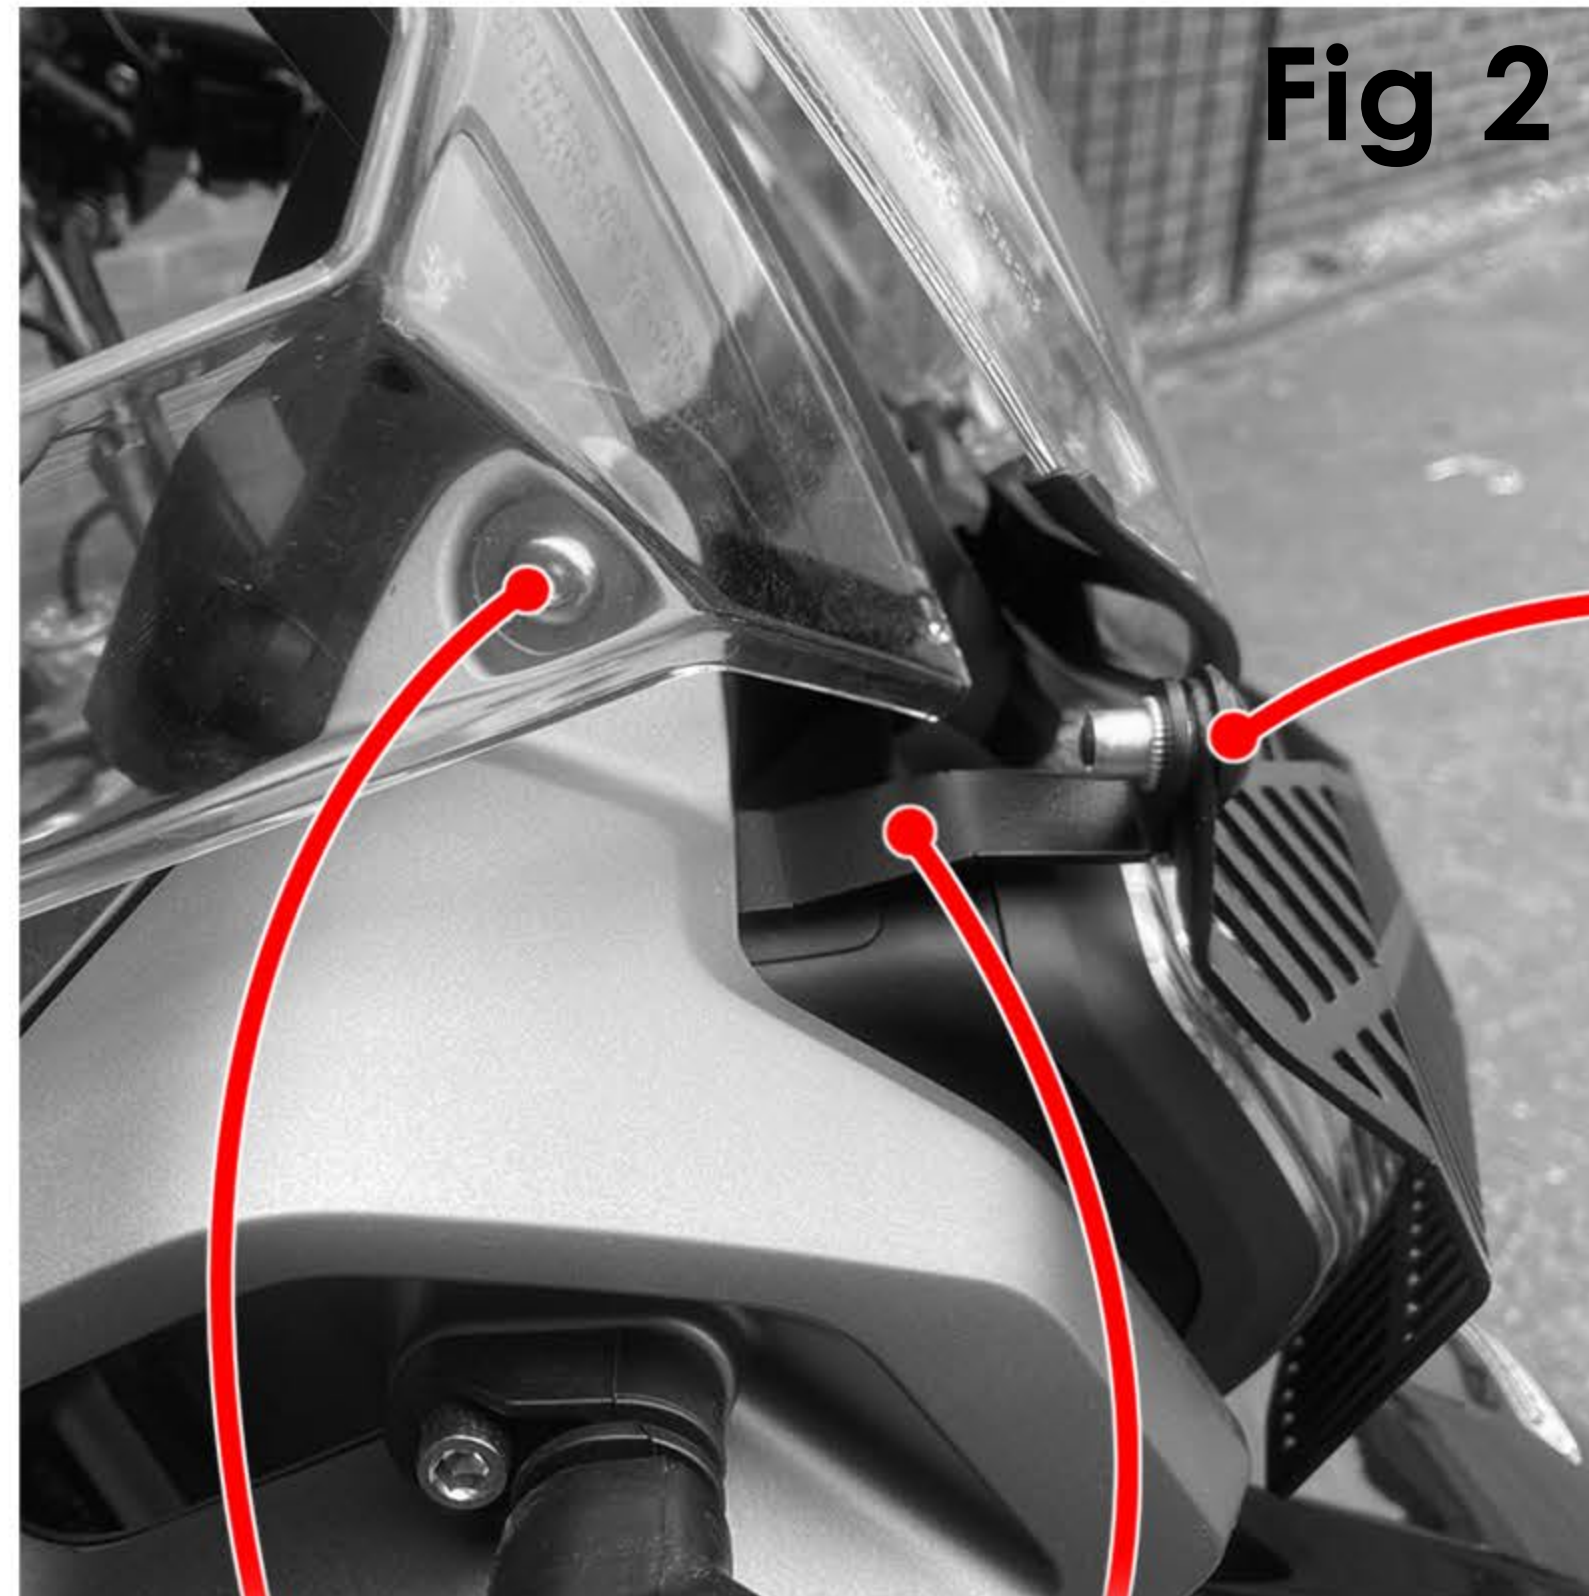


Fig 2

M6 x 16mm Bolt +
M6 Washer

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

OEM bolt

Bracket

09605 Triumph Tiger 1200 Headlight Guard Fitting Instructions



Kit Includes:

1X	C09605	Headlight Guard + Pair of Brackets
2X	CBOLM60001	M6 X 16mm Bolt
2X	CWASM60004	M6 Washer
4X	CFOA0001	Foam Strips (cut to 20mm length)
2X	CPNUT0001	Aluminium Nut Insert (Pre-fitted by Pyramid)

Fitting the Pyramid headlight guard is quick and simple.

- Attach the foam strips as shown in **Fig 1**.
- Remove the 2 OEM bolts shown in **Fig 2** (left and right side of bike).
- Attach the pair of brackets as shown in **Fig 2** using the 2 OEM bolts removed in the previous step. Attach the headlight guard to the brackets using the remaining fittings. The bottom of the headlight guard should rest on the foam strips on top of the beak.
- Check fixings periodically.

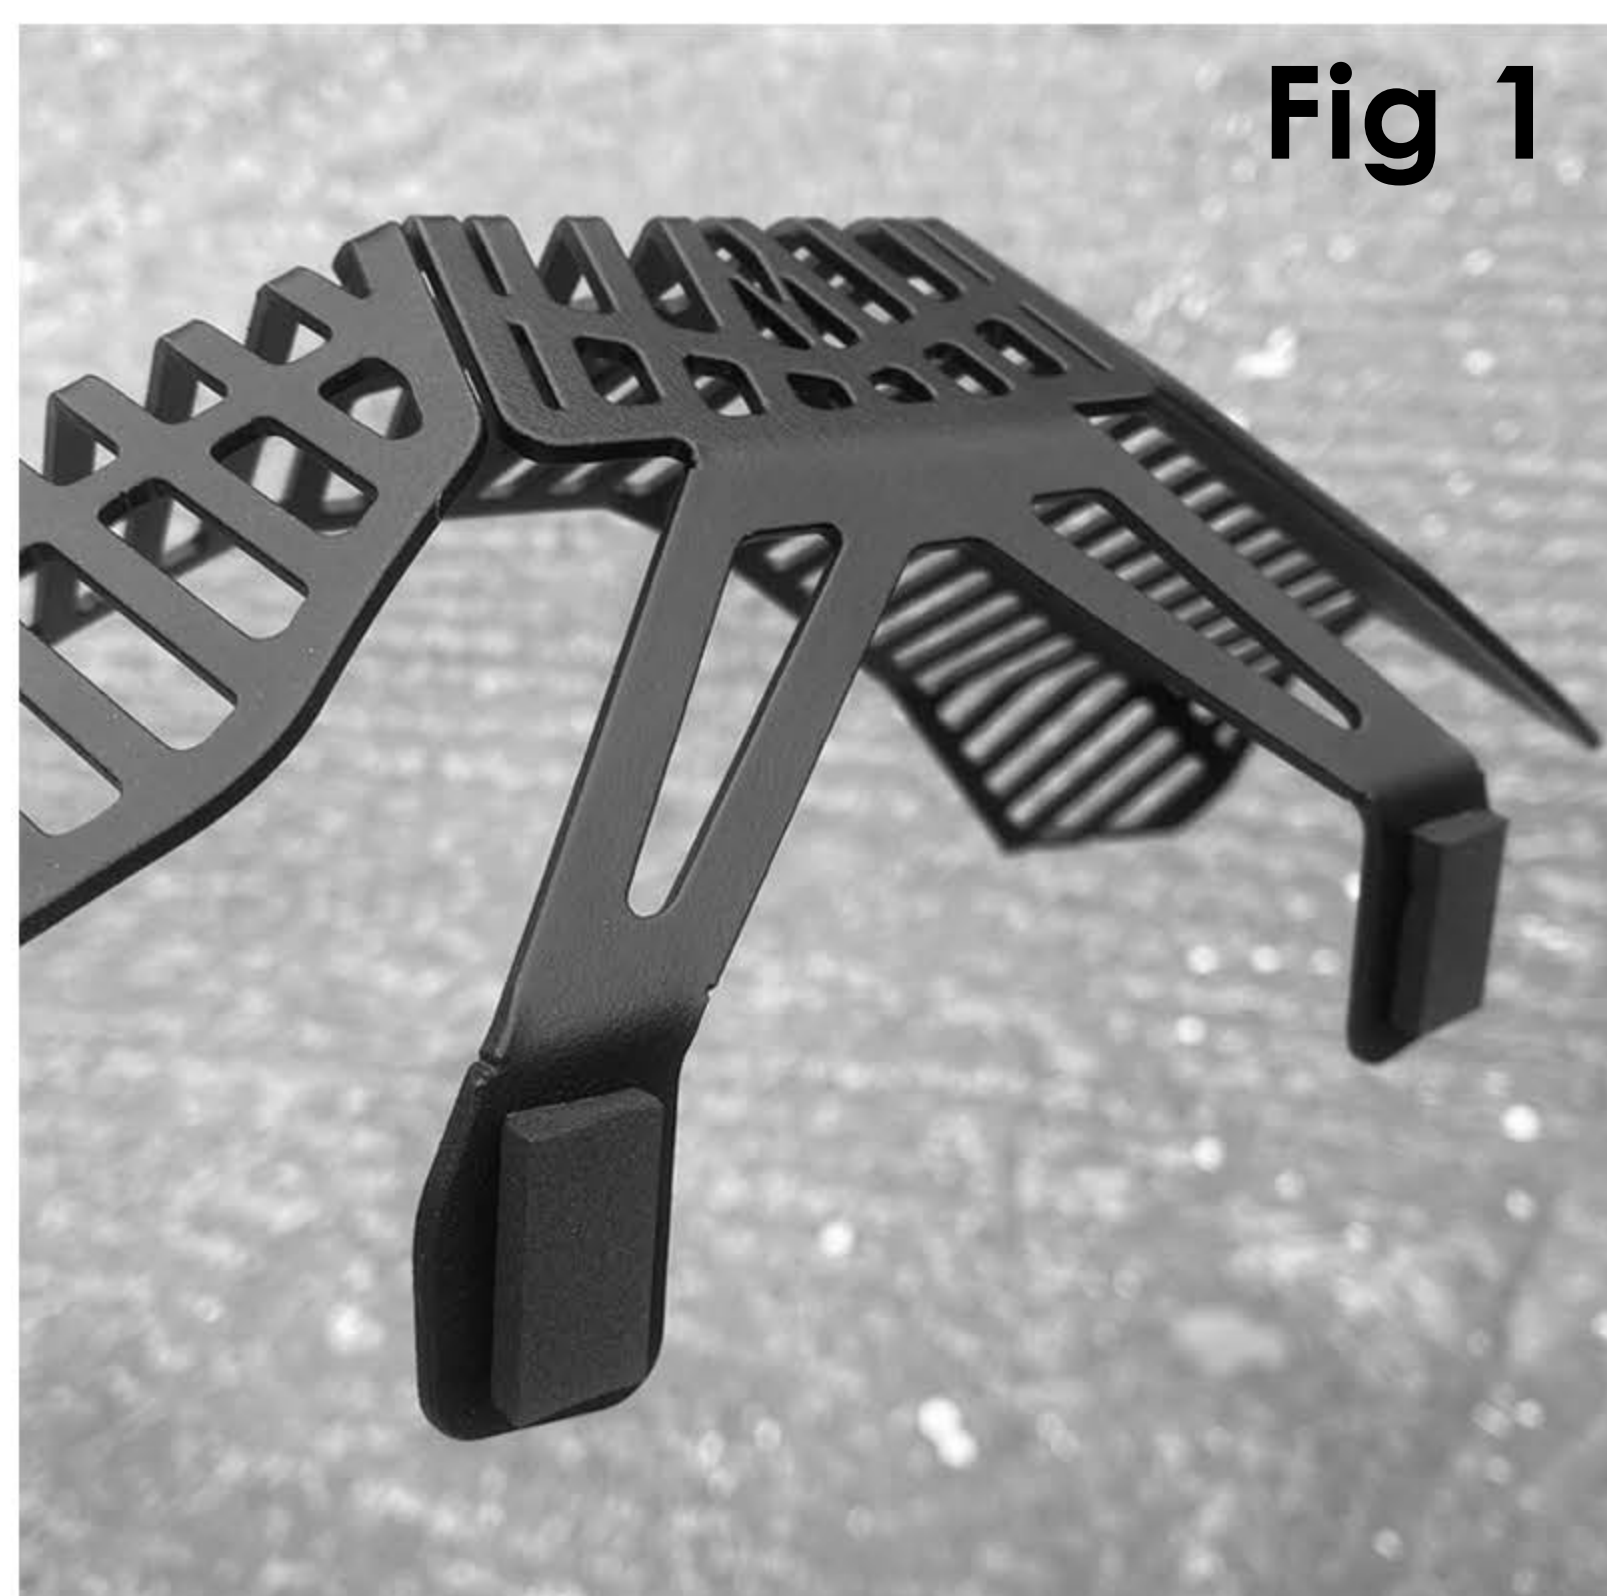


Fig 1

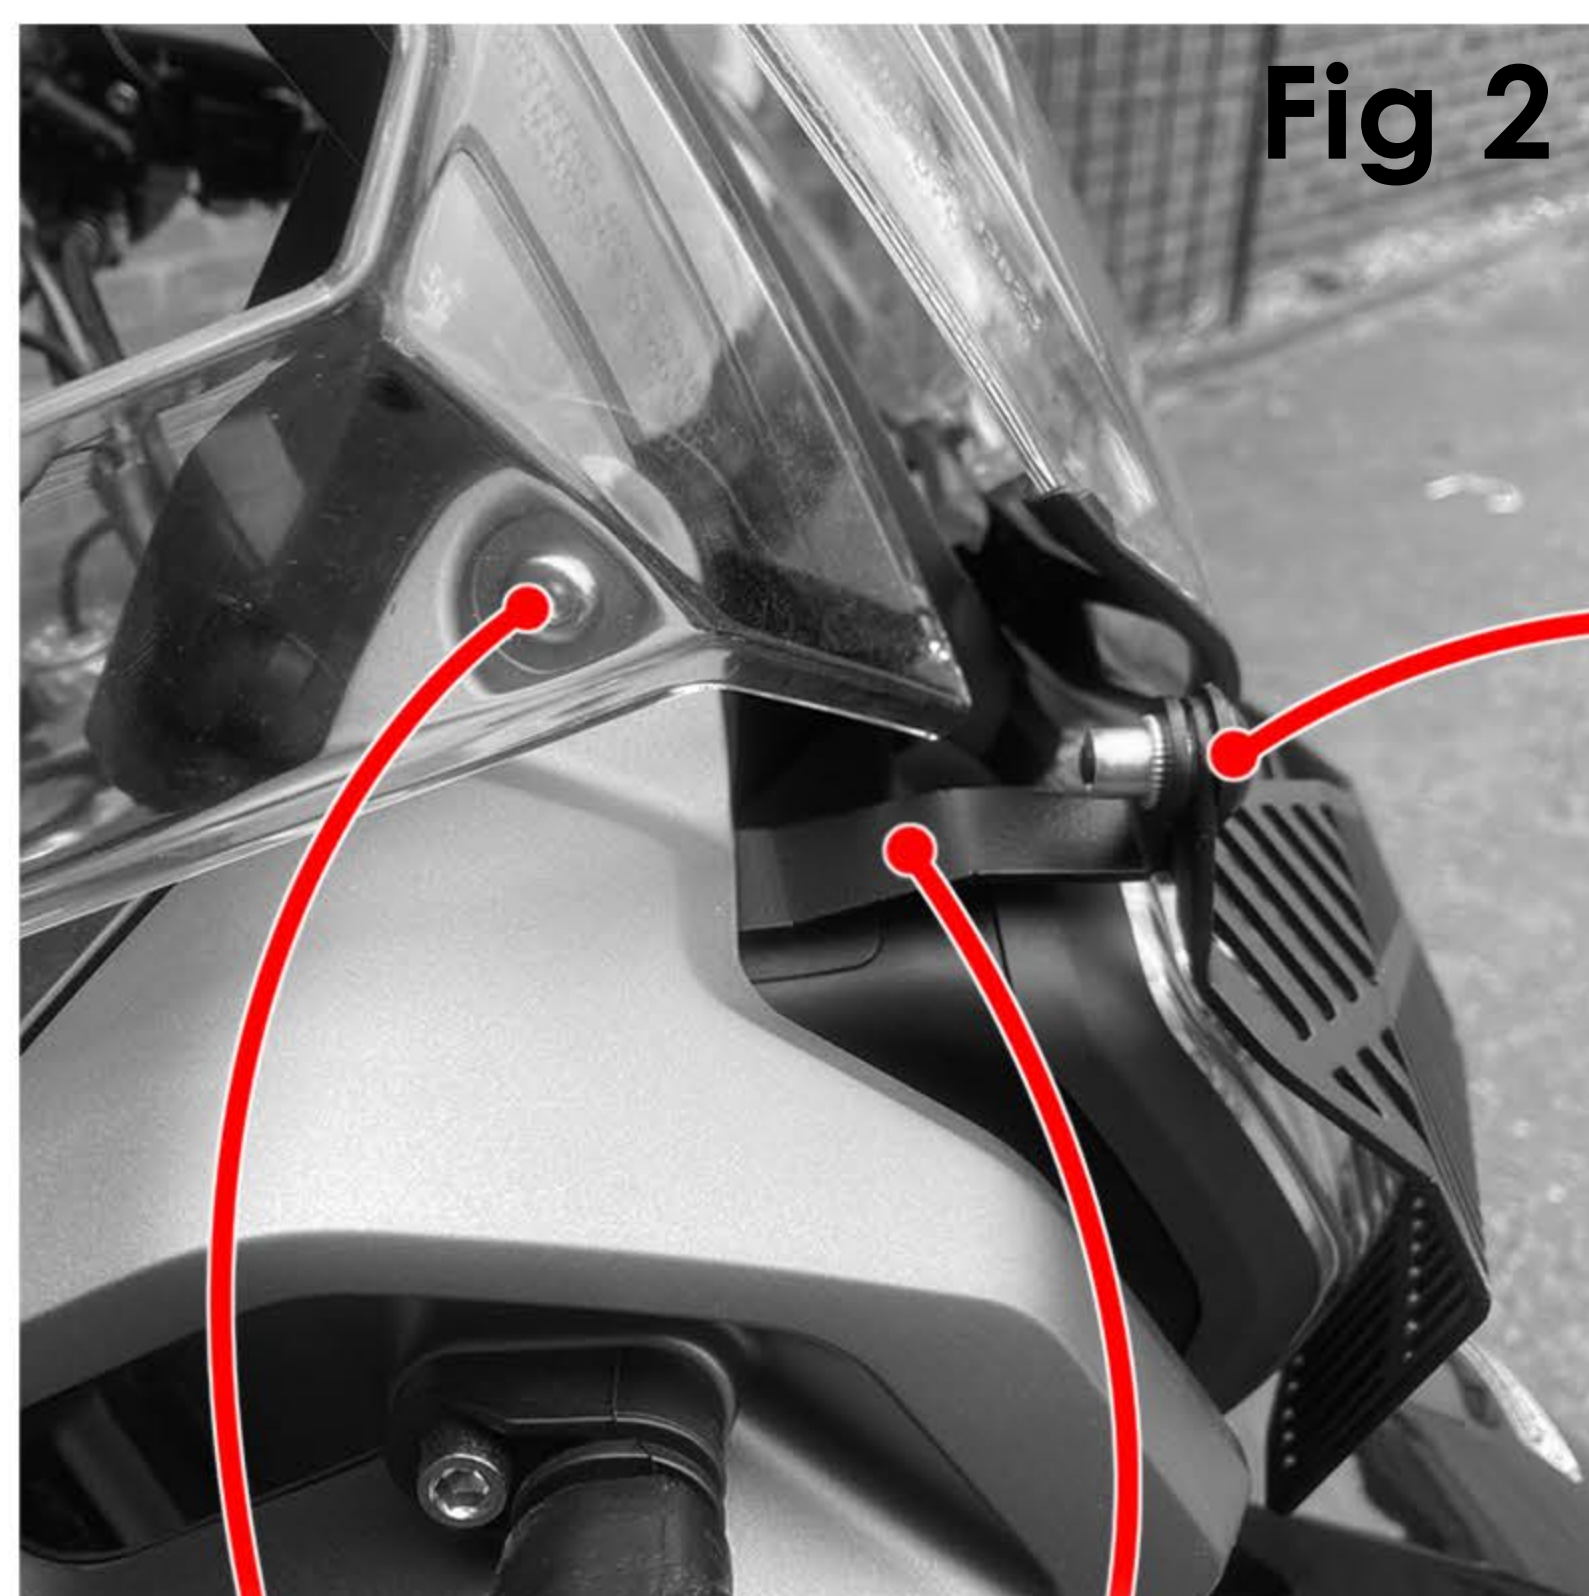


Fig 2

M6 x 16mm Bolt +
M6 Washer

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

OEM bolt

Bracket