




# 19664 Triumph Tiger 800 & Explorer 1200 Headlight Guard Fitting Instructions

Kit includes:


4X M5 X 70mm Button Head Socket Bolts	*
4X M5 Steel Washers	*
12X Black Spacers	*

- Remove the four OEM Bolts highlighted **RED** in **Fig 1**.
- Prepare the supplied fittings in the order shown in **Fig 2**. This will need to be repeated three more times for each corner of the headlight.
- Fit the Pyramid Headlight Guard to the mounting points mentioned in **Fig 1** using the assembly shown in **Fig 2**. Fasten all fittings evenly - check fittings periodically.

**Fig 1**

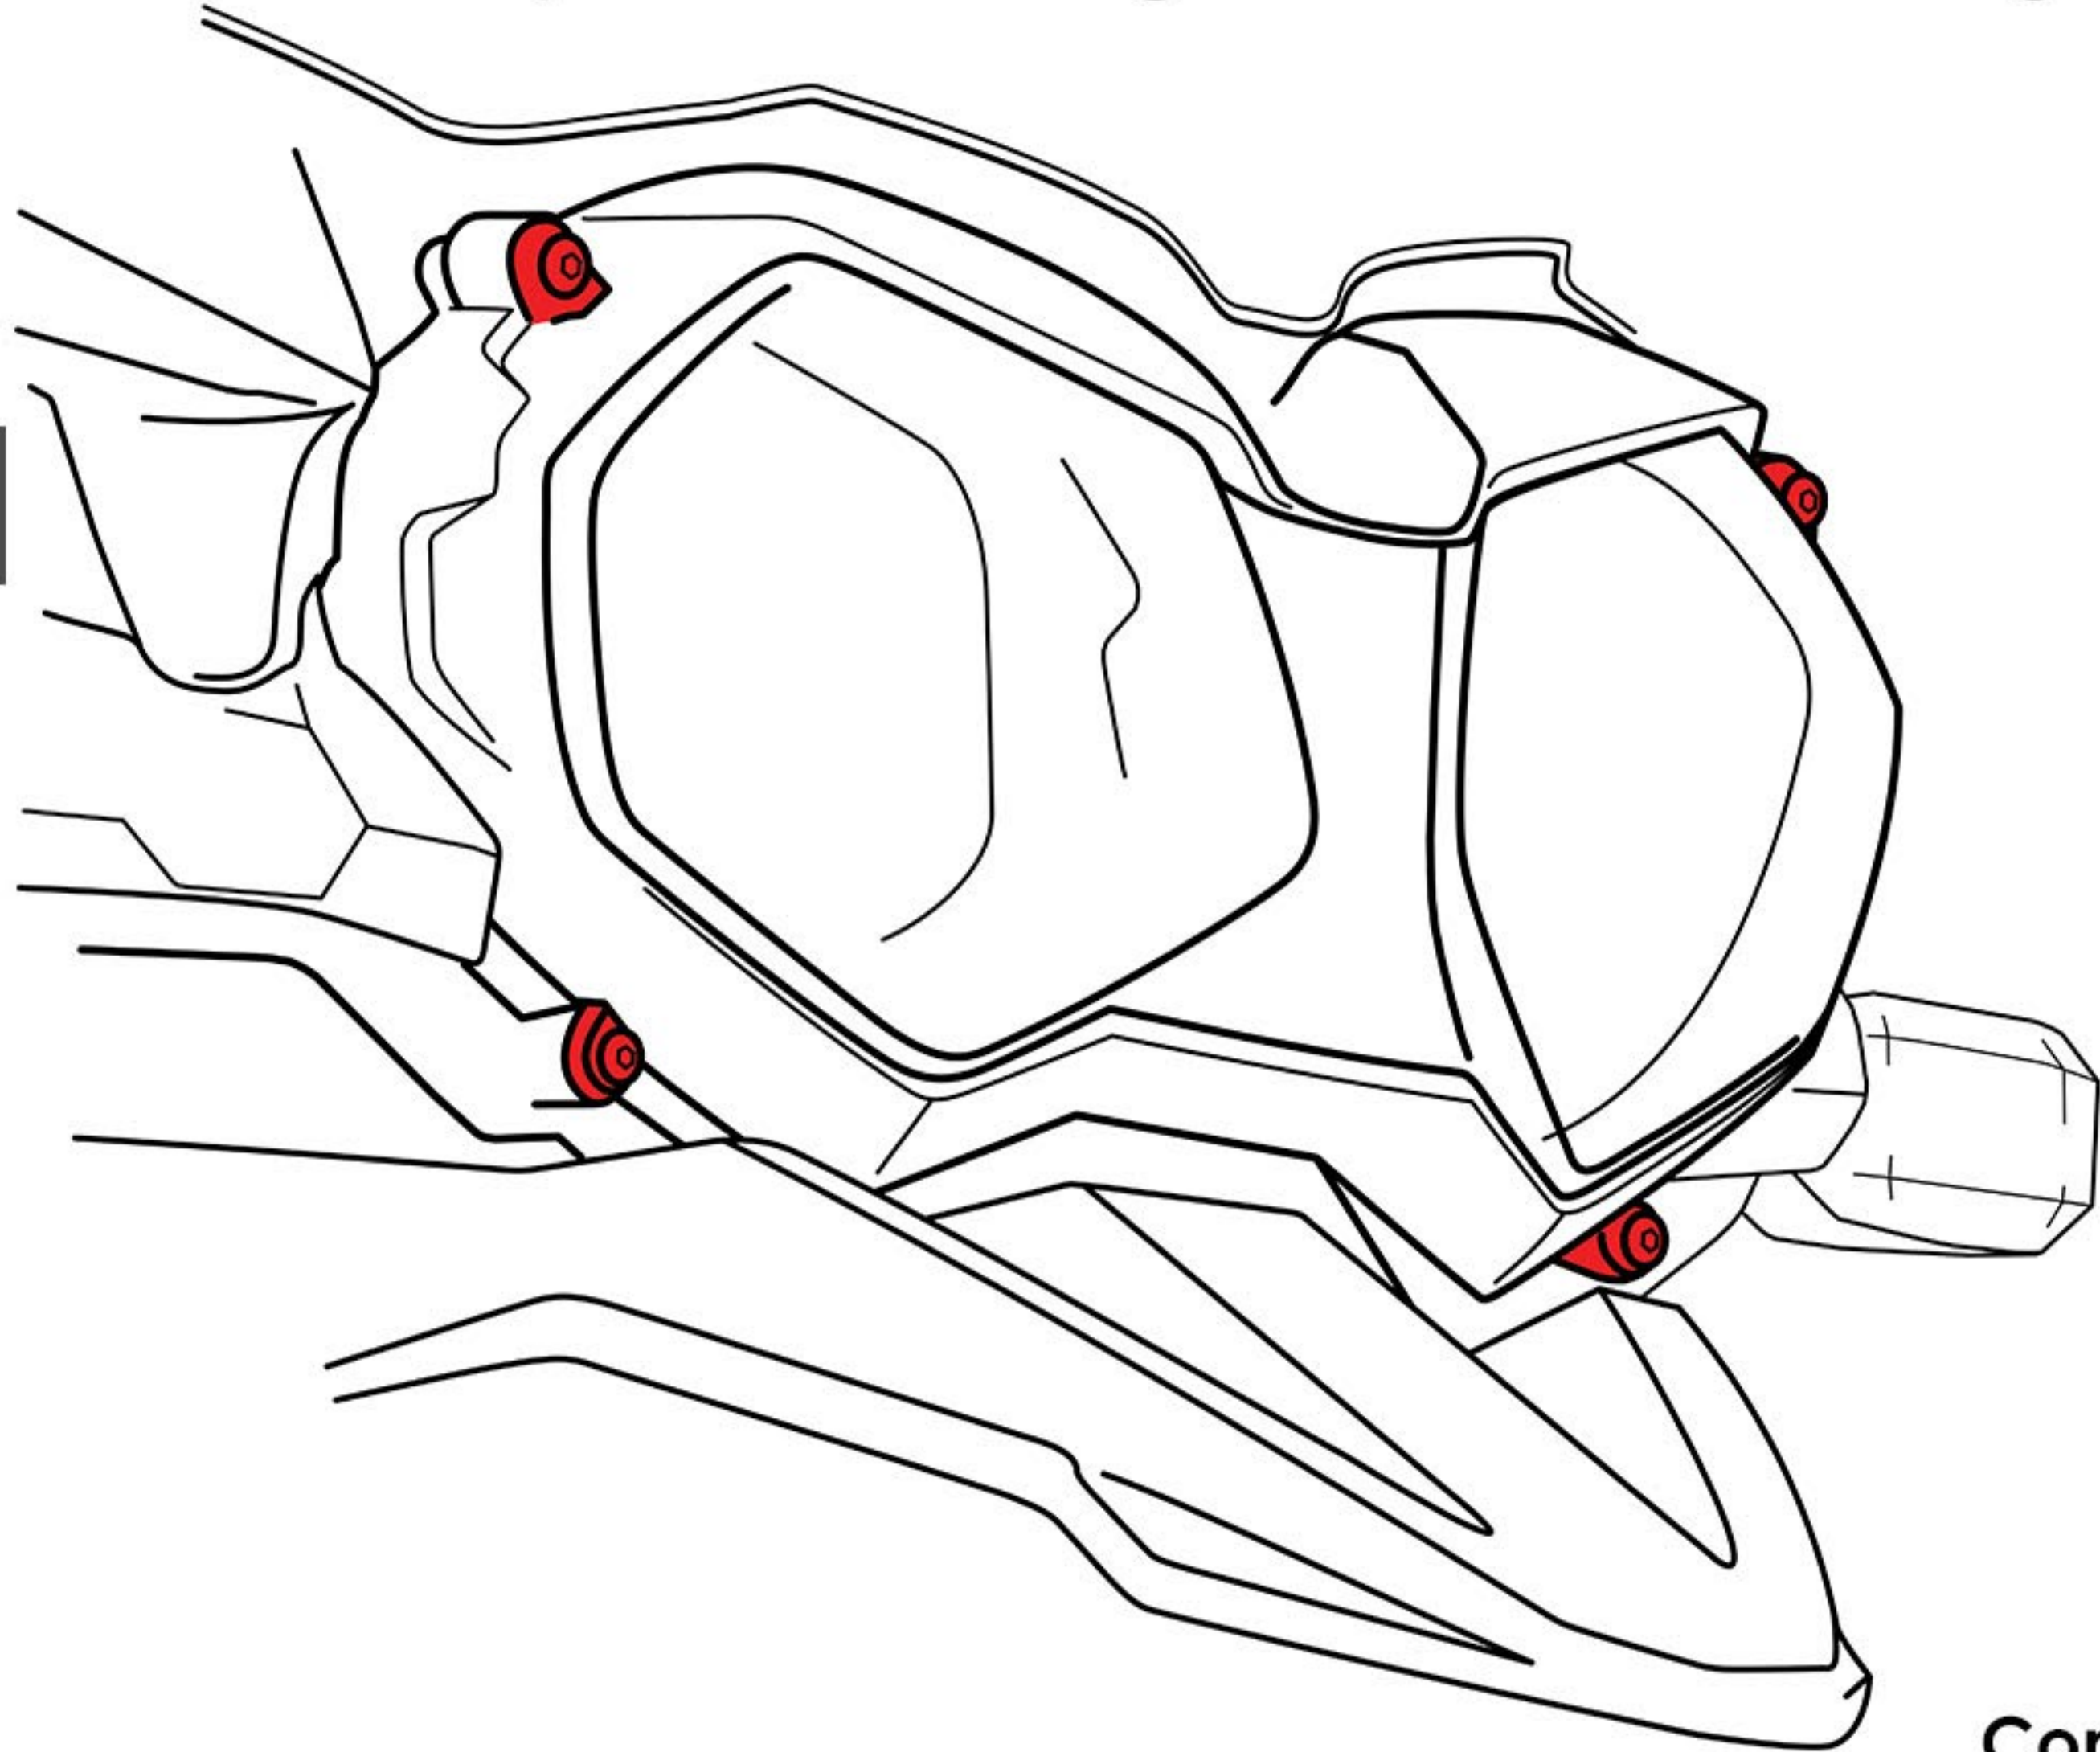

**Fig 2**

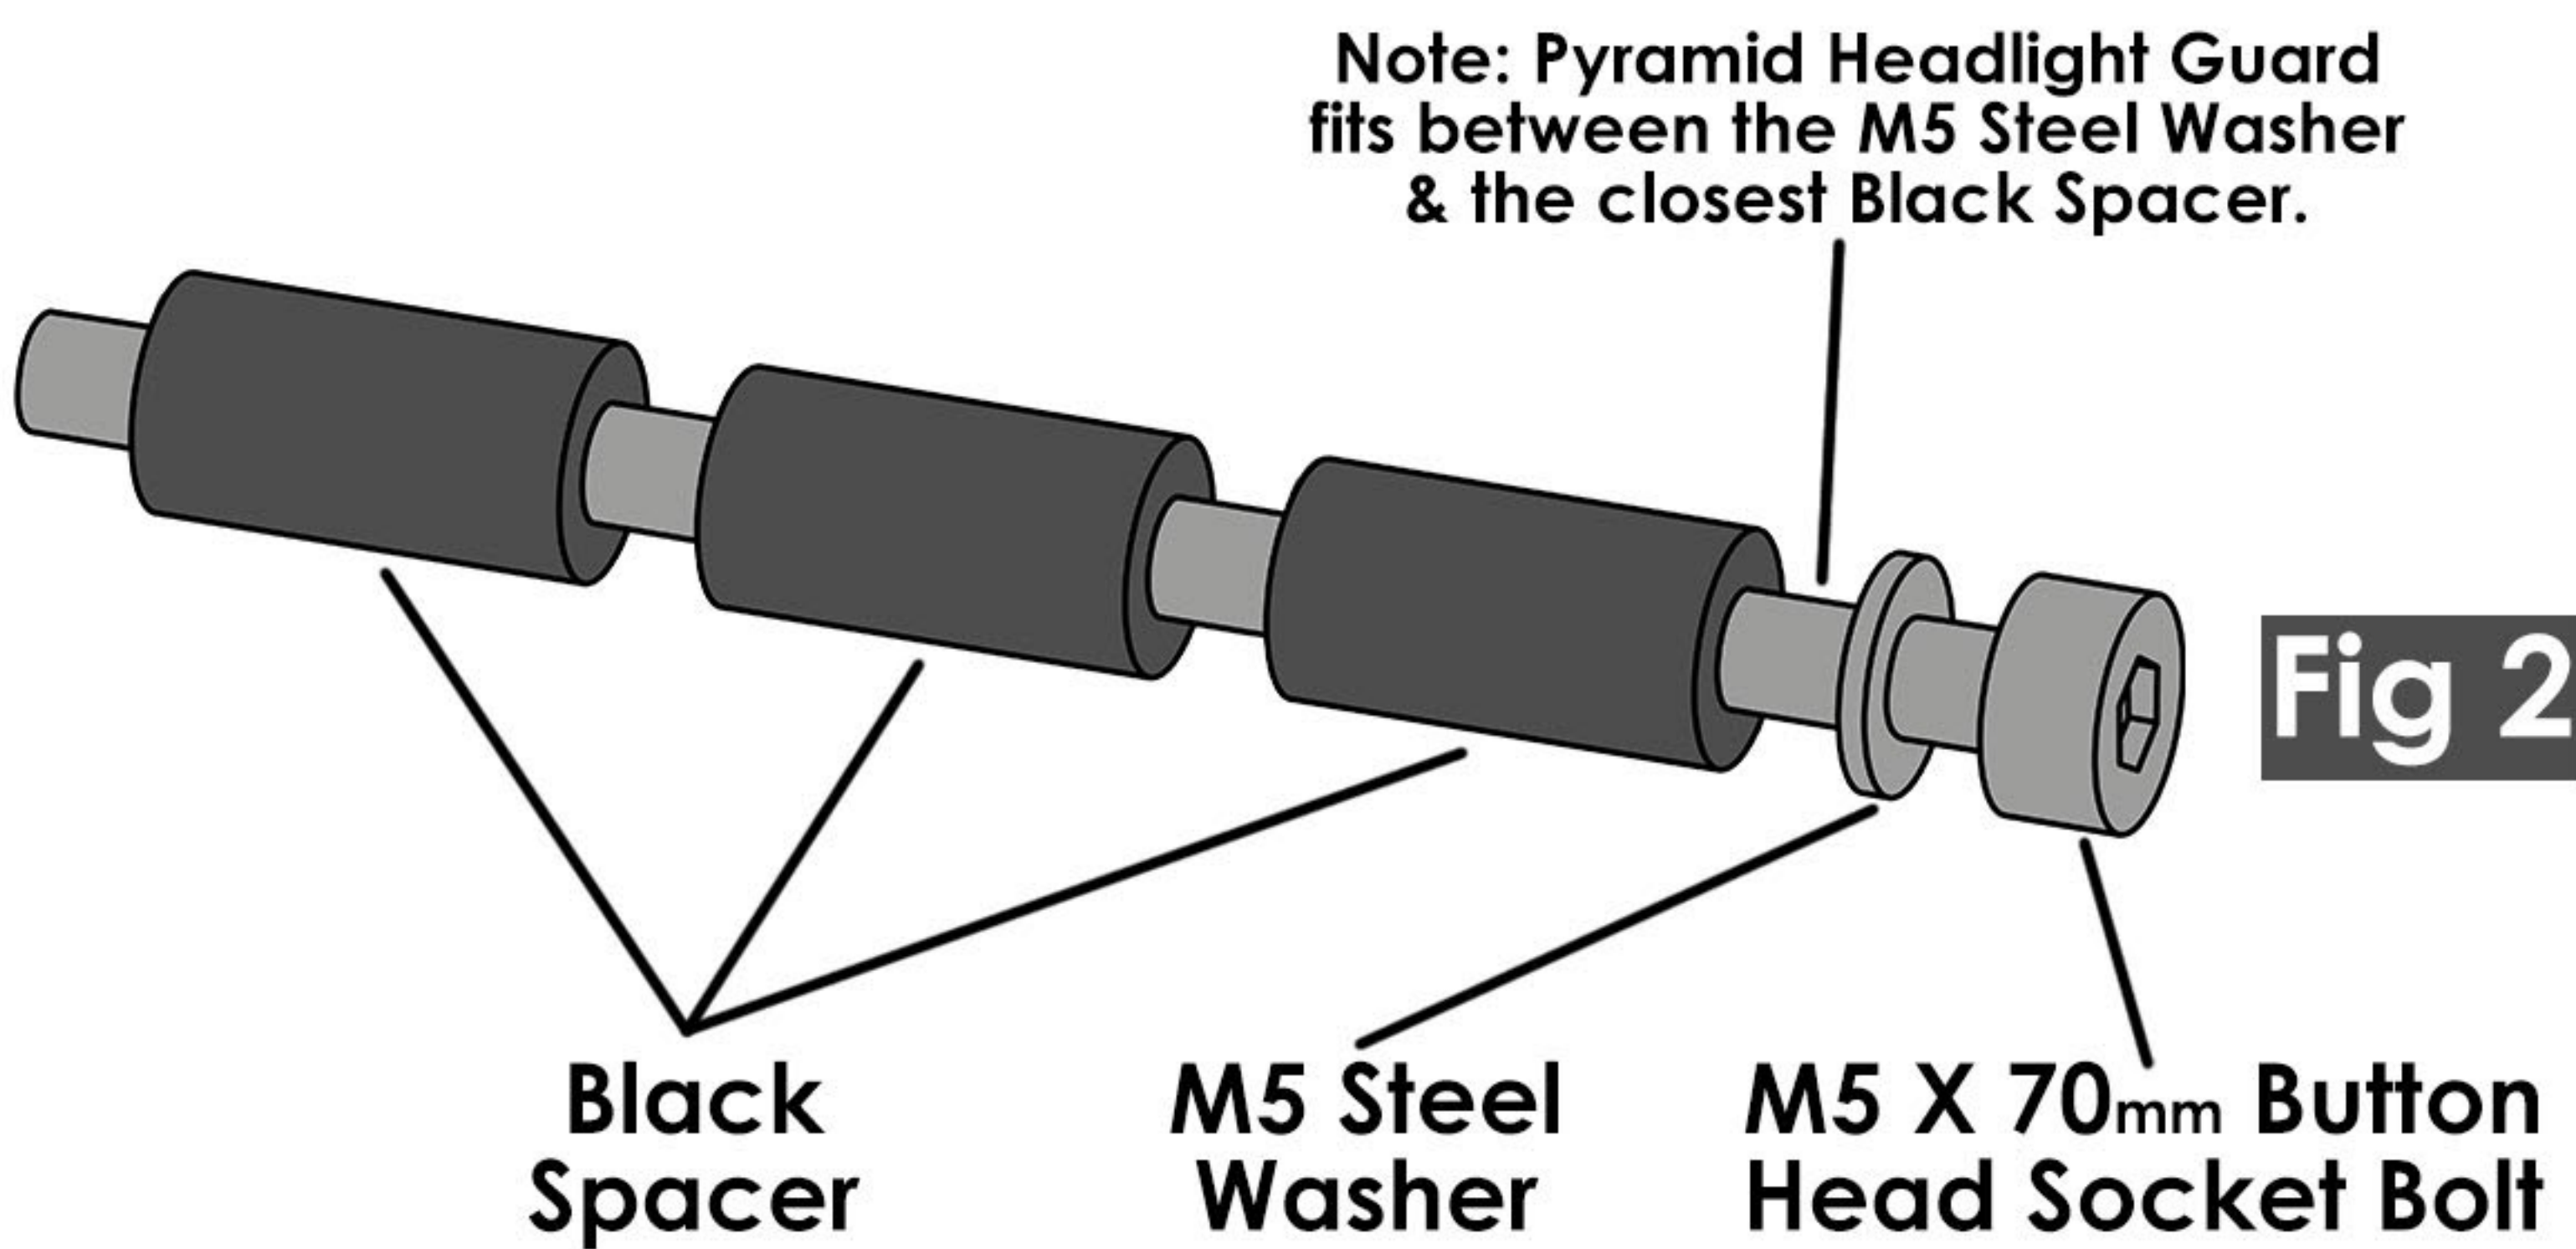

Contact us:  
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!




# 19664 Triumph Tiger 800 & Explorer 1200 Headlight Guard Fitting Instructions

Kit includes:


4X M5 X 70mm Button Head Socket Bolts	*
4X M5 Steel Washers	*
12X Black Spacers	*

- Remove the four OEM Bolts highlighted **RED** in **Fig 1**.
- Prepare the supplied fittings in the order shown in **Fig 2**. This will need to be repeated three more times for each corner of the headlight.
- Fit the Pyramid Headlight Guard to the mounting points mentioned in **Fig 1** using the assembly shown in **Fig 2**. Fasten all fittings evenly - check fittings periodically.

**Fig 1**

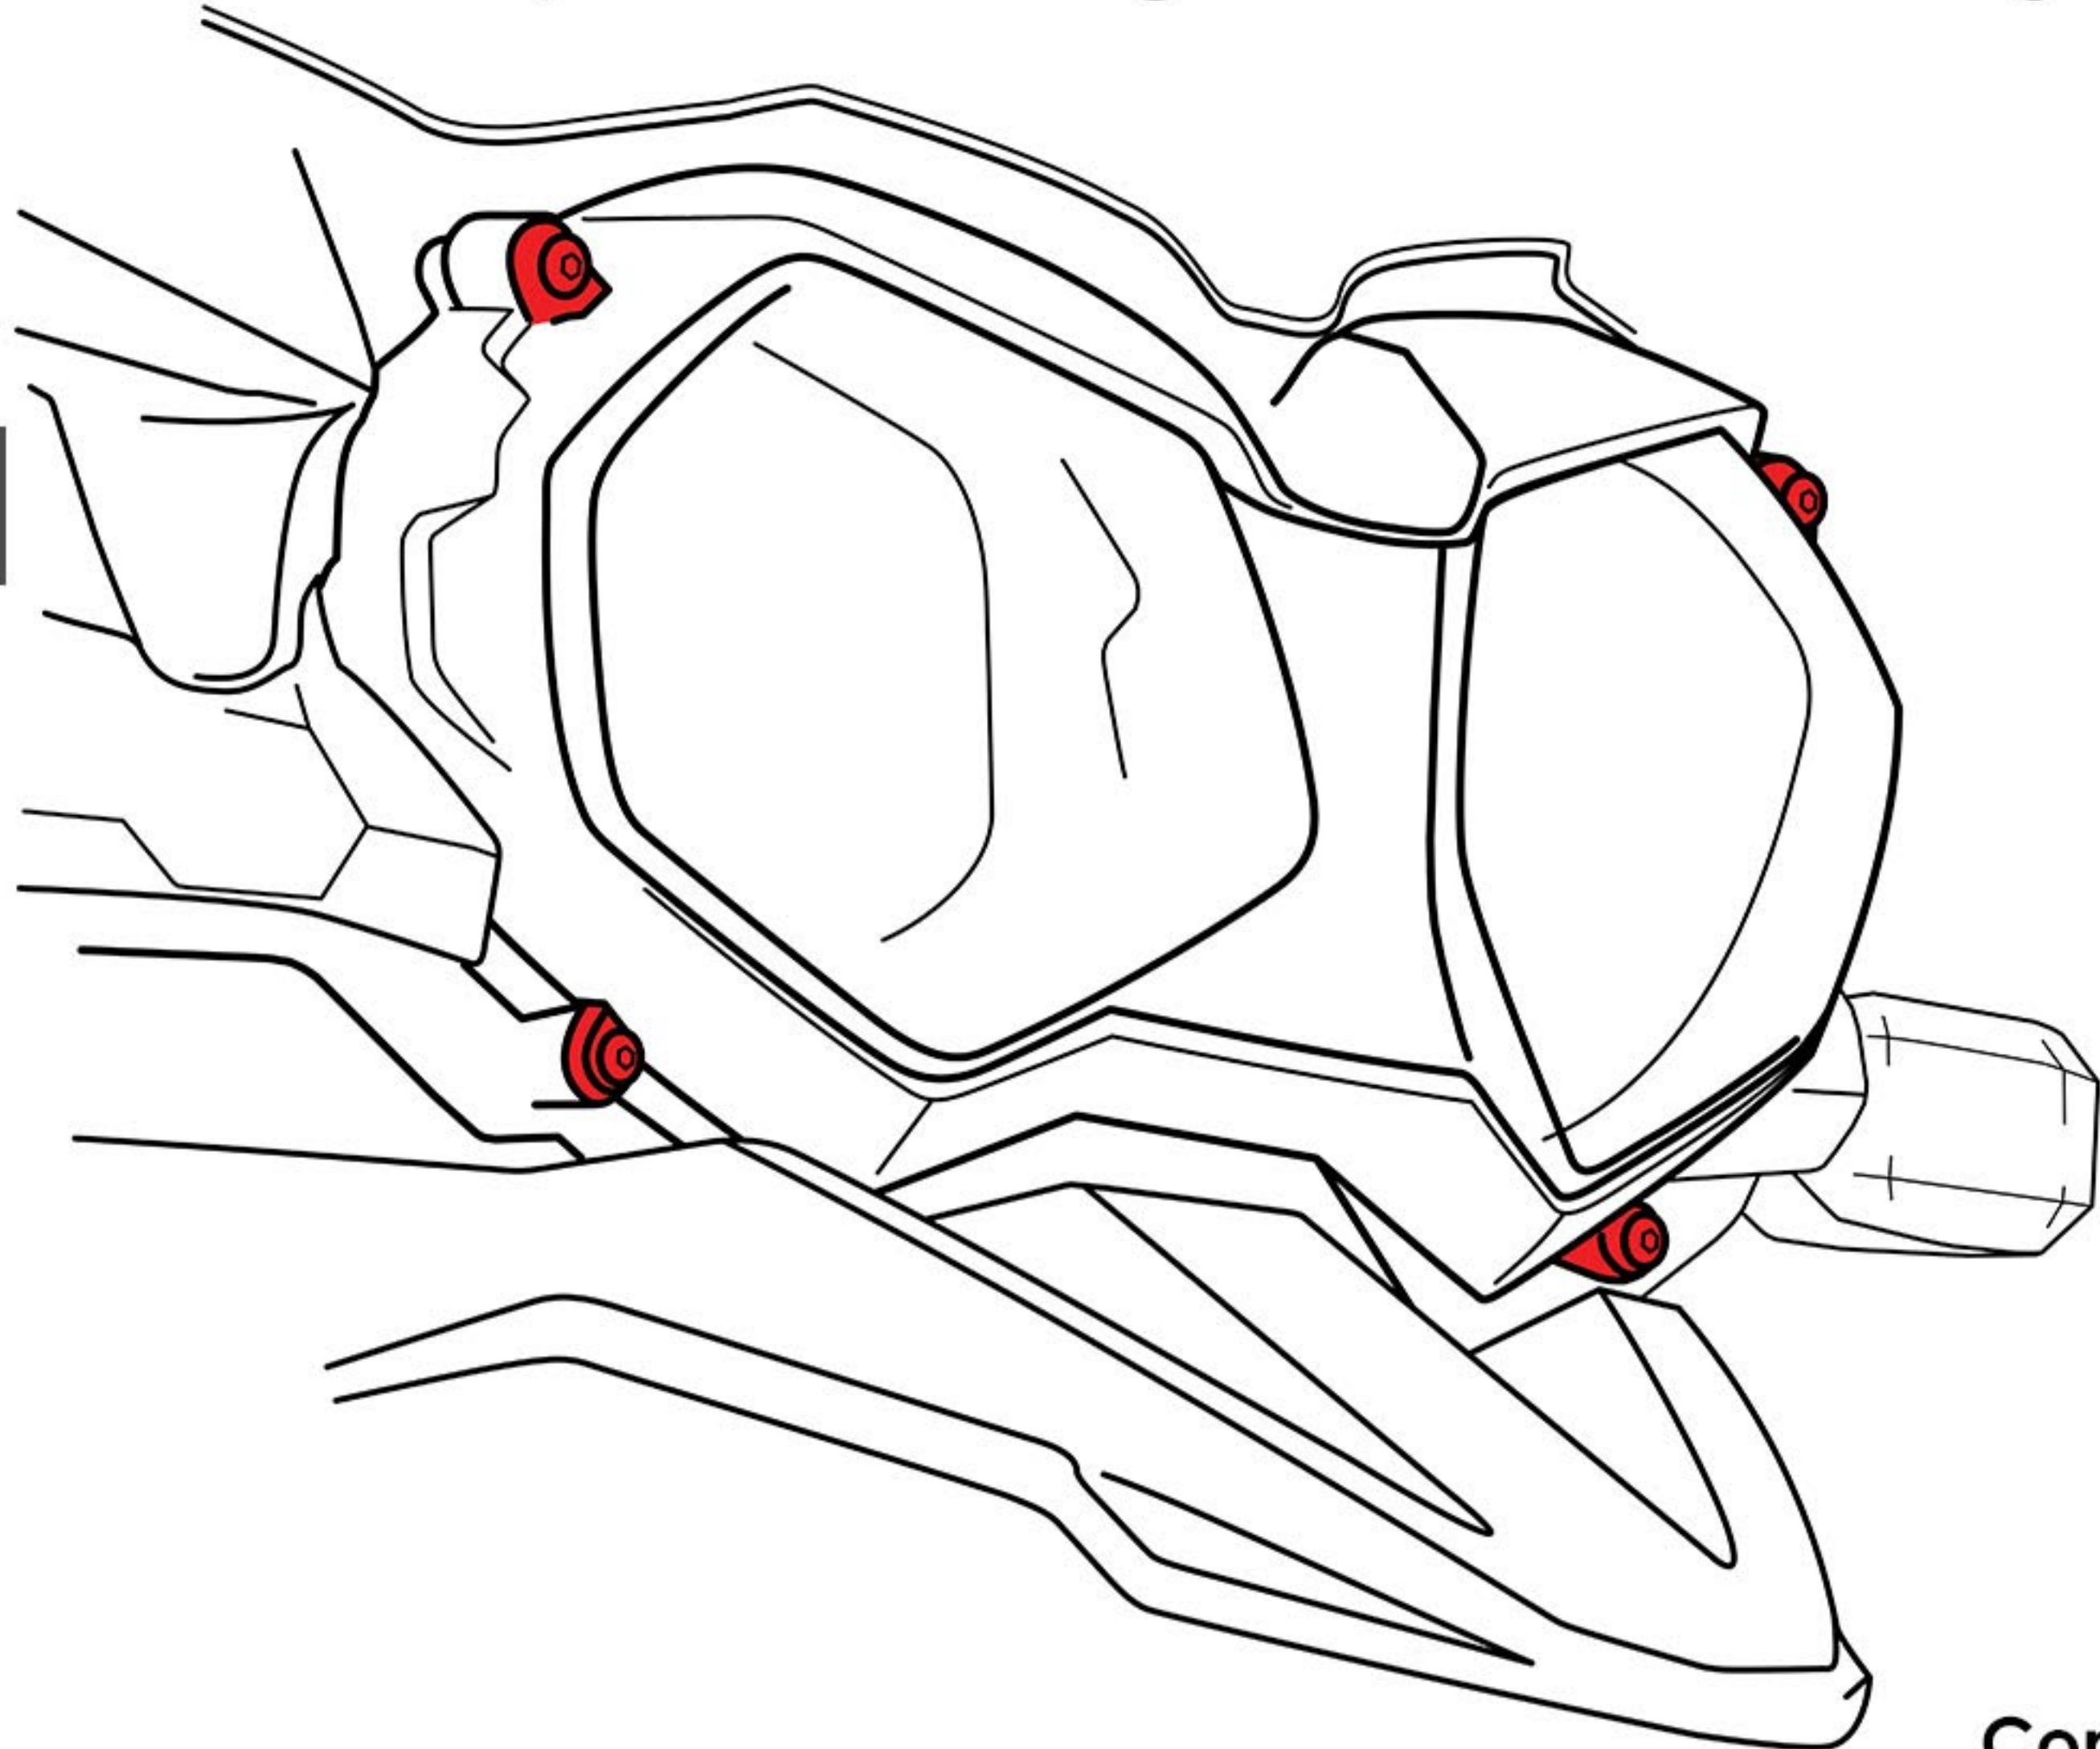

**Fig 2**

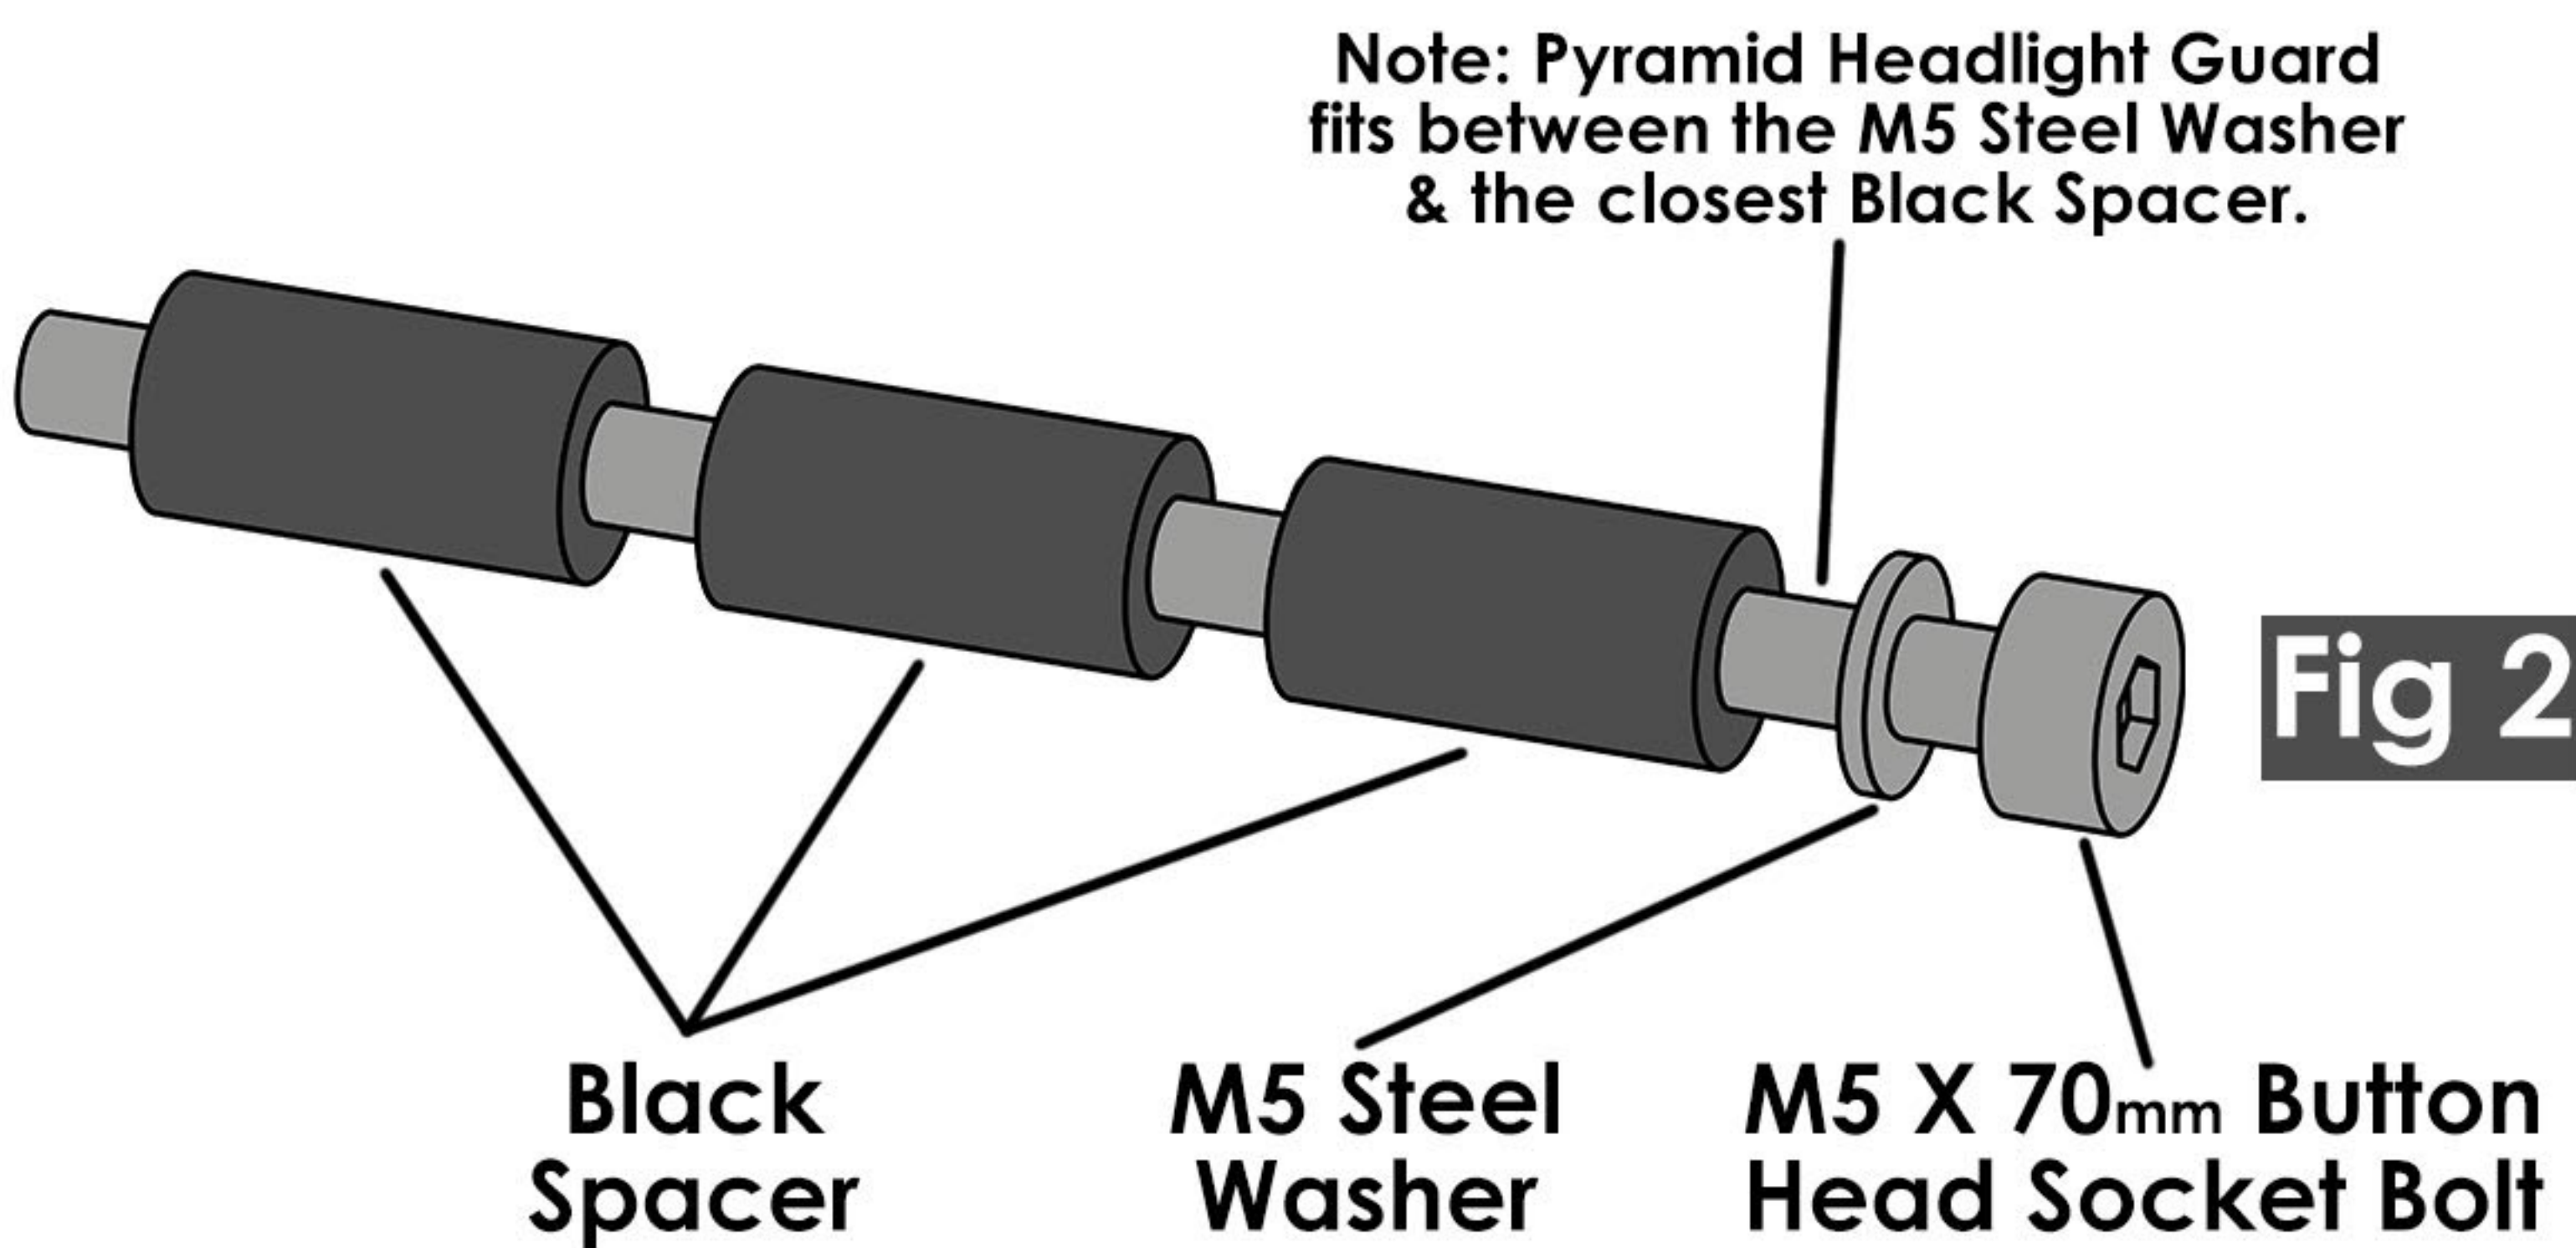

Contact us:  
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

