







207035 Suzuki GSF650 Bandit (water-cooled model only) Belly Pan Fitting Instructions

Kit Includes:

1X	C207035	Moulding
5X	CFK207035	Brackets
4X	CBOLM60008	M6 X 16mm Button Head Socket Screw
2X	CBOLM60020	M6 X 20mm Machine Screw
2X	CWASM60002	M6 Shake Proof Washer
4X	CGROM60001	Rubber Grommet
4X	CSPAM60004	M6 X 8mm Steel Collar

Fitting - NO PARTS ARE REMOVED OR MODIFIED ON THE STANDARD BIKE.

- With the bike on the centre stand place cardboard or material under the bike to avoid scratching the Pyramid belly pan during installation.
- Apply a single layer of electrical insulation tape or something similar at position **A** to the frame down tubes to avoid scratching the paint.
- Install and fully tighten brackets **B, C & D** as shown in the images to the right.
- Now install bracket **A** using 2X M6 x 20mm Machine Screws and M6 Shake Proof Washers (**leave this bracket loose for final adjustment**).
- Install the 4X Rubber Grommets and Steel Collars into the Pyramid belly pan.
- Attach the Pyramid belly pan using the remaining M6 X 16mm Button Head Socket Screws.
- Check all edges for clearance - then fully tighten bracket **A**.
- **Be sure to check fixings periodically.**

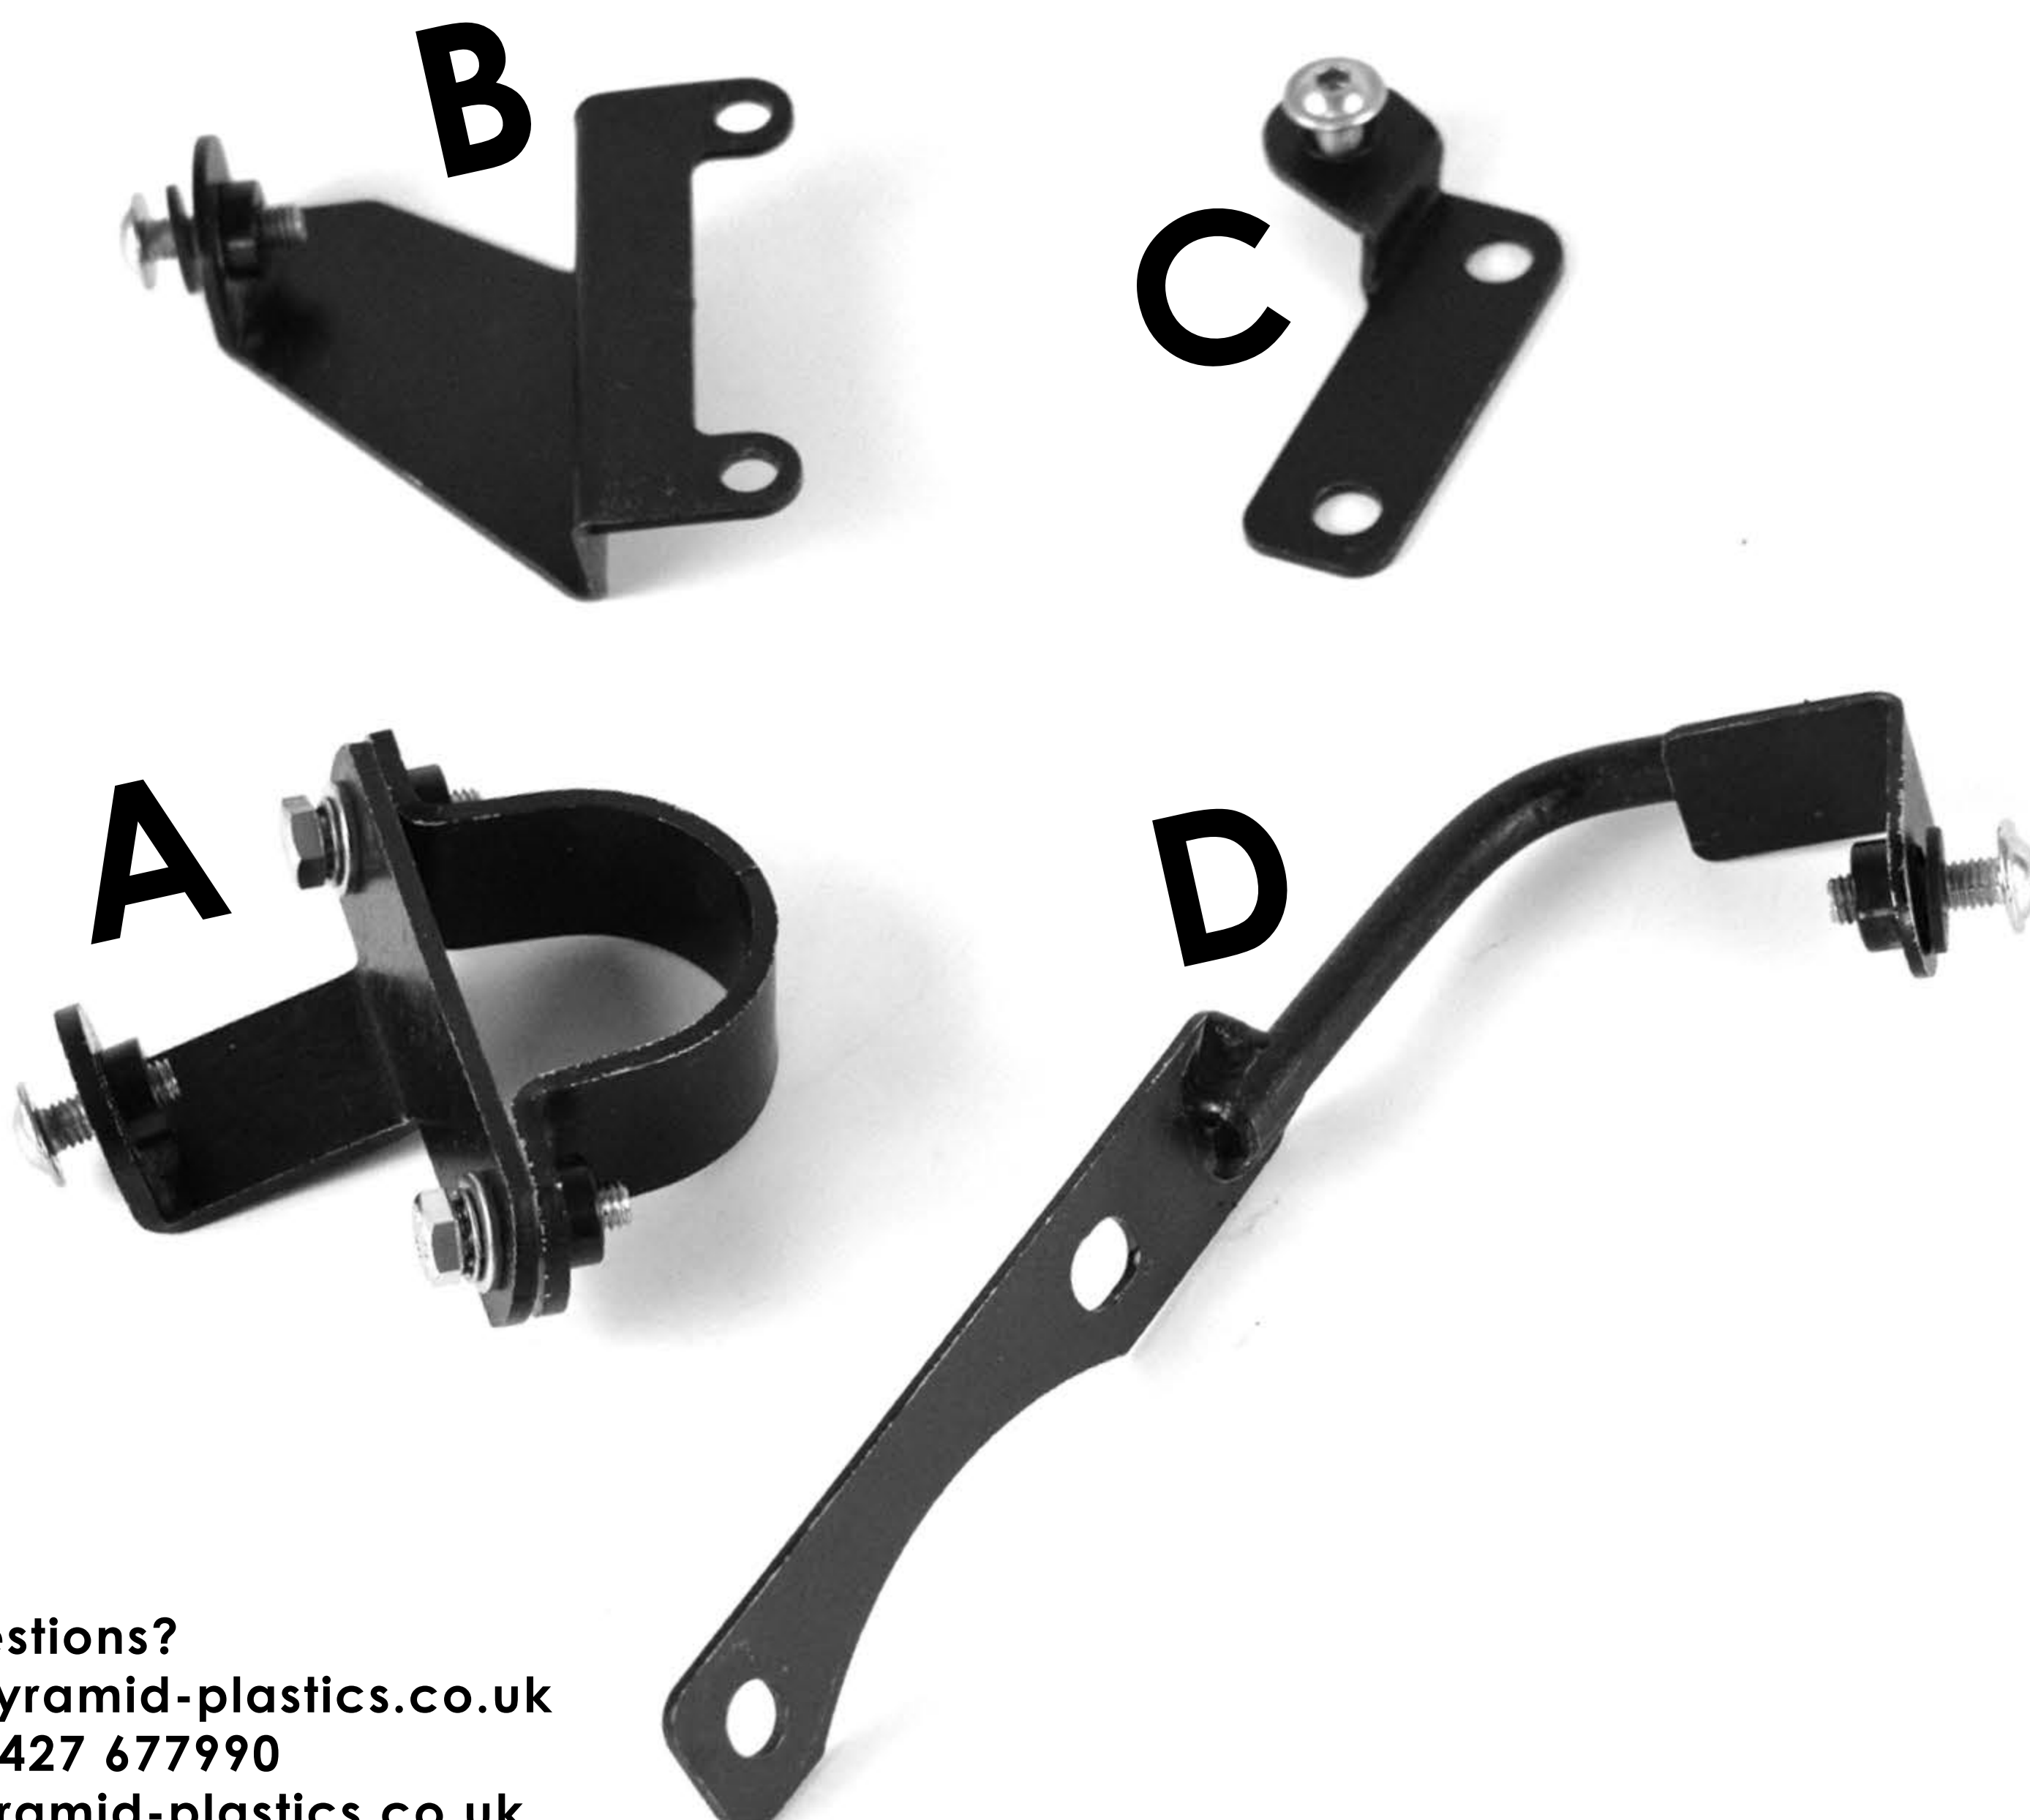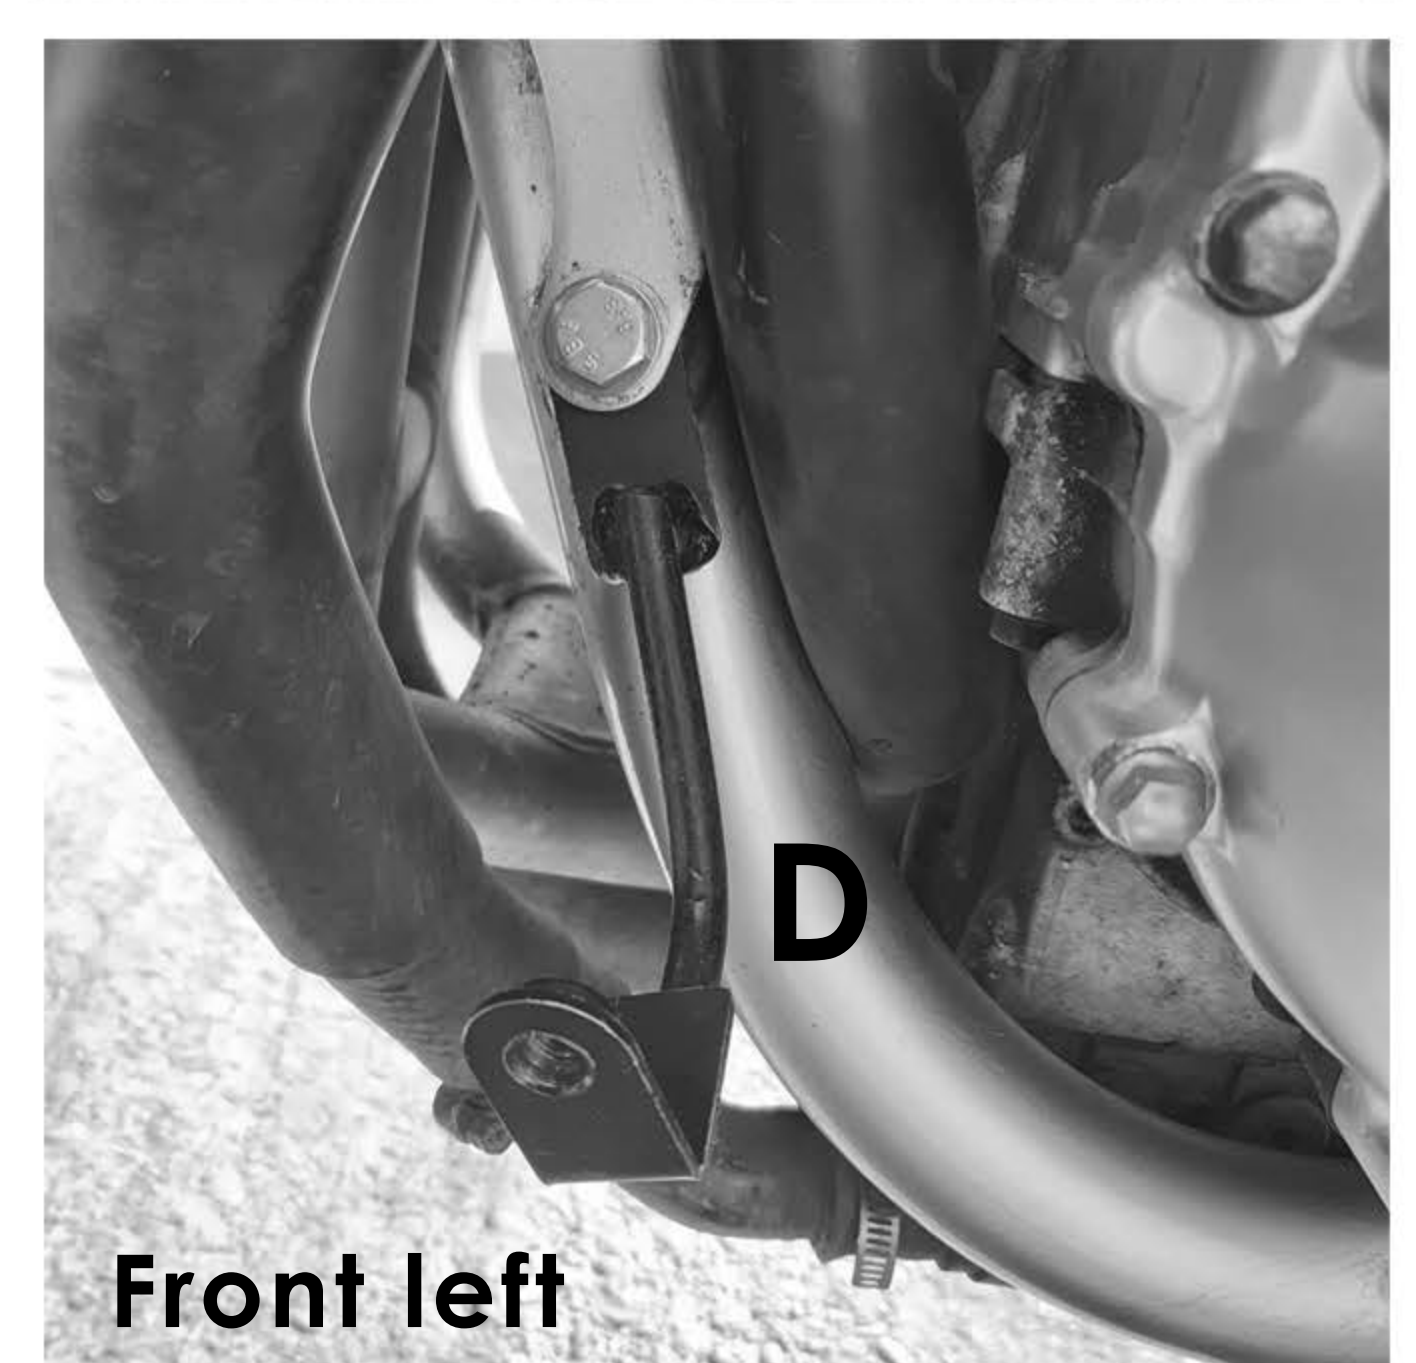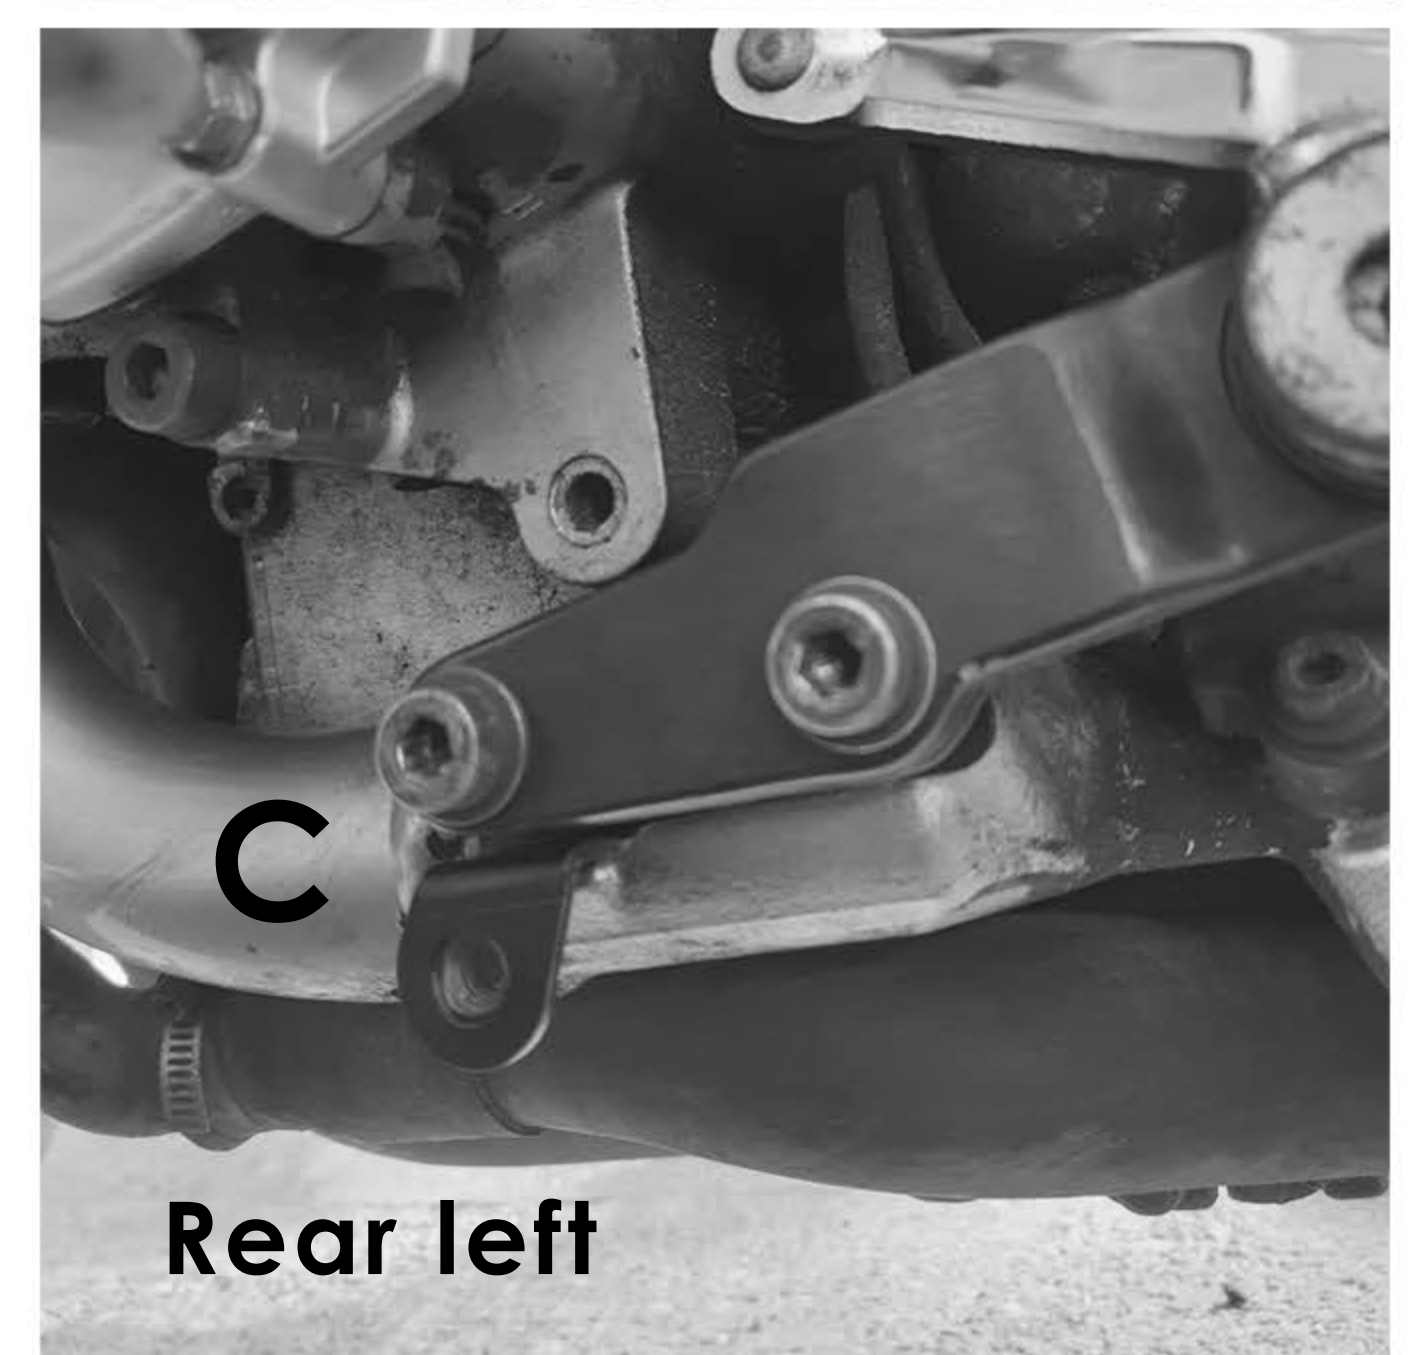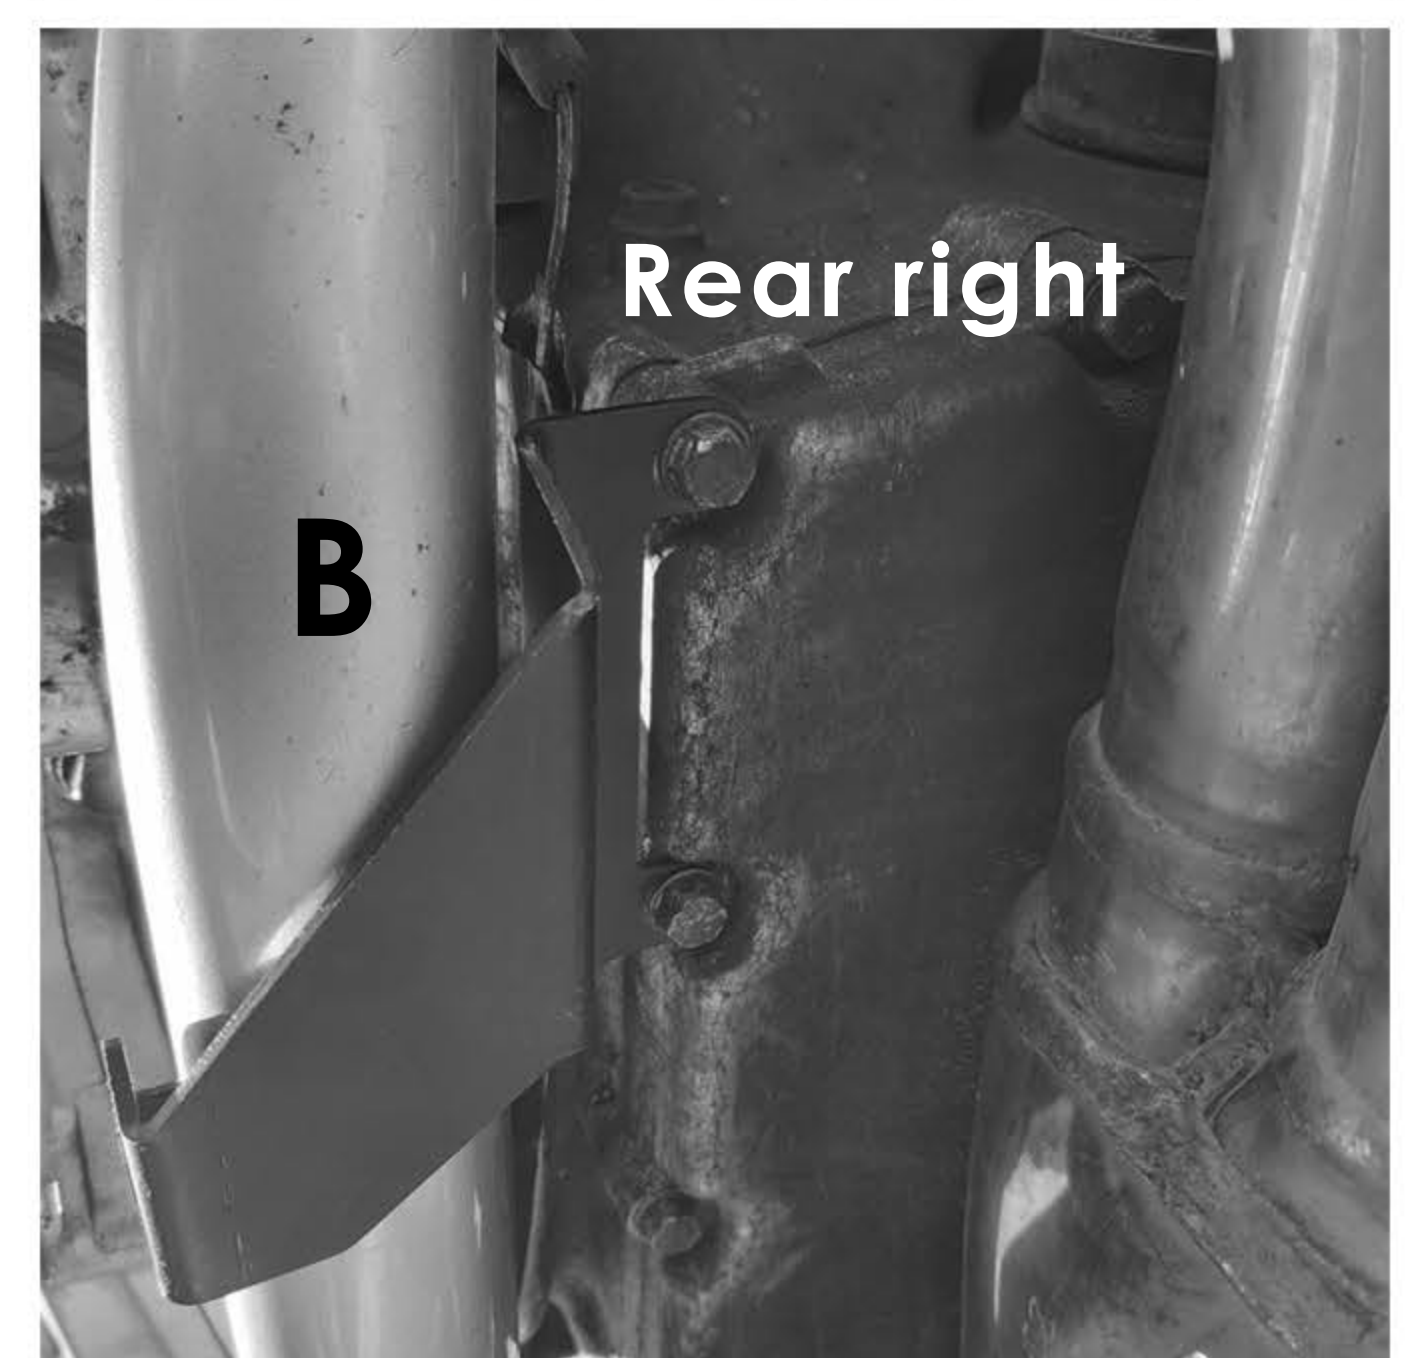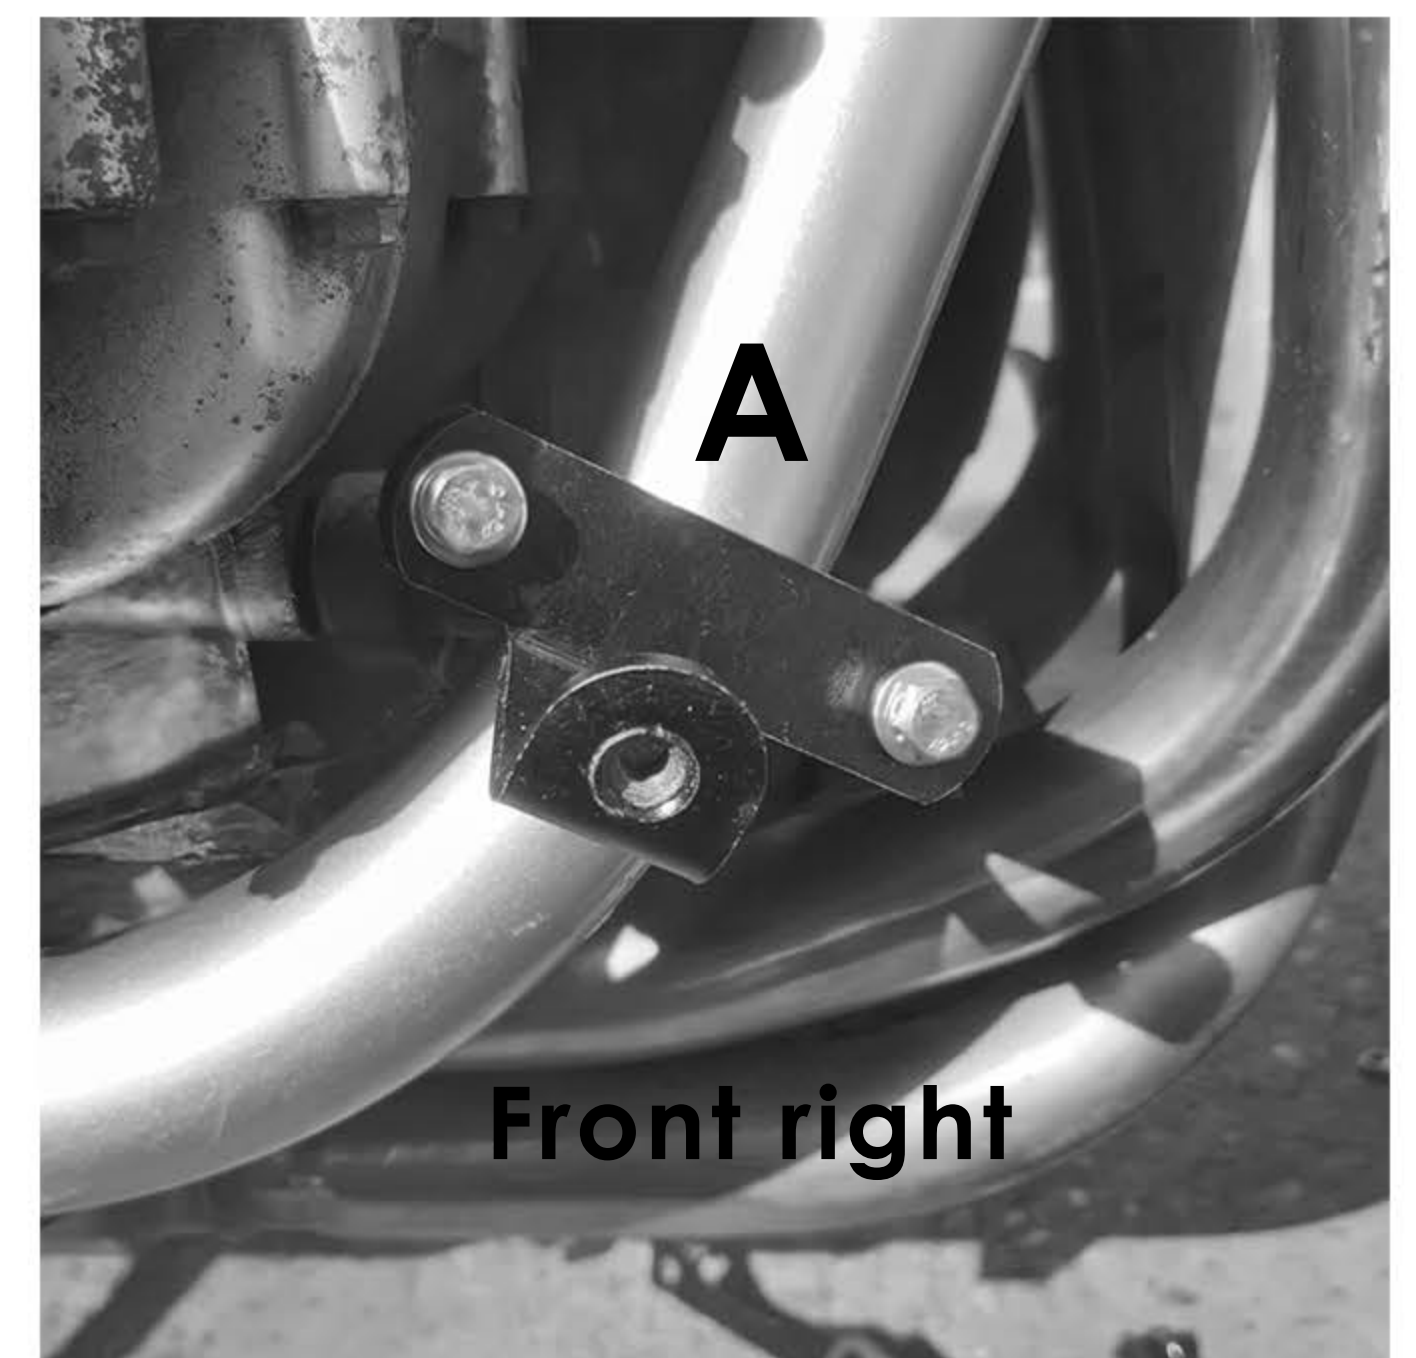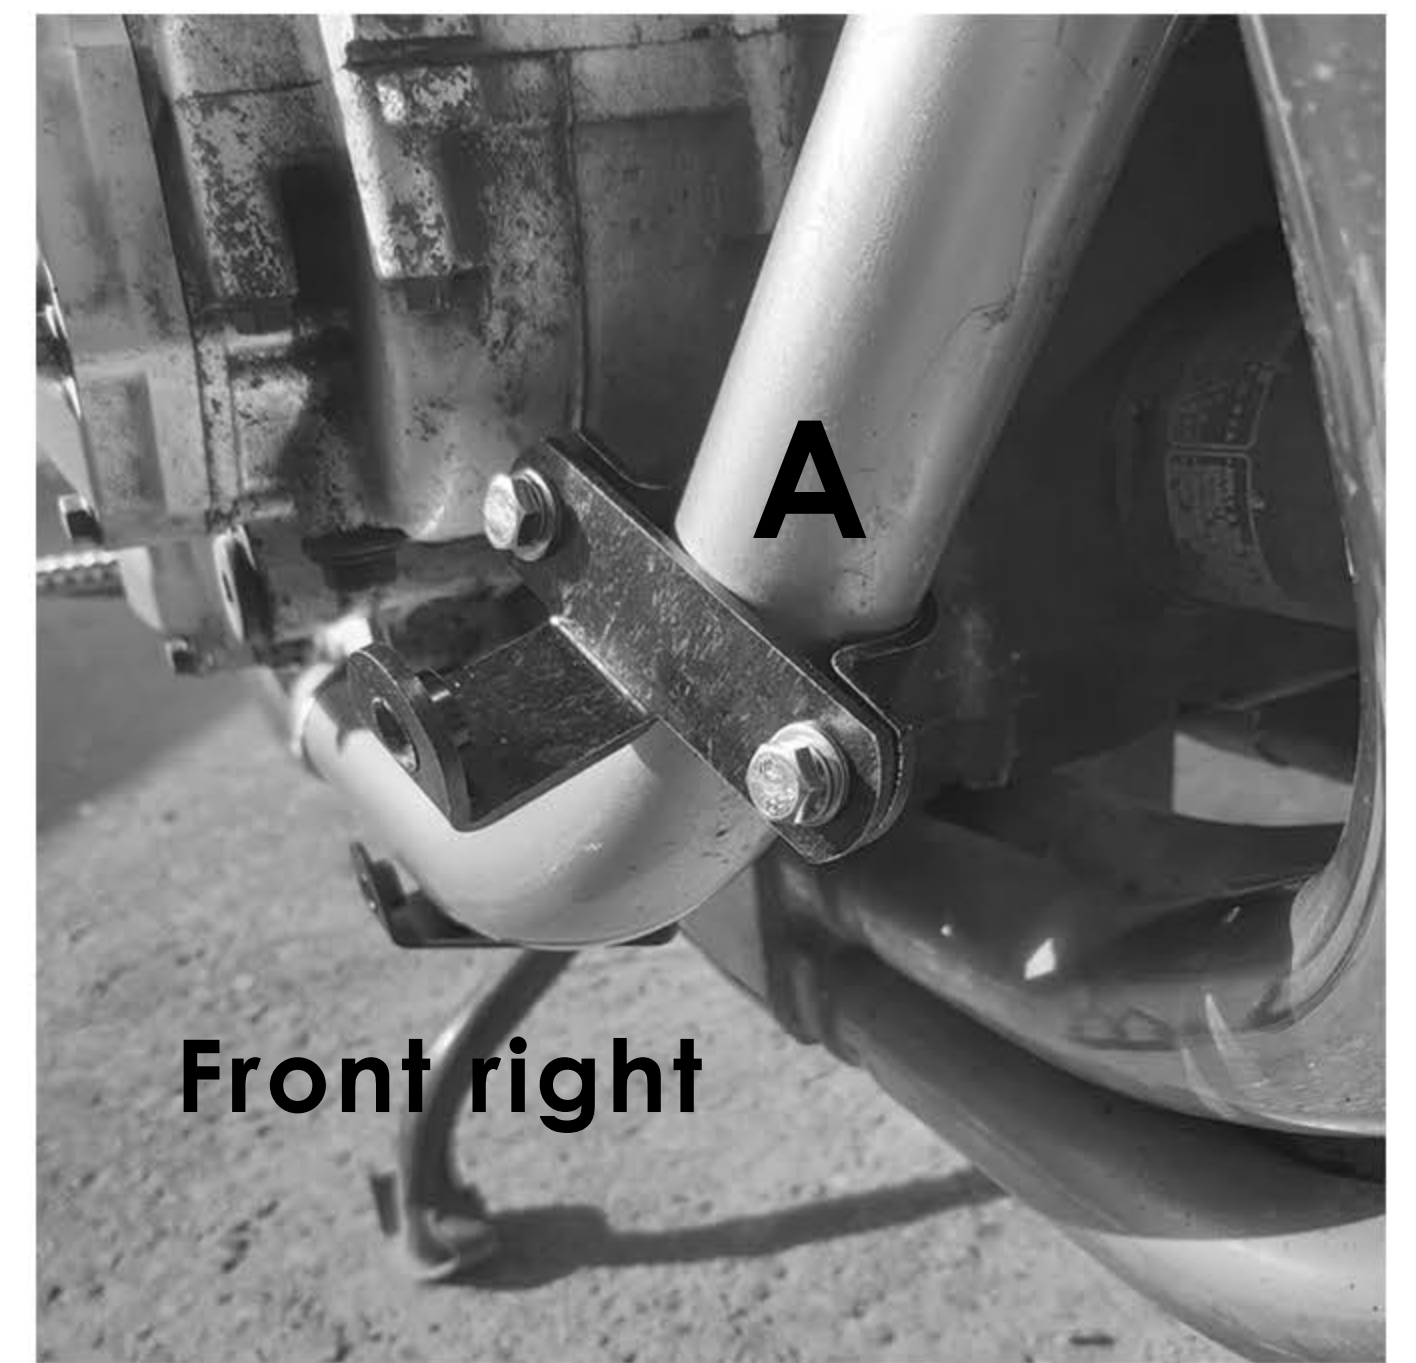

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
 feel free to leave us a review!