

## 207036 Suzuki GSF650 Bandit (oil-cooled model only) Belly Pan Fitting Instructions

### Kit Includes:

1X	C207036	Moulding
2X	CFK207036	'U' Shaped Brackets
2X	""	Forward Brackets (Handed Pair)
1X	""	Rear Left-hand side Bracket
1X	""	Rear Right-hand side Bracket
2X	CBOLM100004	M10 X 50mm Socket Cap Bolts
2X	CNUTM100003	M10 Flange Head Nuts
4X	CBOLM60007	M6 X 12mm Button Head Bolts
4X	CWASM60002	M6 Shake Proof Washers
4X	CGROM60001	Rubber Grommets
4X	CSPAM60004	M6 X 8mm Steel Collars

### Fitting - NO PARTS ARE REMOVED OR MODIFIED ON THE STANDARD BIKE.


- Place cardboard or material under the bike to avoid scratching the Pyramid belly pan during installation. A bike ramp will make installation easier.
- Apply a single layer of electrical insulation tape or something similar to the frame down tubes to avoid scratching the paint.
- Loosely attach four brackets as shown in **Fig 1 + Fig 2**. The M10 X 50mm socket cap bolts secure the two smaller rear brackets via the pre-drilled holes in the engine casting.
- Now install the four rubber grommets and steel collars into the pre-drilled holes in the Pyramid belly pan.
- Fully tighten the rear brackets (left and right side). Attach the Pyramid belly pan loosely to these brackets.
- With the forward brackets loosely positioned on the frame as shown below, attach the Pyramid belly pan to these brackets.
- Make final adjustments and fully tighten all fasteners - Note: the forward clamp brackets should be tightened last.
- **Be sure to check fixings periodically.**

### Fig 1




Right-hand side of bike

### Fig 2

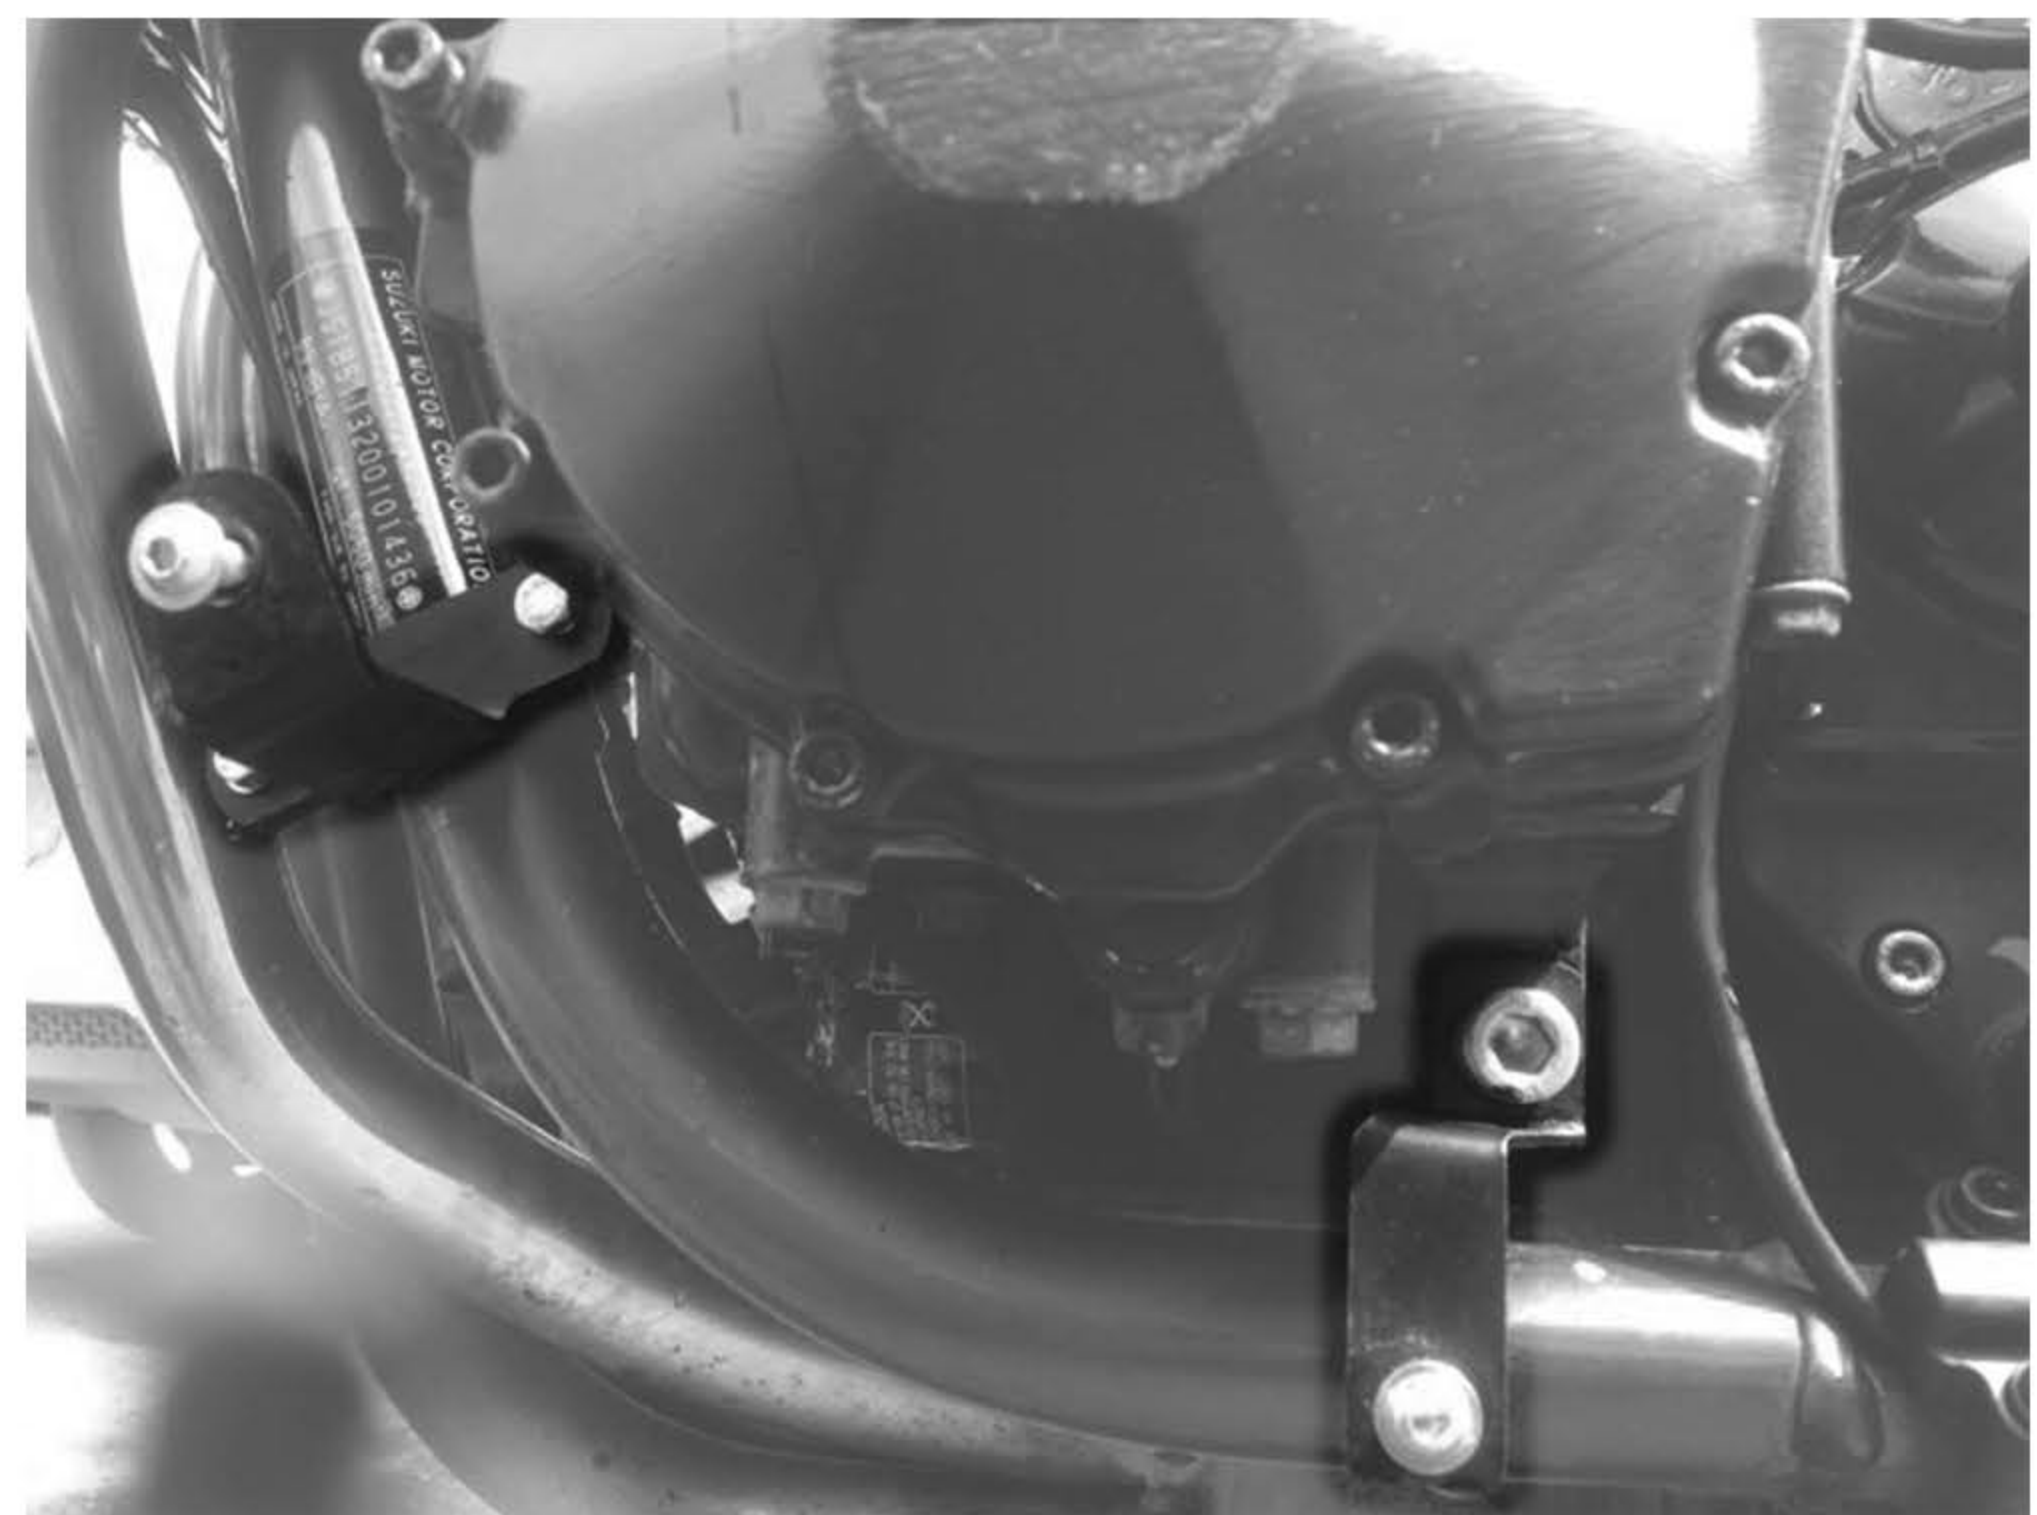

Left-hand side of bike

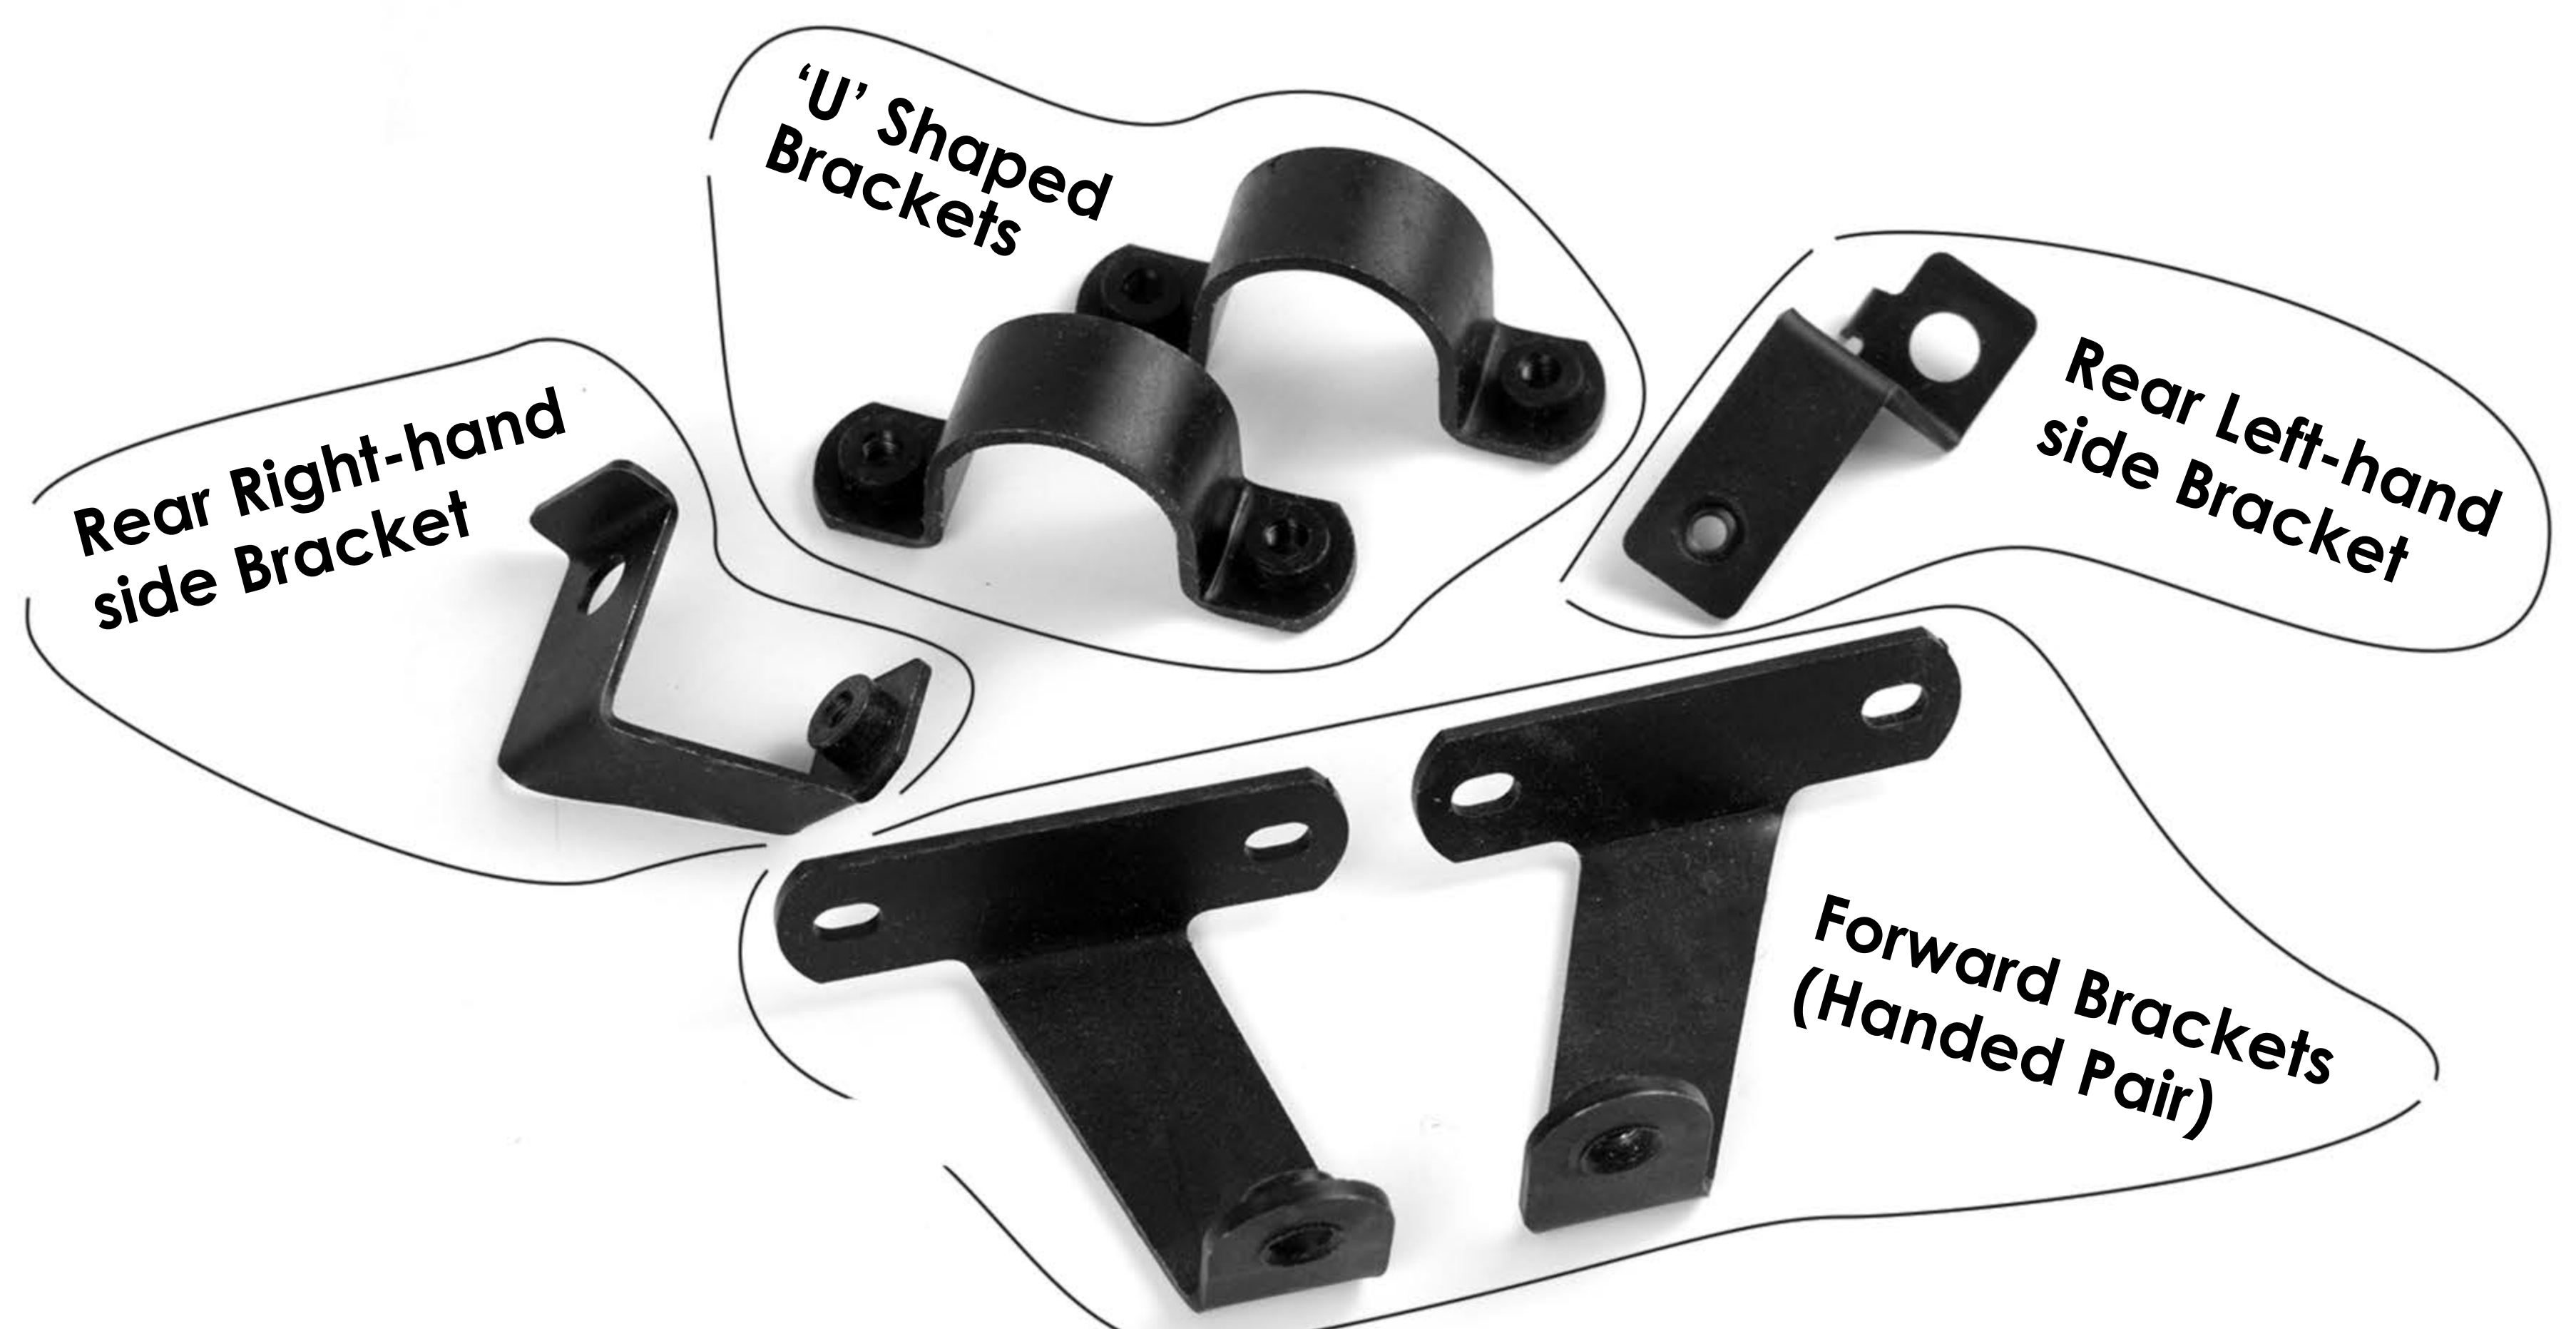

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!