CB1300 Bellypan

Fitting instructions


This kit contains: 1x CB1300 Bellypan

4x P-Clips – CCLIP0002

4x M6x25 Button head bolts – CBOLM60011

4x M6 plastic washers – CWASM60003

4x Lug Nuts – CNUTM60007

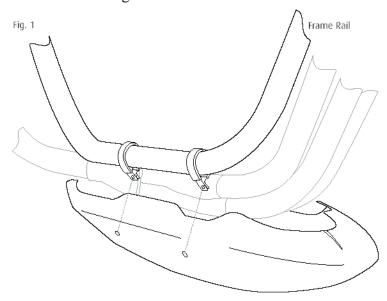

- 1. Fit 1 lug nut to each p-clip.the nut should placed on the folded tab.
- 2. Fit 2 p-clips on each frame rail as per fig.1.
- 3. Offer the bellypan up to the bottom of the bike as pictured, the p-clips can be moved along the frame rail to meet the pre drilled holes.
- 4. Using the bolts provided, fasten the bellypan loosely to the p-clips.NB it may be easier to begin with the front right (if sat on the bike).
- 5. The bellypan can then be positioned so there is approximately 12mm gap between the front exhaust pipe and the trimmed edge of the belly pan.
- 6. Tighten all mounting bolts