

## Kit Includes:


1X	C21115	Engine Plate
4X	CFK21115	Brackets (4 parts)
4X	CBOLM50005	M5 x 12mm Bolt
8X	CWASM50002	M5 Washer
4X	CNUTM50002	M5 Nyloc Nut
6X	CBOLM60008	M6 x 16mm Bolt
6X	CWASM60003	M6 Washer
2X	CBOLM80005	M8 x 20mm Bolt
6X	CPNUT0001 Pre-fitted by Pyramid	Aluminium Nut


Connect the two forward corners of the engine plate using the two smallest brackets provided (see Fig 1).

Attach the brackets to the engine casing as shown in Fig 2 & 3 below. OEM bolts are reused on left-hand side.

Attach the engine plate to the brackets using the M6 x 16mm bolts and M6 washers supplied.

Check fixings periodically.

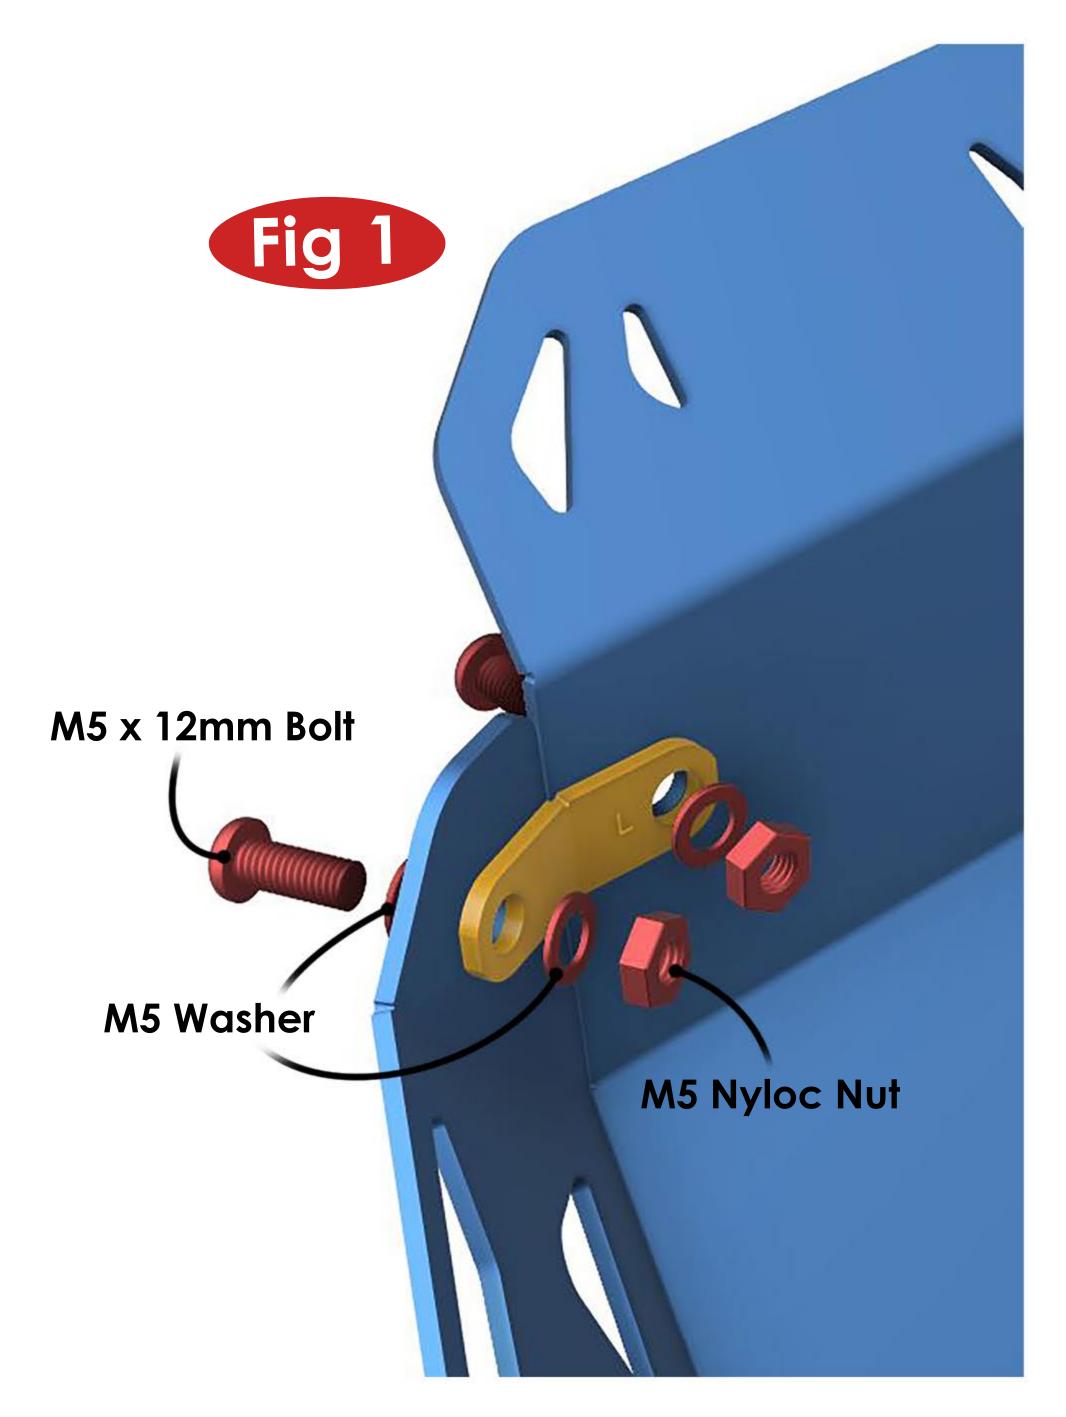

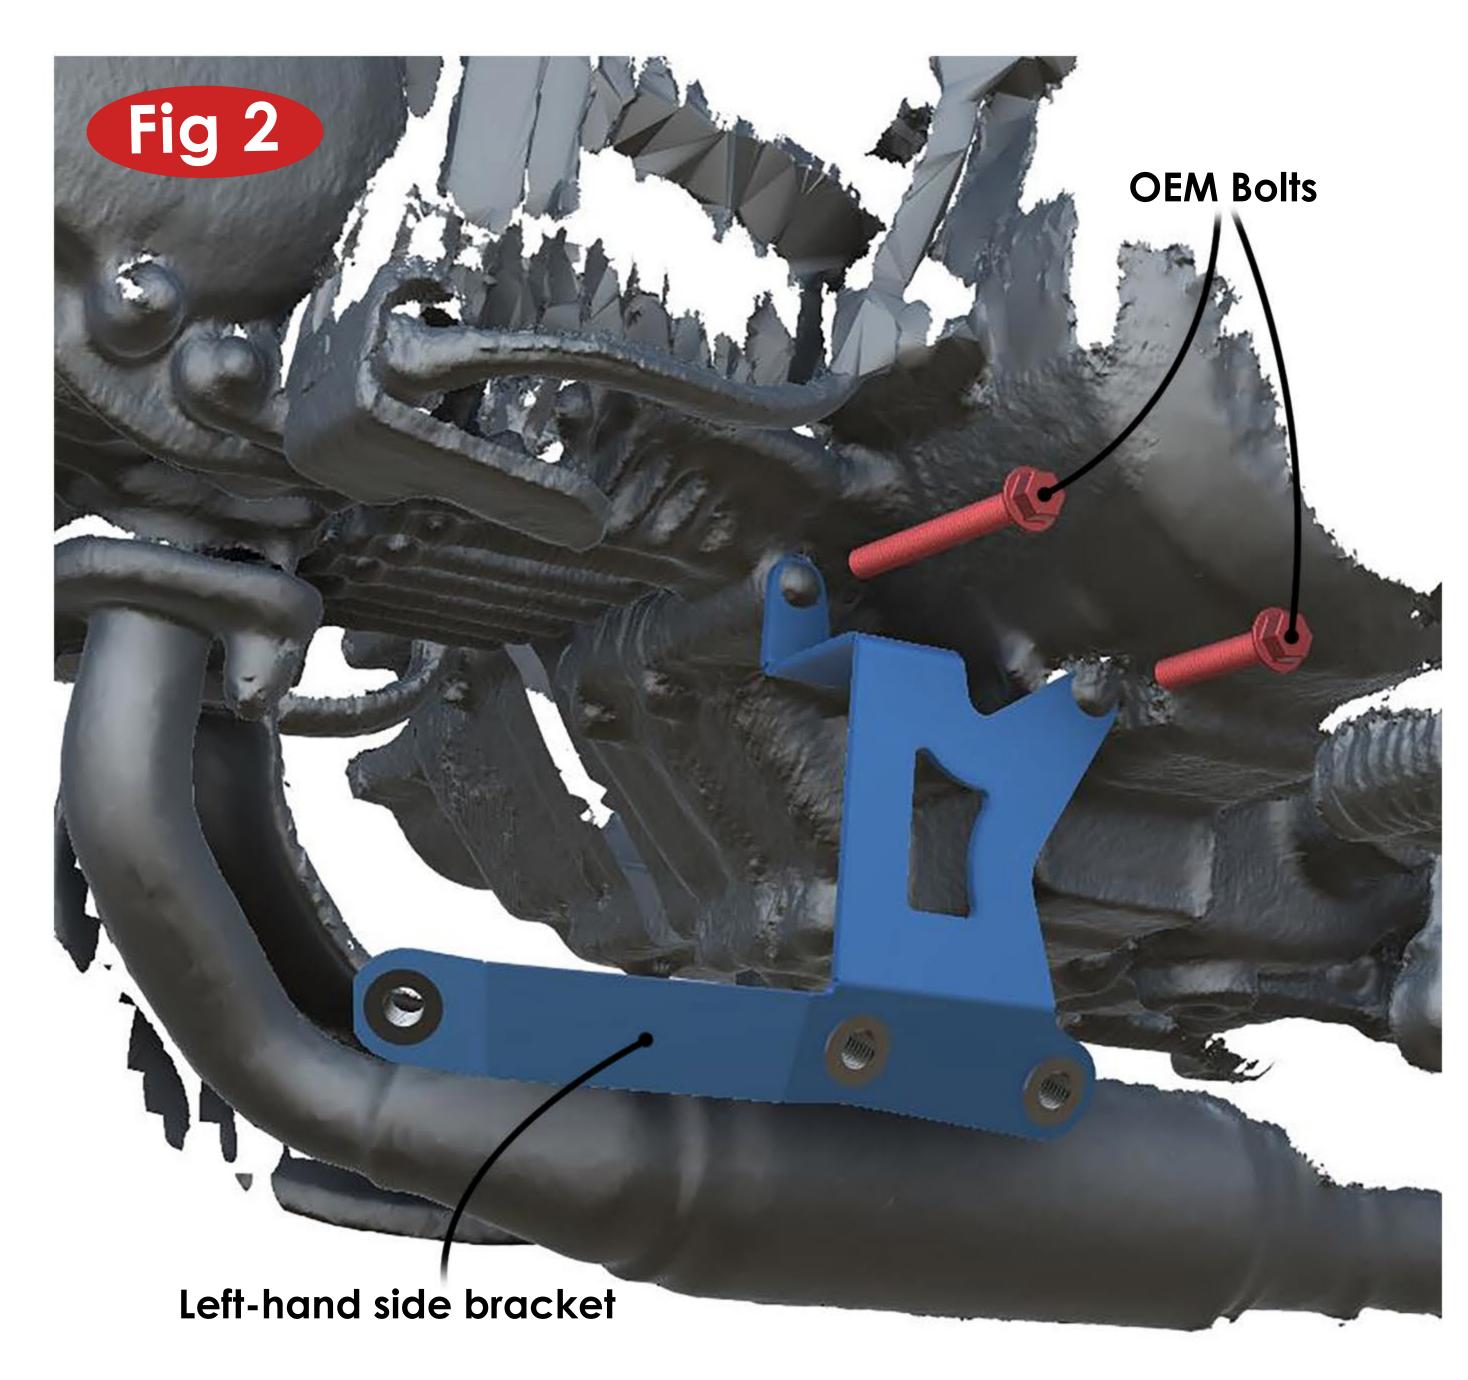

Any questions? sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk



