


21275 Honda Monkey 125 Infill Panels Fitting Instructions

Kit Includes:

1X	C21275	Pair of Mouldings
2X	CBRA0125	Monkey Decals

- The Pyramid colour-matched replacement infill panels directly replace the OEM infill panels on your bike.
- Remove the bolts on the underside (one on each side). Now these OEM infill panels are held on with clips on the inside of the moulding. **It can be useful to look at the inside of the Pyramid infill panels to see how these clips work.**
- Once the OEM infill panels are removed **Pyramid advise familiarising yourself with the fitment of the clips before attempting to fit the colour-matched replacement** as not to damage the finish. It can be helpful to refit the OEM infill panels before the final fit of the colour-matched replacements.
- Once the colour-matched replacements are clipped in, the original bolts can be refitted underneath.

Inside view of the Honda Monkey 125 Infill Panels

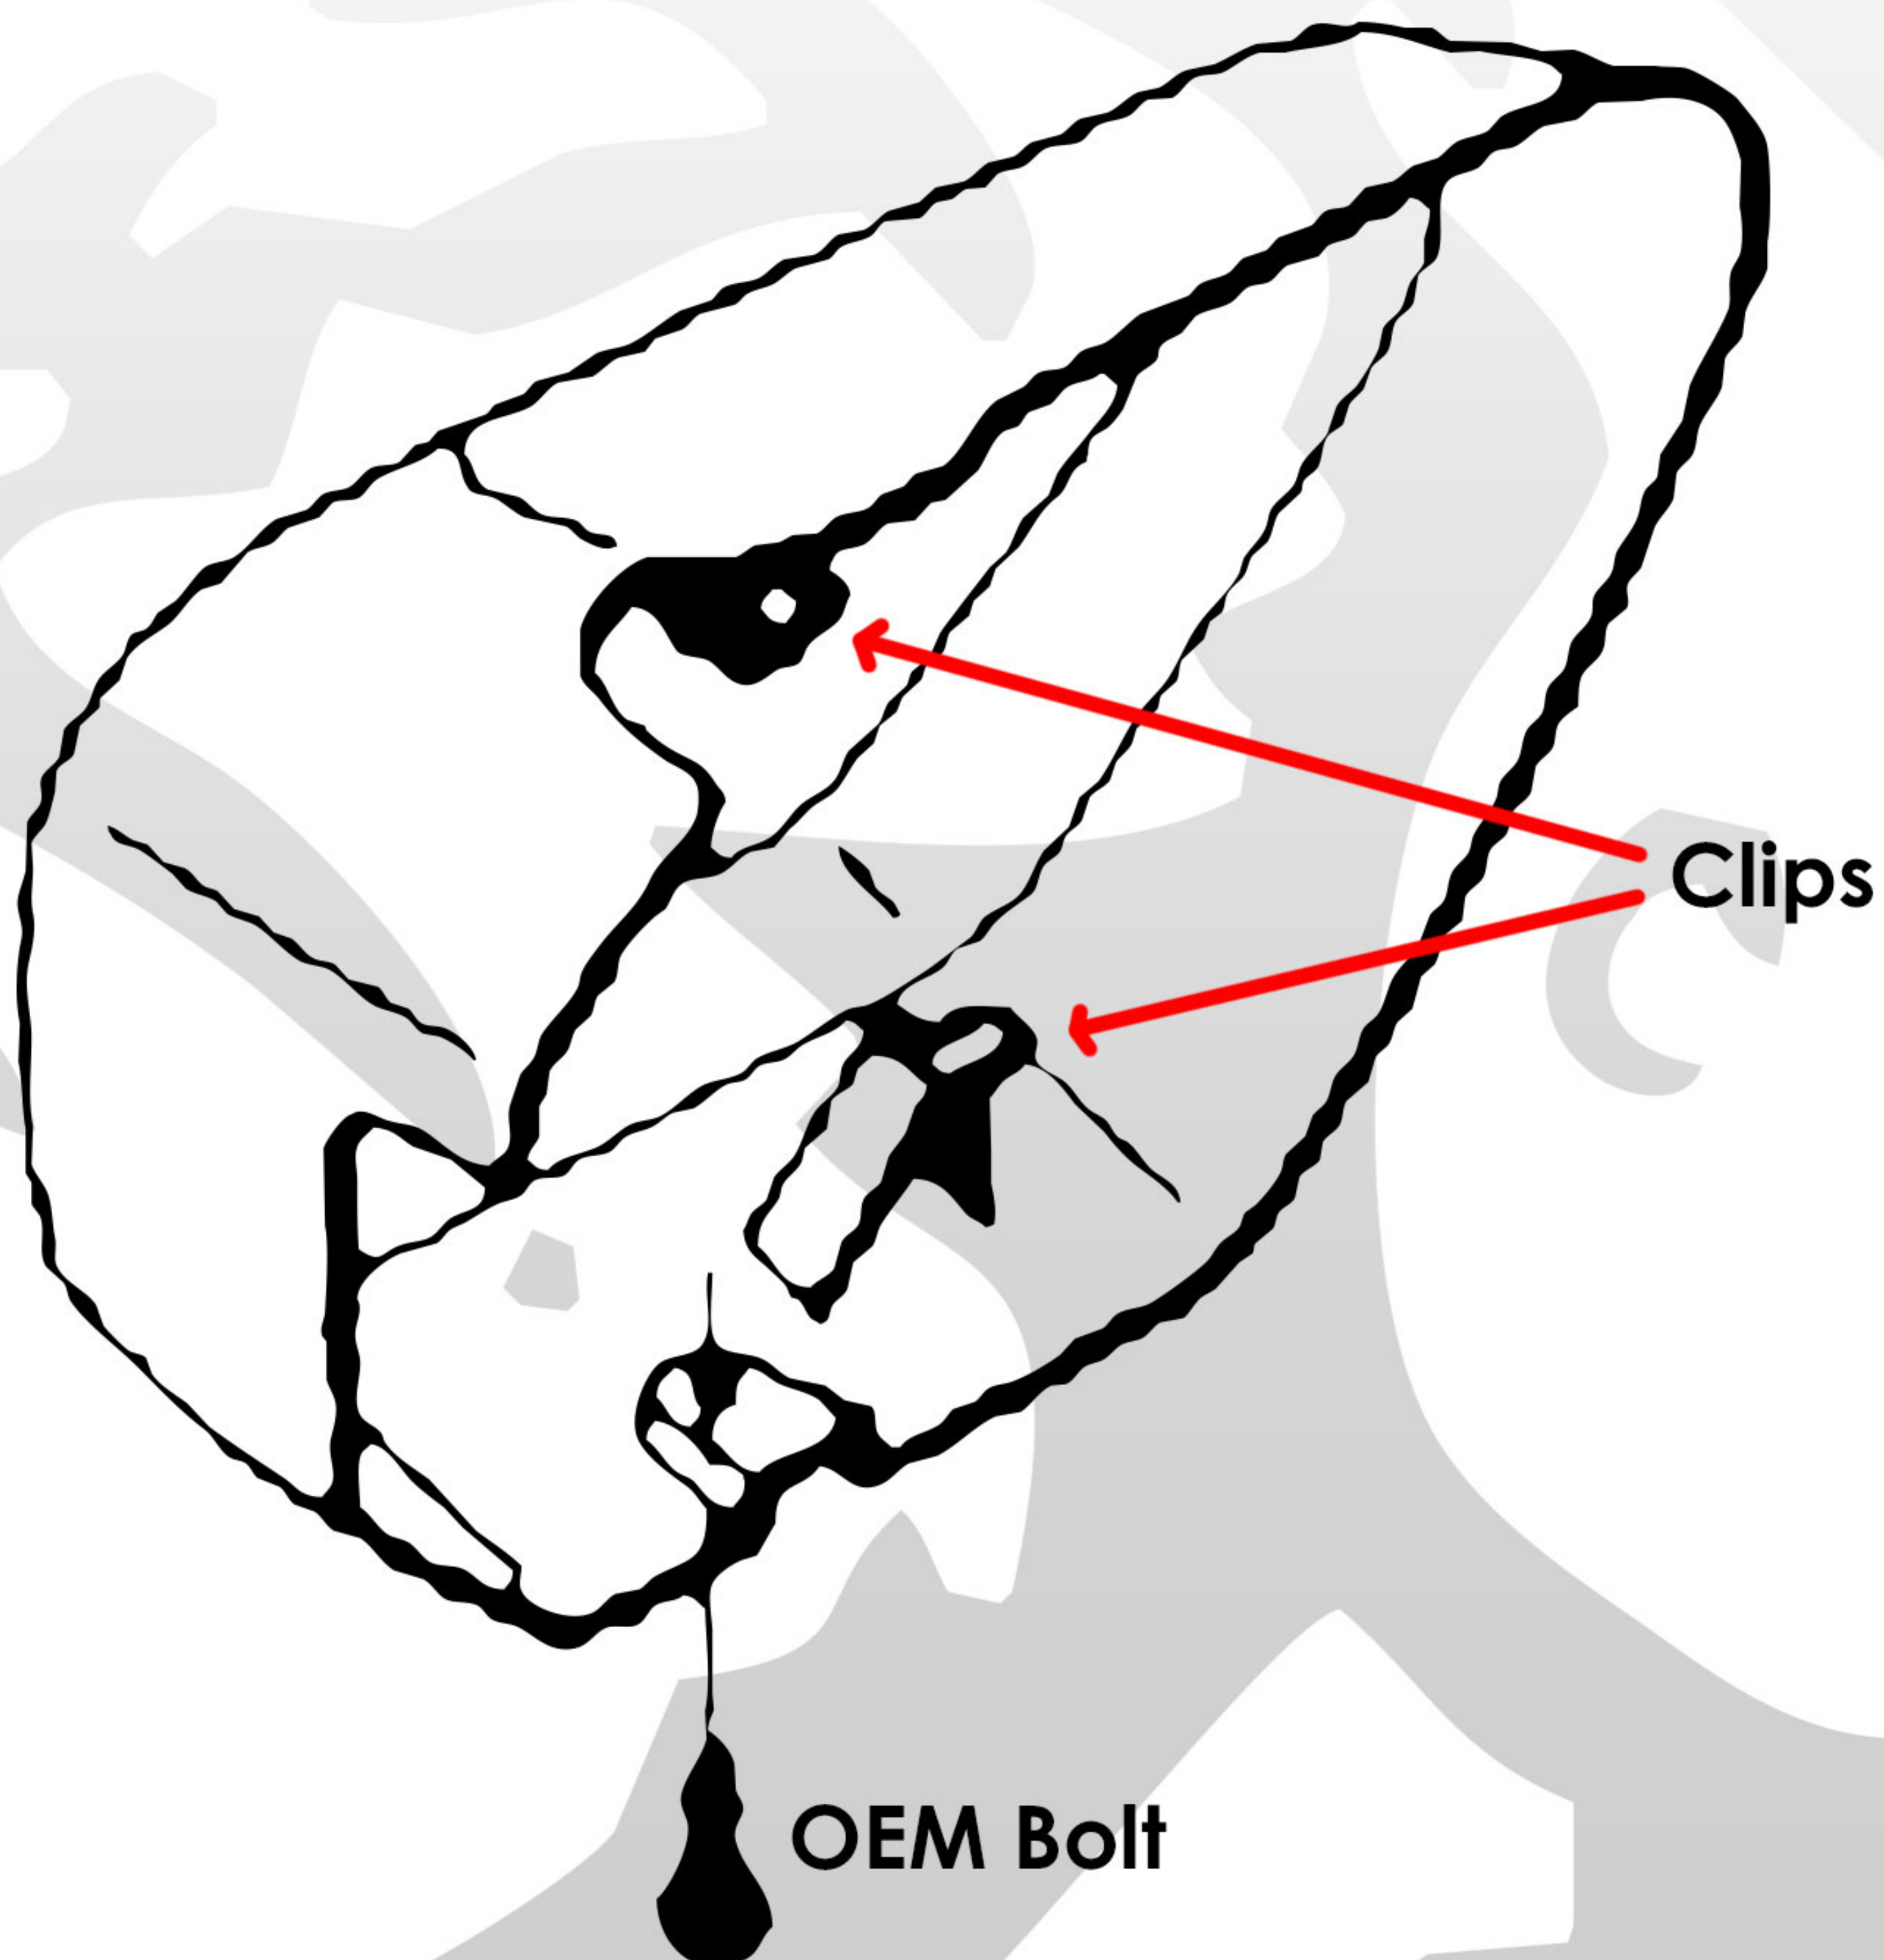

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

Monkey