



21280 Honda MSX 125 Fly Screen Fitting Instructions

Kit Includes:

1X	C22160	Fly Screen
1X	CFK21280	Bracket
5X	CBOLM50008	M5 X 16mm Stainless Bolt
3X	CNUTM50001	M5 Rubber Anchor Nut
3X	CWASM50001	M5 Washer

- The Pyramid fly screen is simple to fit. Attach the fly screen to the bracket using the M5 fixings supplied (see **Fig 1**).
- Remove the OEM bolts from the back of the clock display.
- Now fit the fly screen using the remaining M5 bolts supplied (see **Fig 2**).

Check fixings periodically.

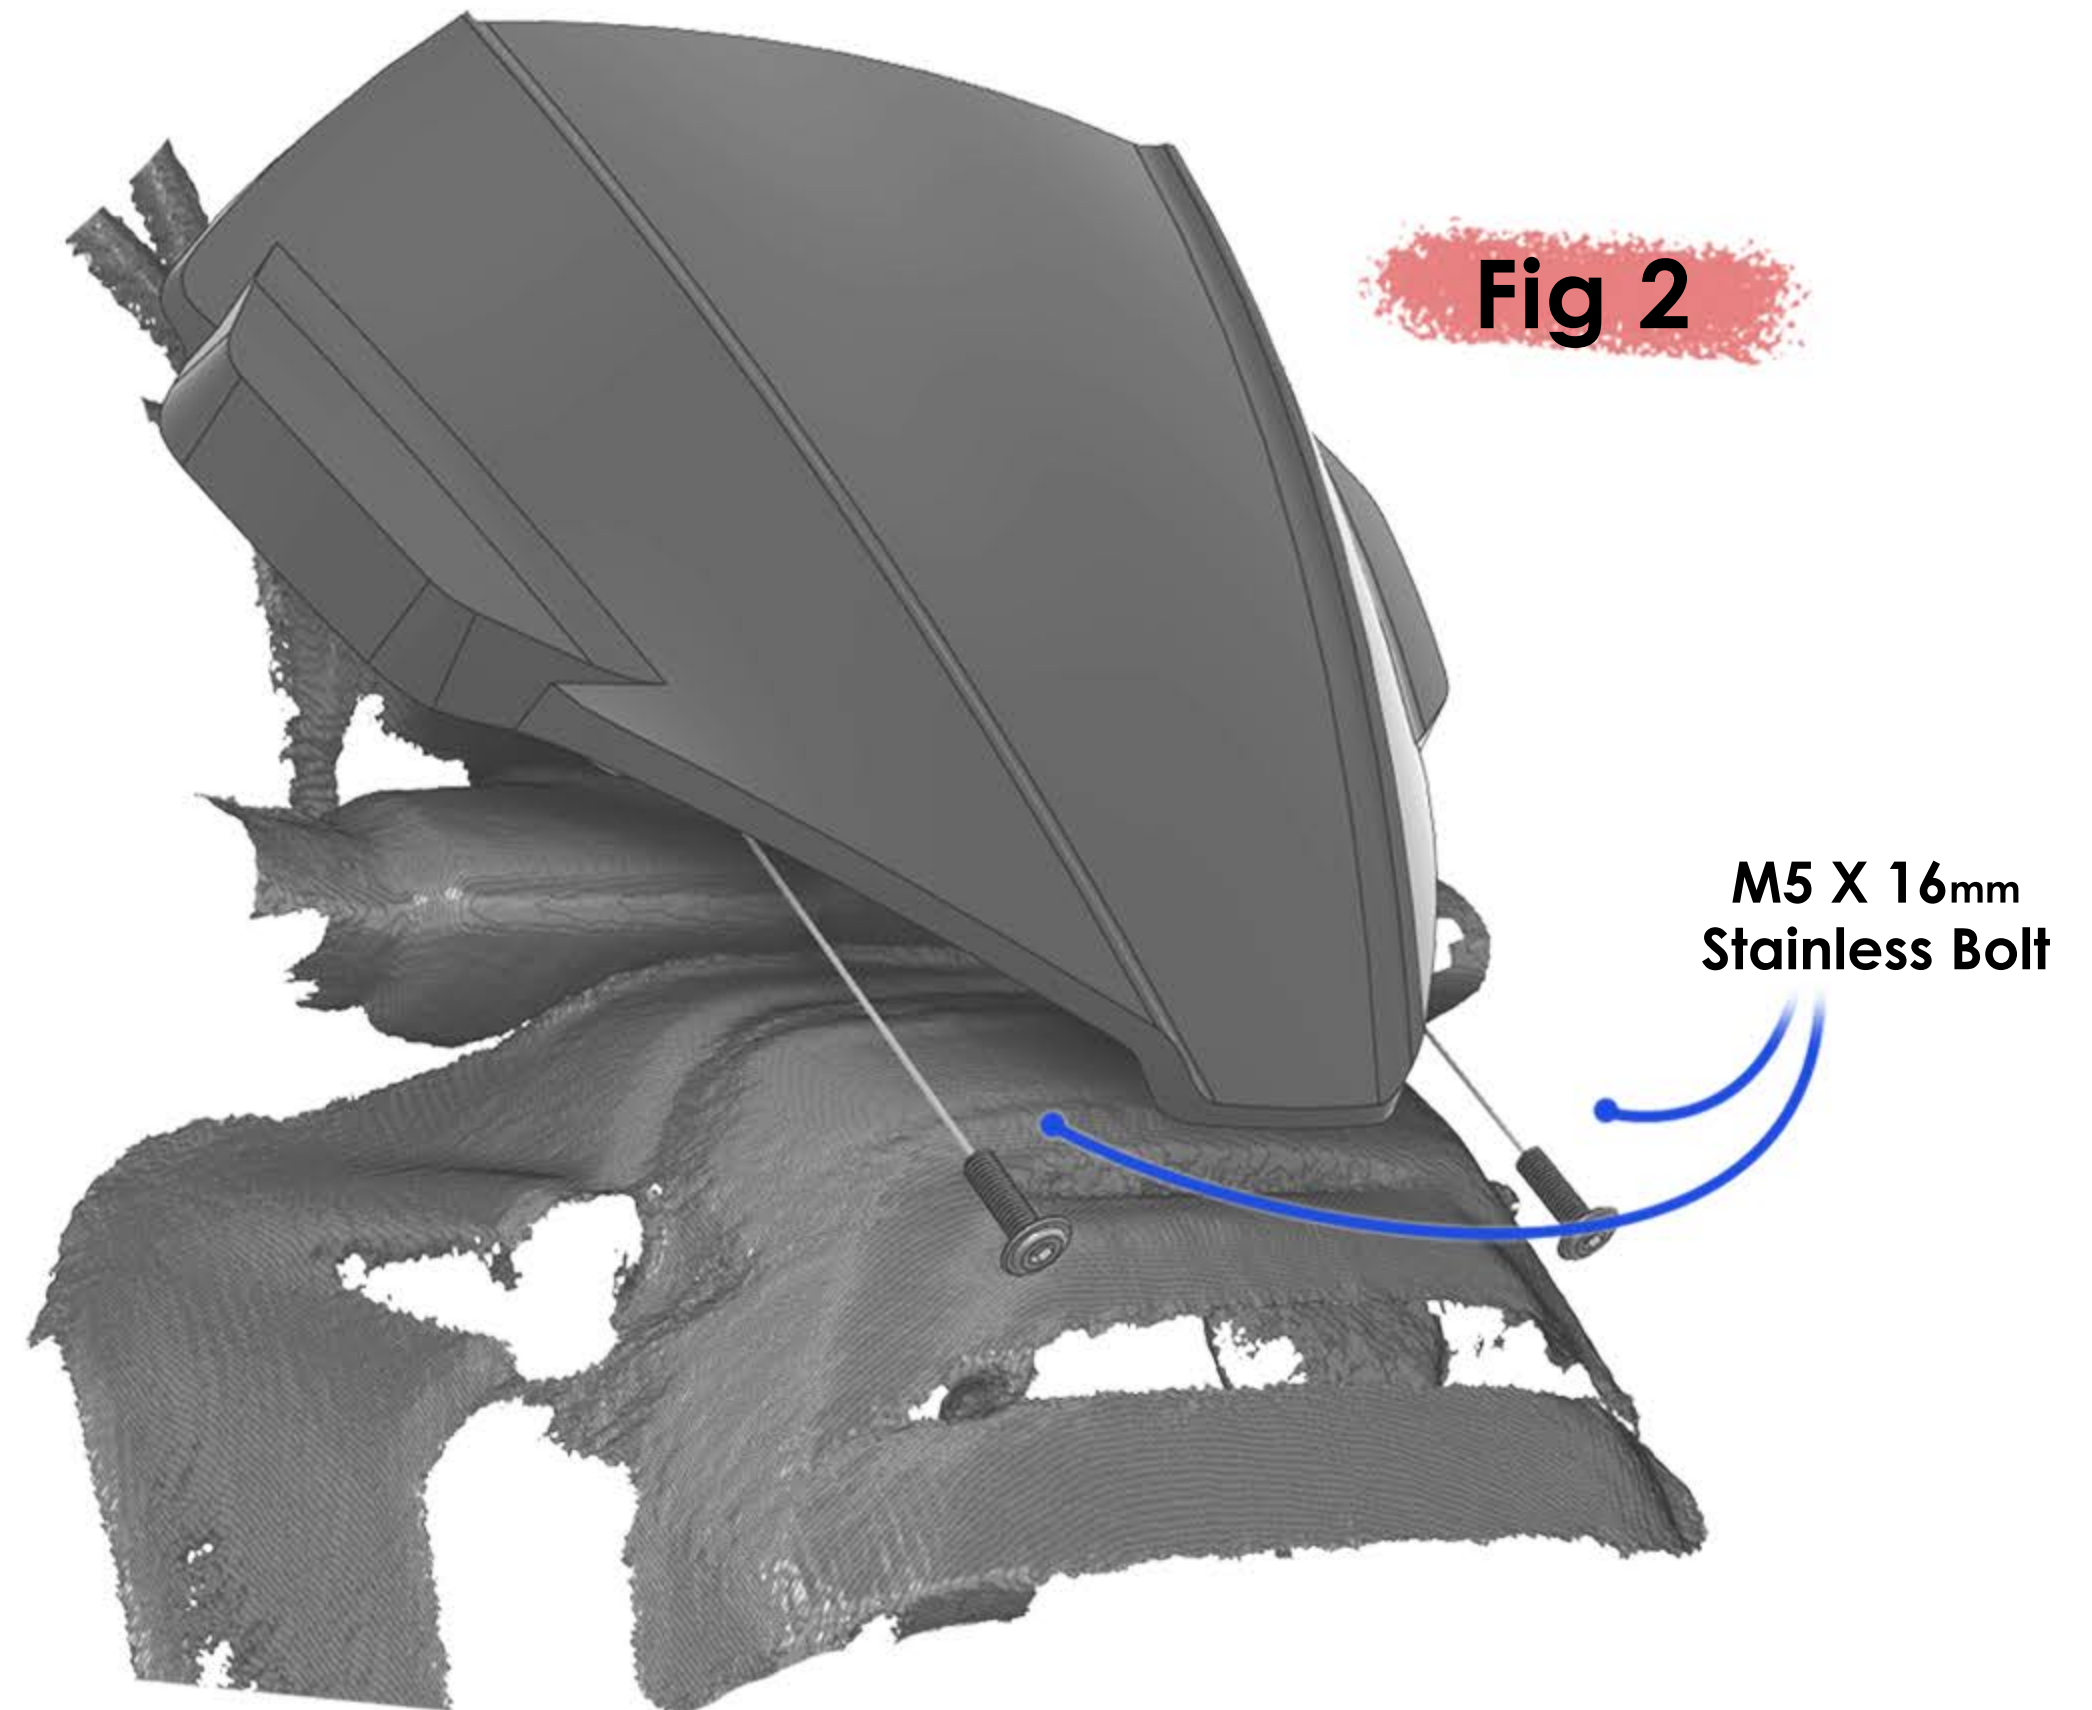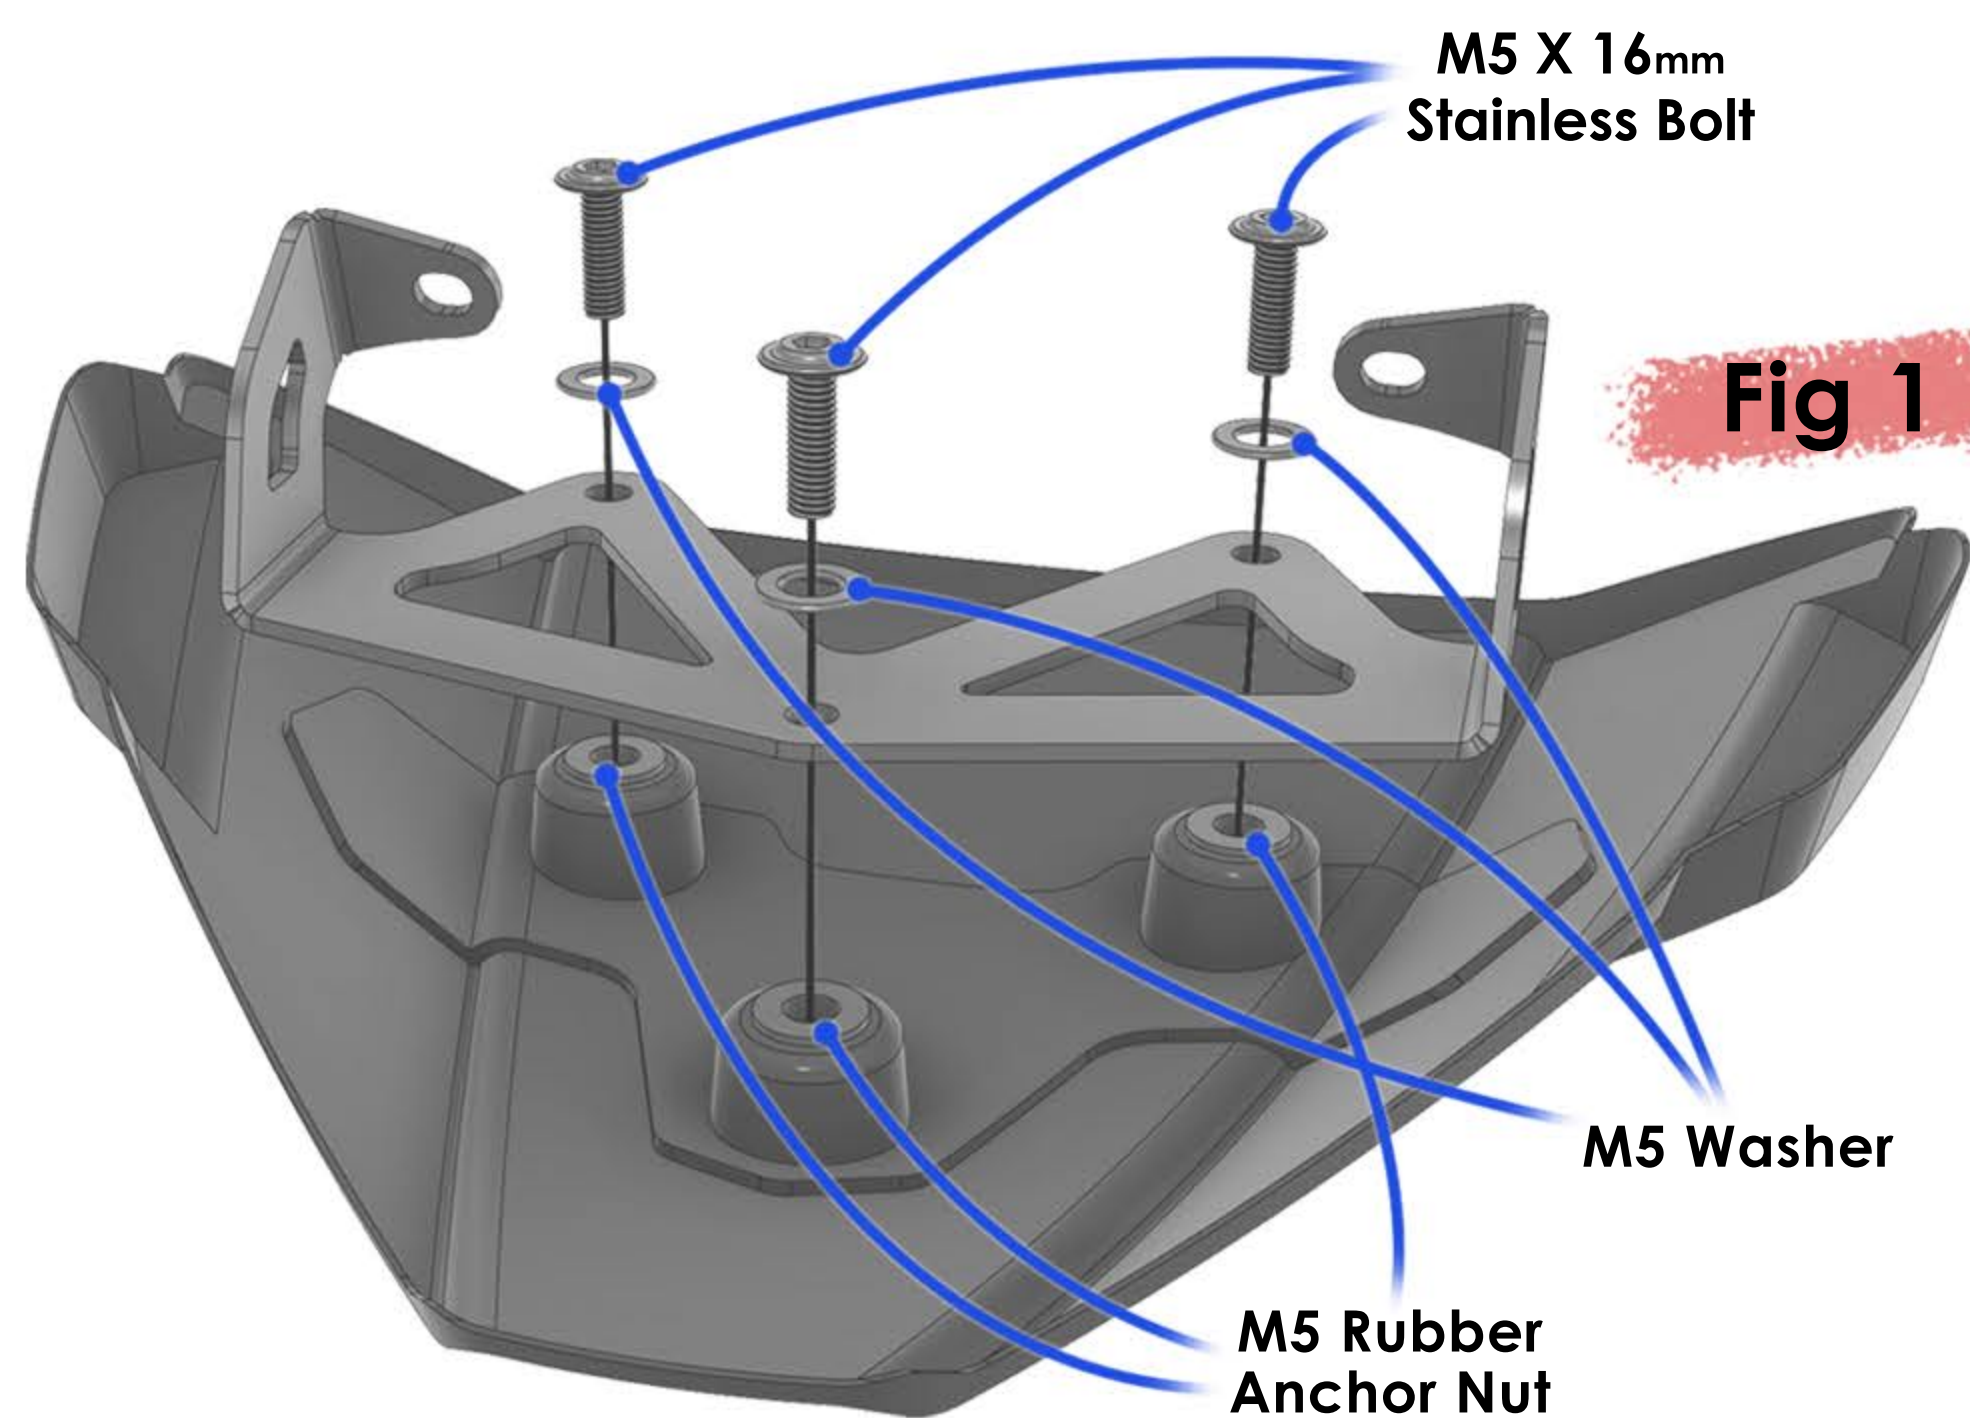

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!



21280 Honda MSX 125 Fly Screen Fitting Instructions

Kit Includes:

1X	C22160	Fly Screen
1X	CFK21280	Bracket
5X	CBOLM50008	M5 X 16mm Stainless Bolt
3X	CNUTM50001	M5 Rubber Anchor Nut
3X	CWASM50001	M5 Washer

- The Pyramid fly screen is simple to fit. Attach the fly screen to the bracket using the M5 fixings supplied (see **Fig 1**).
- Remove the OEM bolts from the back of the clock display.
- Now fit the fly screen using the remaining M5 bolts supplied (see **Fig 2**).

Check fixings periodically.

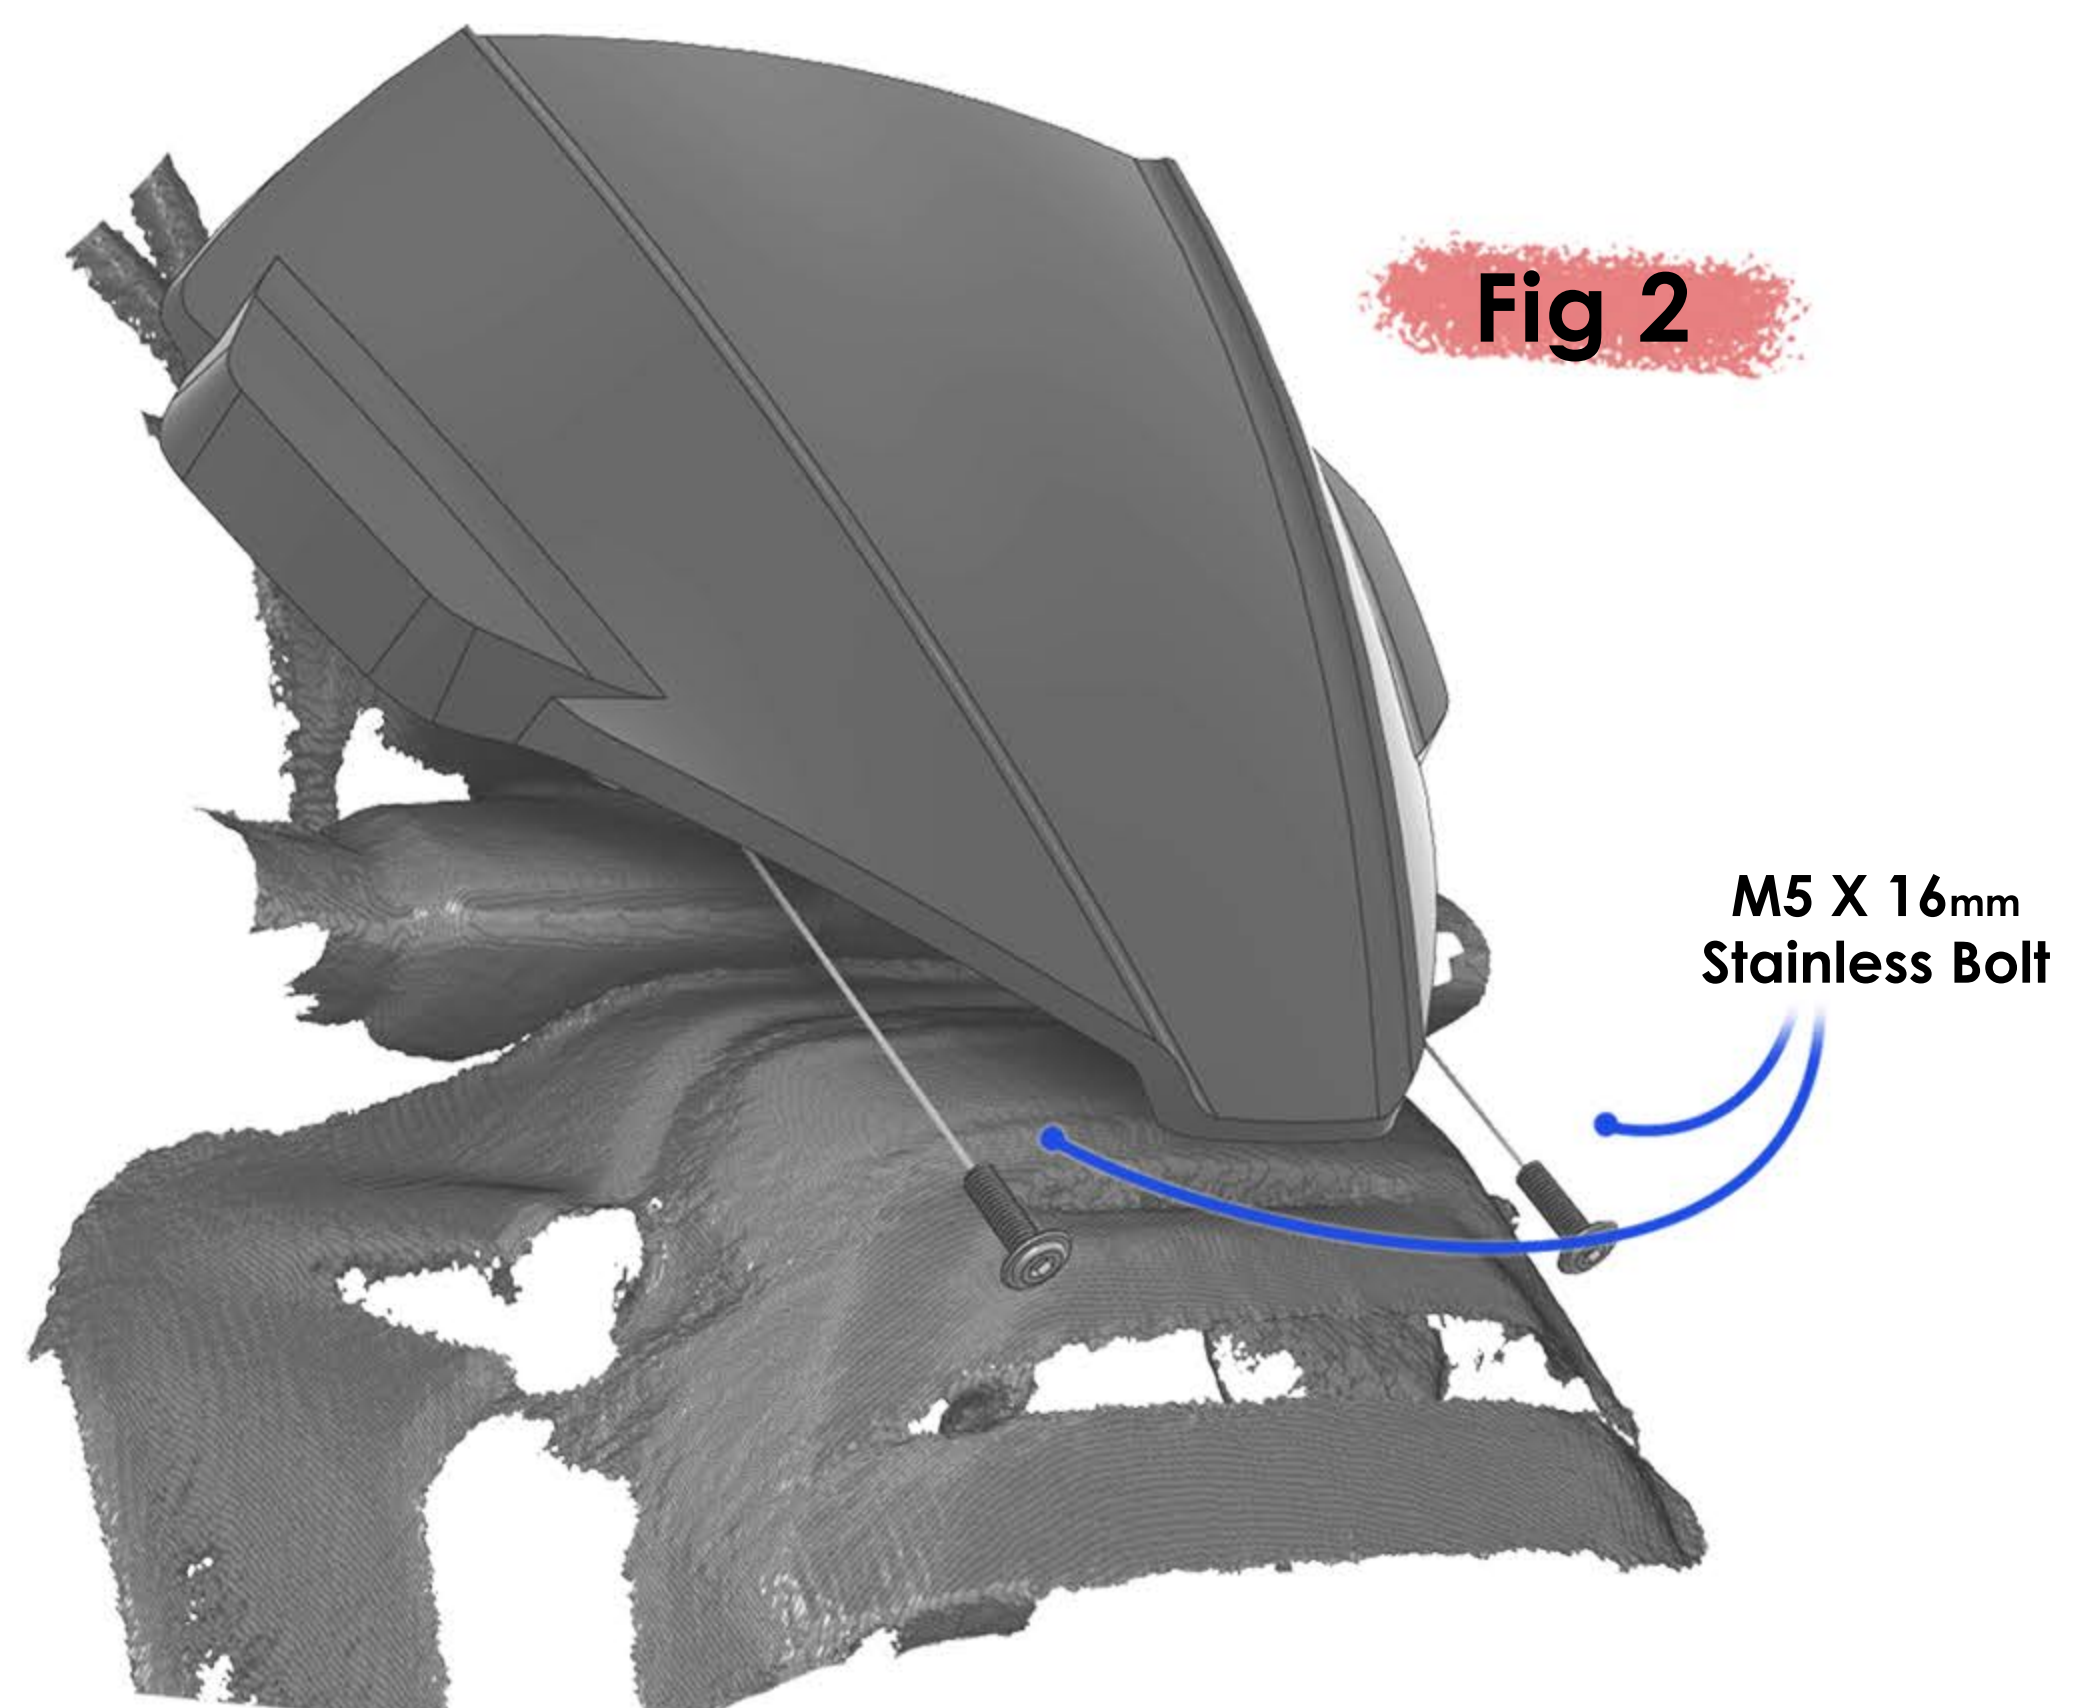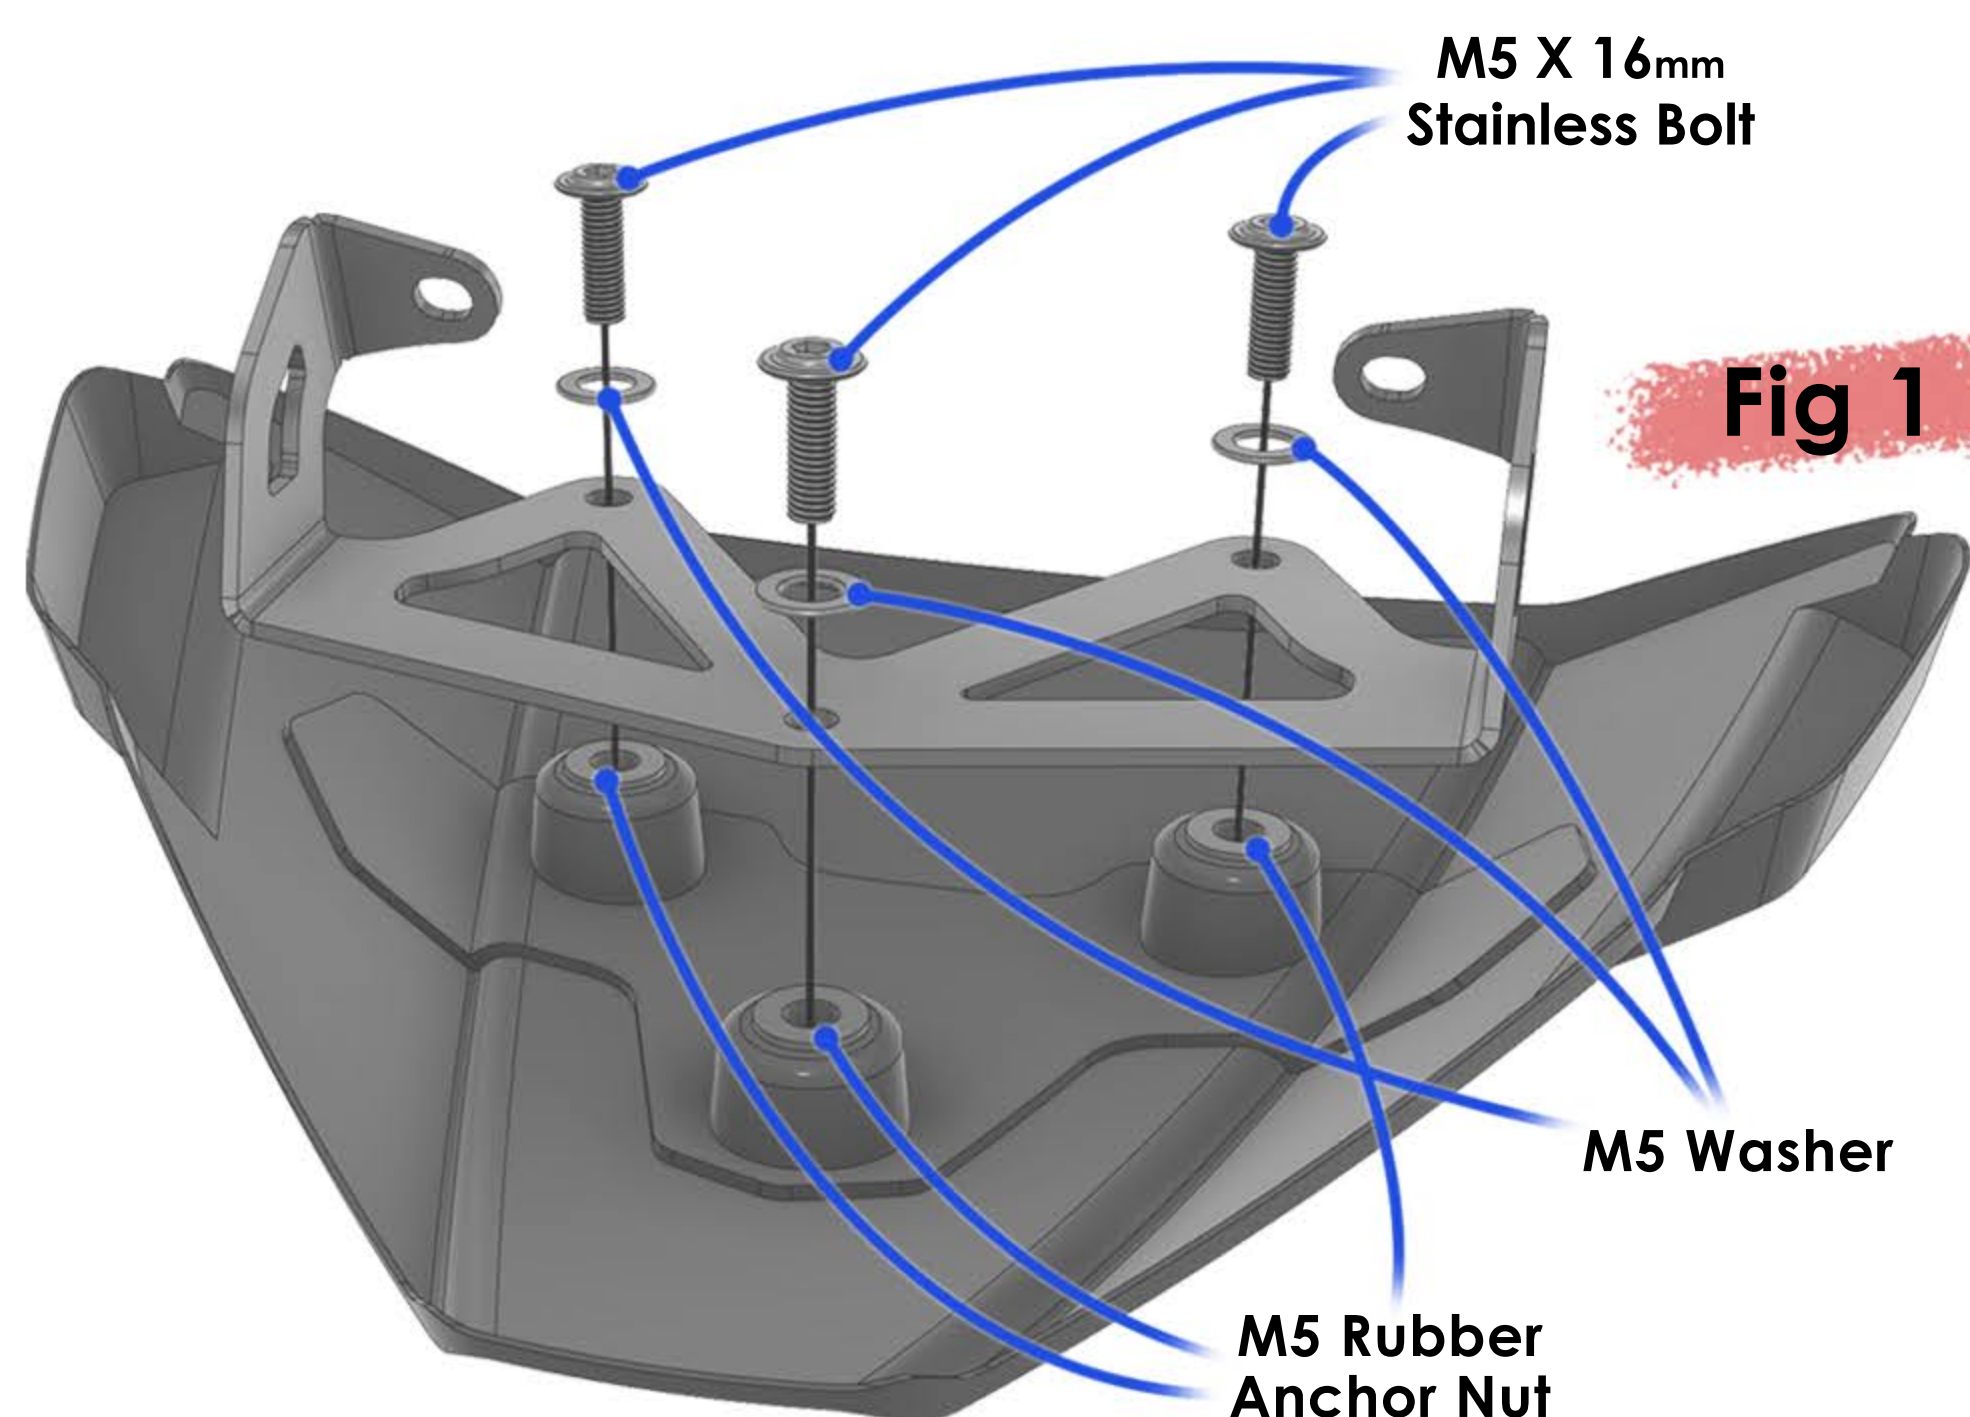

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!