

## 21577 Honda CB750 Hornet Belly Pan Fitting Instructions

### Kit Includes:


1X	C21577	Belly Pan (2 parts)
2X	CFK21577A + B	Brackets (2 parts)
1X	CFK21577C	Centre Panel
4X	CBOLM40002	M4 x 12mm Bolt
4X	CWASM40001	M4 Washer
4X	CNUTM40002	M4 Nyloc Nut
4X	CBOLM60008	M6 x 16mm Bolt
4X	CWASM60003	M6 Washer
4X	CPNUT0001 <small>Pre-fitted by Pyramid</small>	Aluminium Nut
1X	CBRA2850	Kardesign x Pyramid Decal (150mm x 25mm)

Attach the brackets using the OEM bolts on the bike (see **Fig 1 & 2**).

Assemble the belly pan using the centre panel and M4 fittings provided (see **Fig 3**).

Attach the belly pan to the brackets using the M6 x 16mm bolts and M6 washers supplied.

Check fixings periodically.

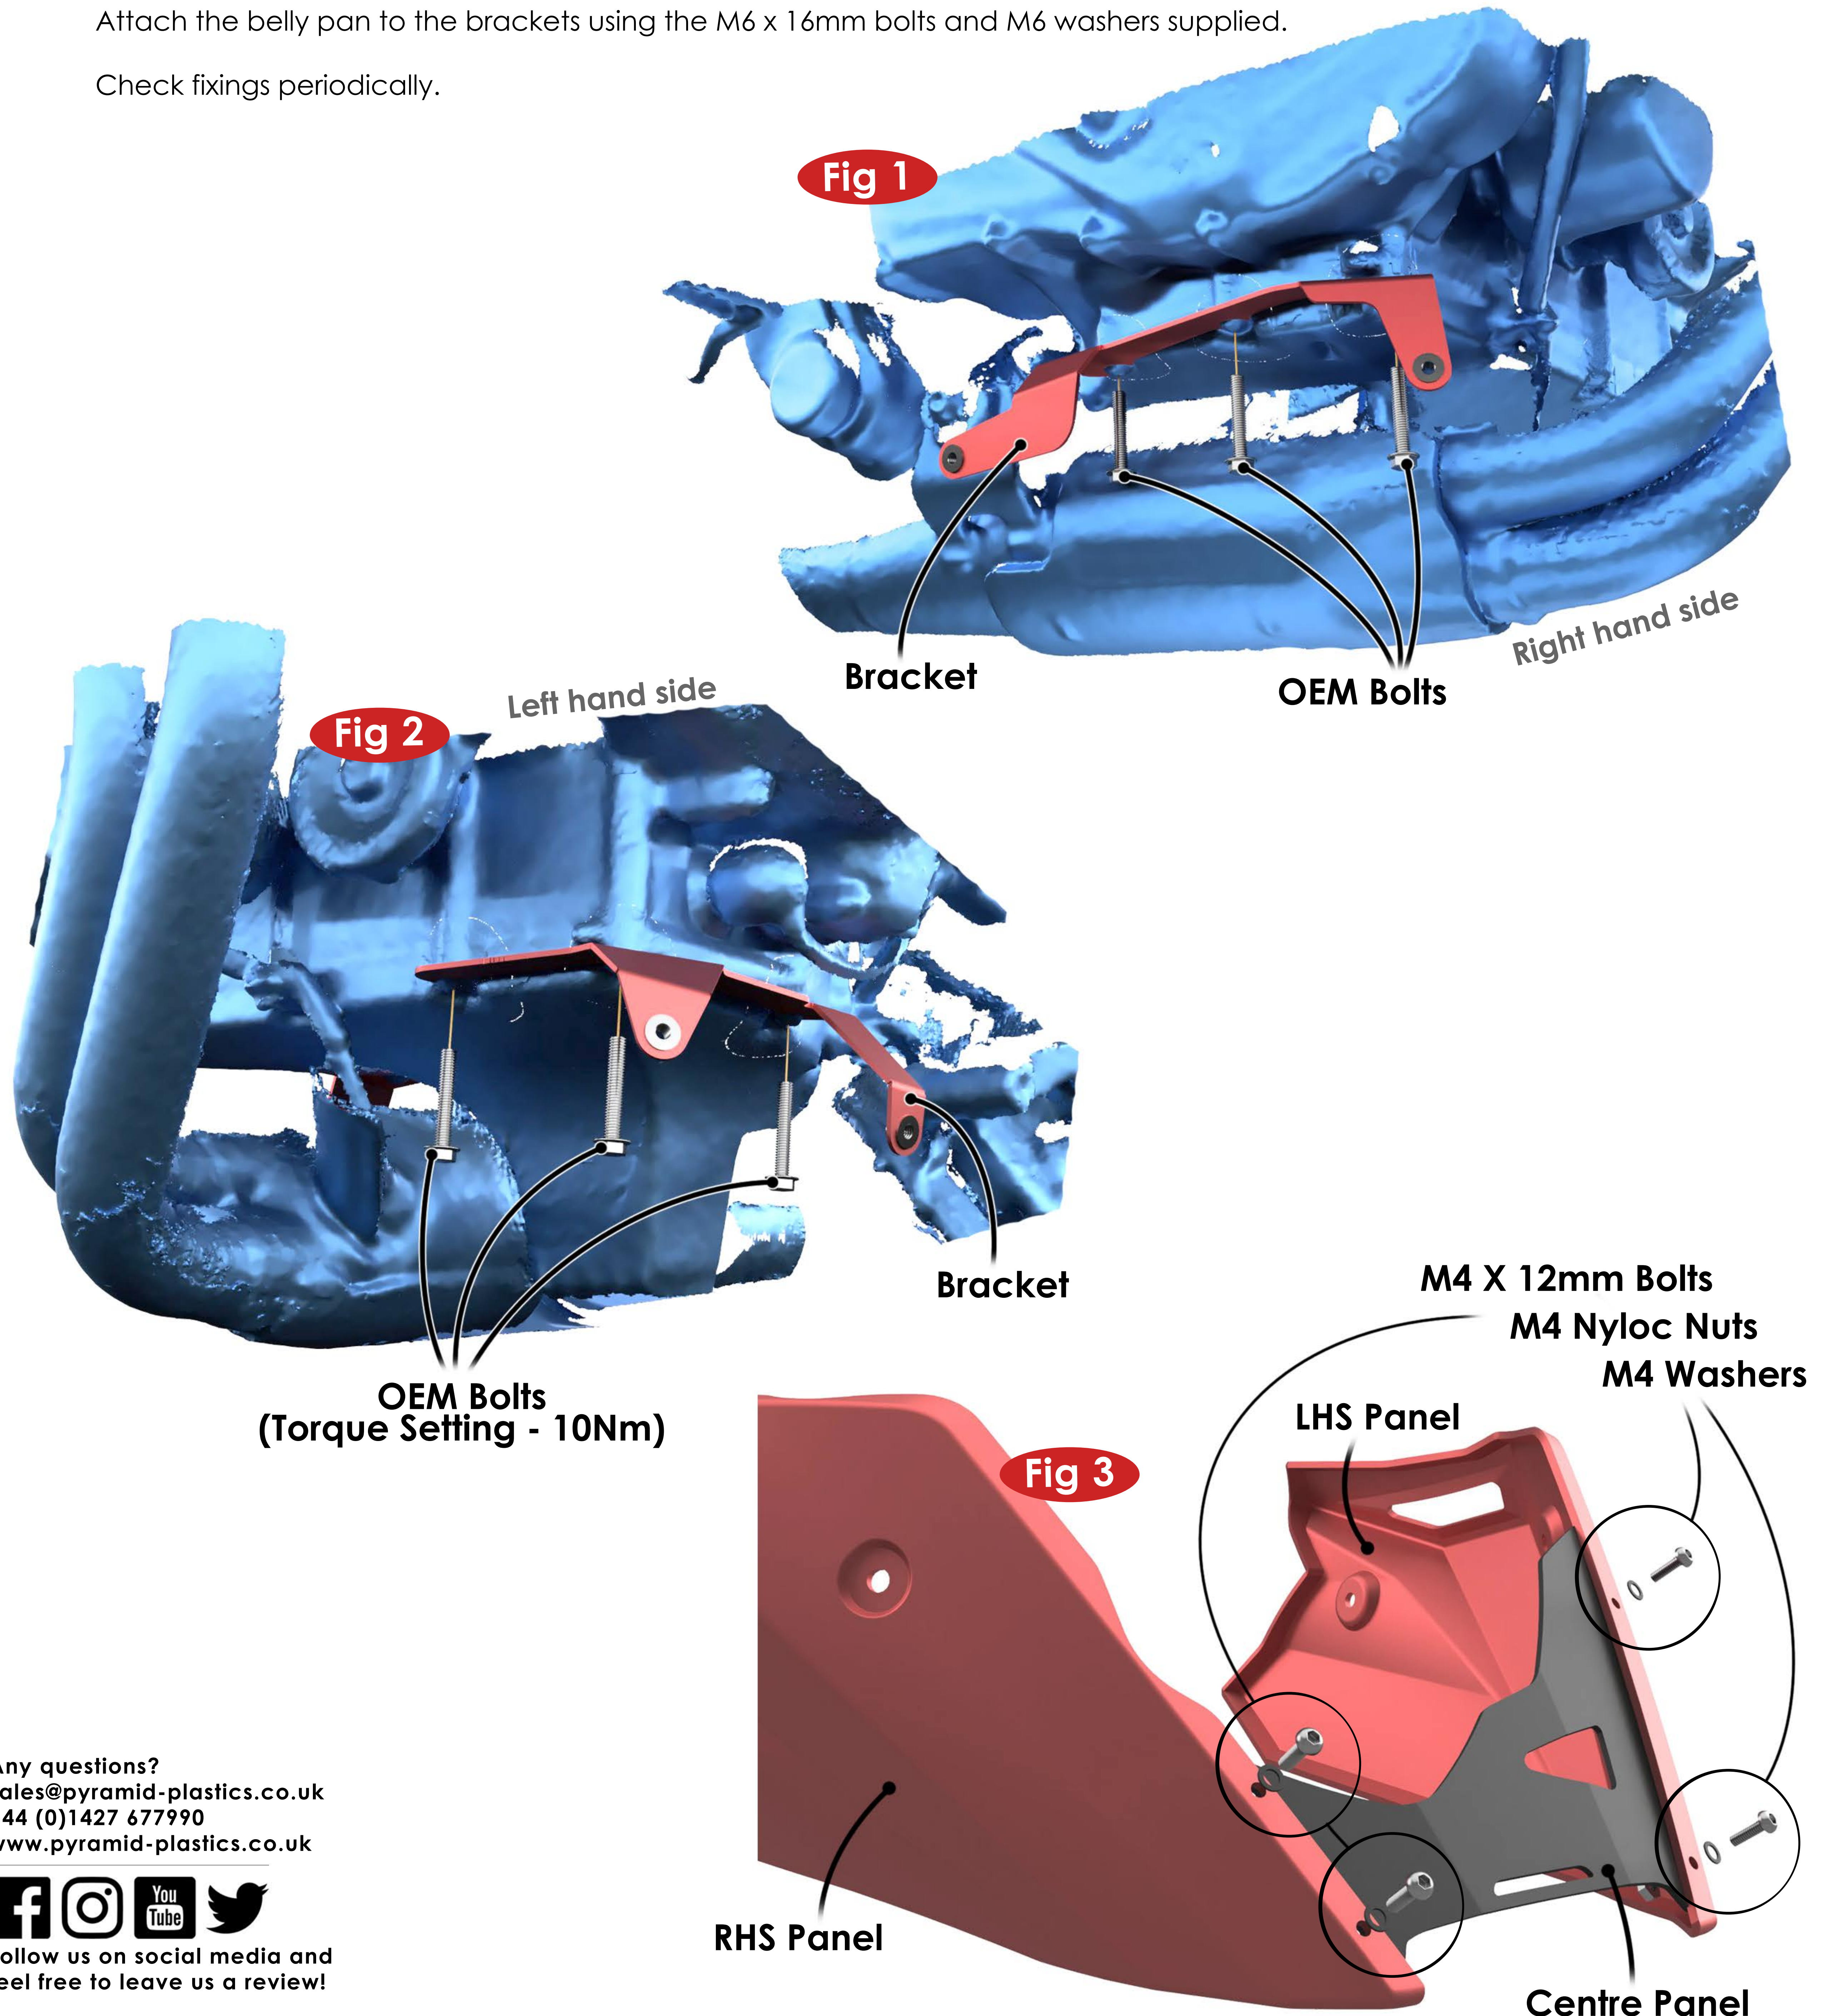

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!