

FZ1 Fazer Belly pan Part # 22117**Kit includes:-**

2x mounting bracket	CFK22105
4x M6x16mm Flange headed bolt	CBOLM60008
2x M8x35mm countersunk bolt	CBOLM80009
2x M8 Nyloc nuts	CNUTM80003
4x plastic washer	CWASM60003

Remove the centre Allen bolt from the sump on both sides (fig1).

Place the M8 bolt and nut through the bracket and un-used mounting points on the front of the engine (fig2) then add original bolt you removed and fit the bracket to the bike (fig3)

Repeat this process on both sides, make sure tightened all round.



Fig1



Fig2

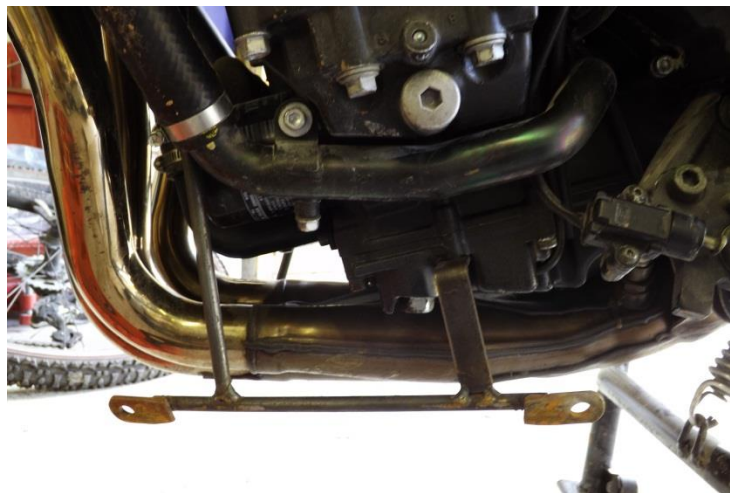


Fig3

Add the belly pan to the bike using the 4 M6x16mm Flange headed bolts and plastic washers.

Don't tighten till all bolts are in place.