

22132 Yamaha MT-09, Tracer 900 & XSR900 Belly Pan Fitting Instructions

Kit Includes:

1X	C22132	Moulding
3X	CFK22132	Brackets
4X	CBOLM60008	M6 X 16mm Flanged Button Head Bolts
4X	CWASM60003	M6 Plastic Washers

Please refer to the pictures as a fitting guide.

- Before assembly place card or similar protective material under the bike to protect the Pyramid belly pan from accidental damage during installation.
- Fig 1 shows the correct layout of the brackets. It is for illustration purposes only. Please fit the brackets to the bike first and then attach the Pyramid belly pan.
- Fig 2, 3 & 4 show the brackets attached in their correct positions on the engine casing bolts.
- Use the bolt and washers supplied to loosely attach the Pyramid belly pan to the brackets.
- Once the Pyramid belly pan is fitted loosely check for best possible positioning and then fully tighten all the mounting points.
- Check all fixings periodically.

Fig 1




Fig 2



Fig 4



Fig 3

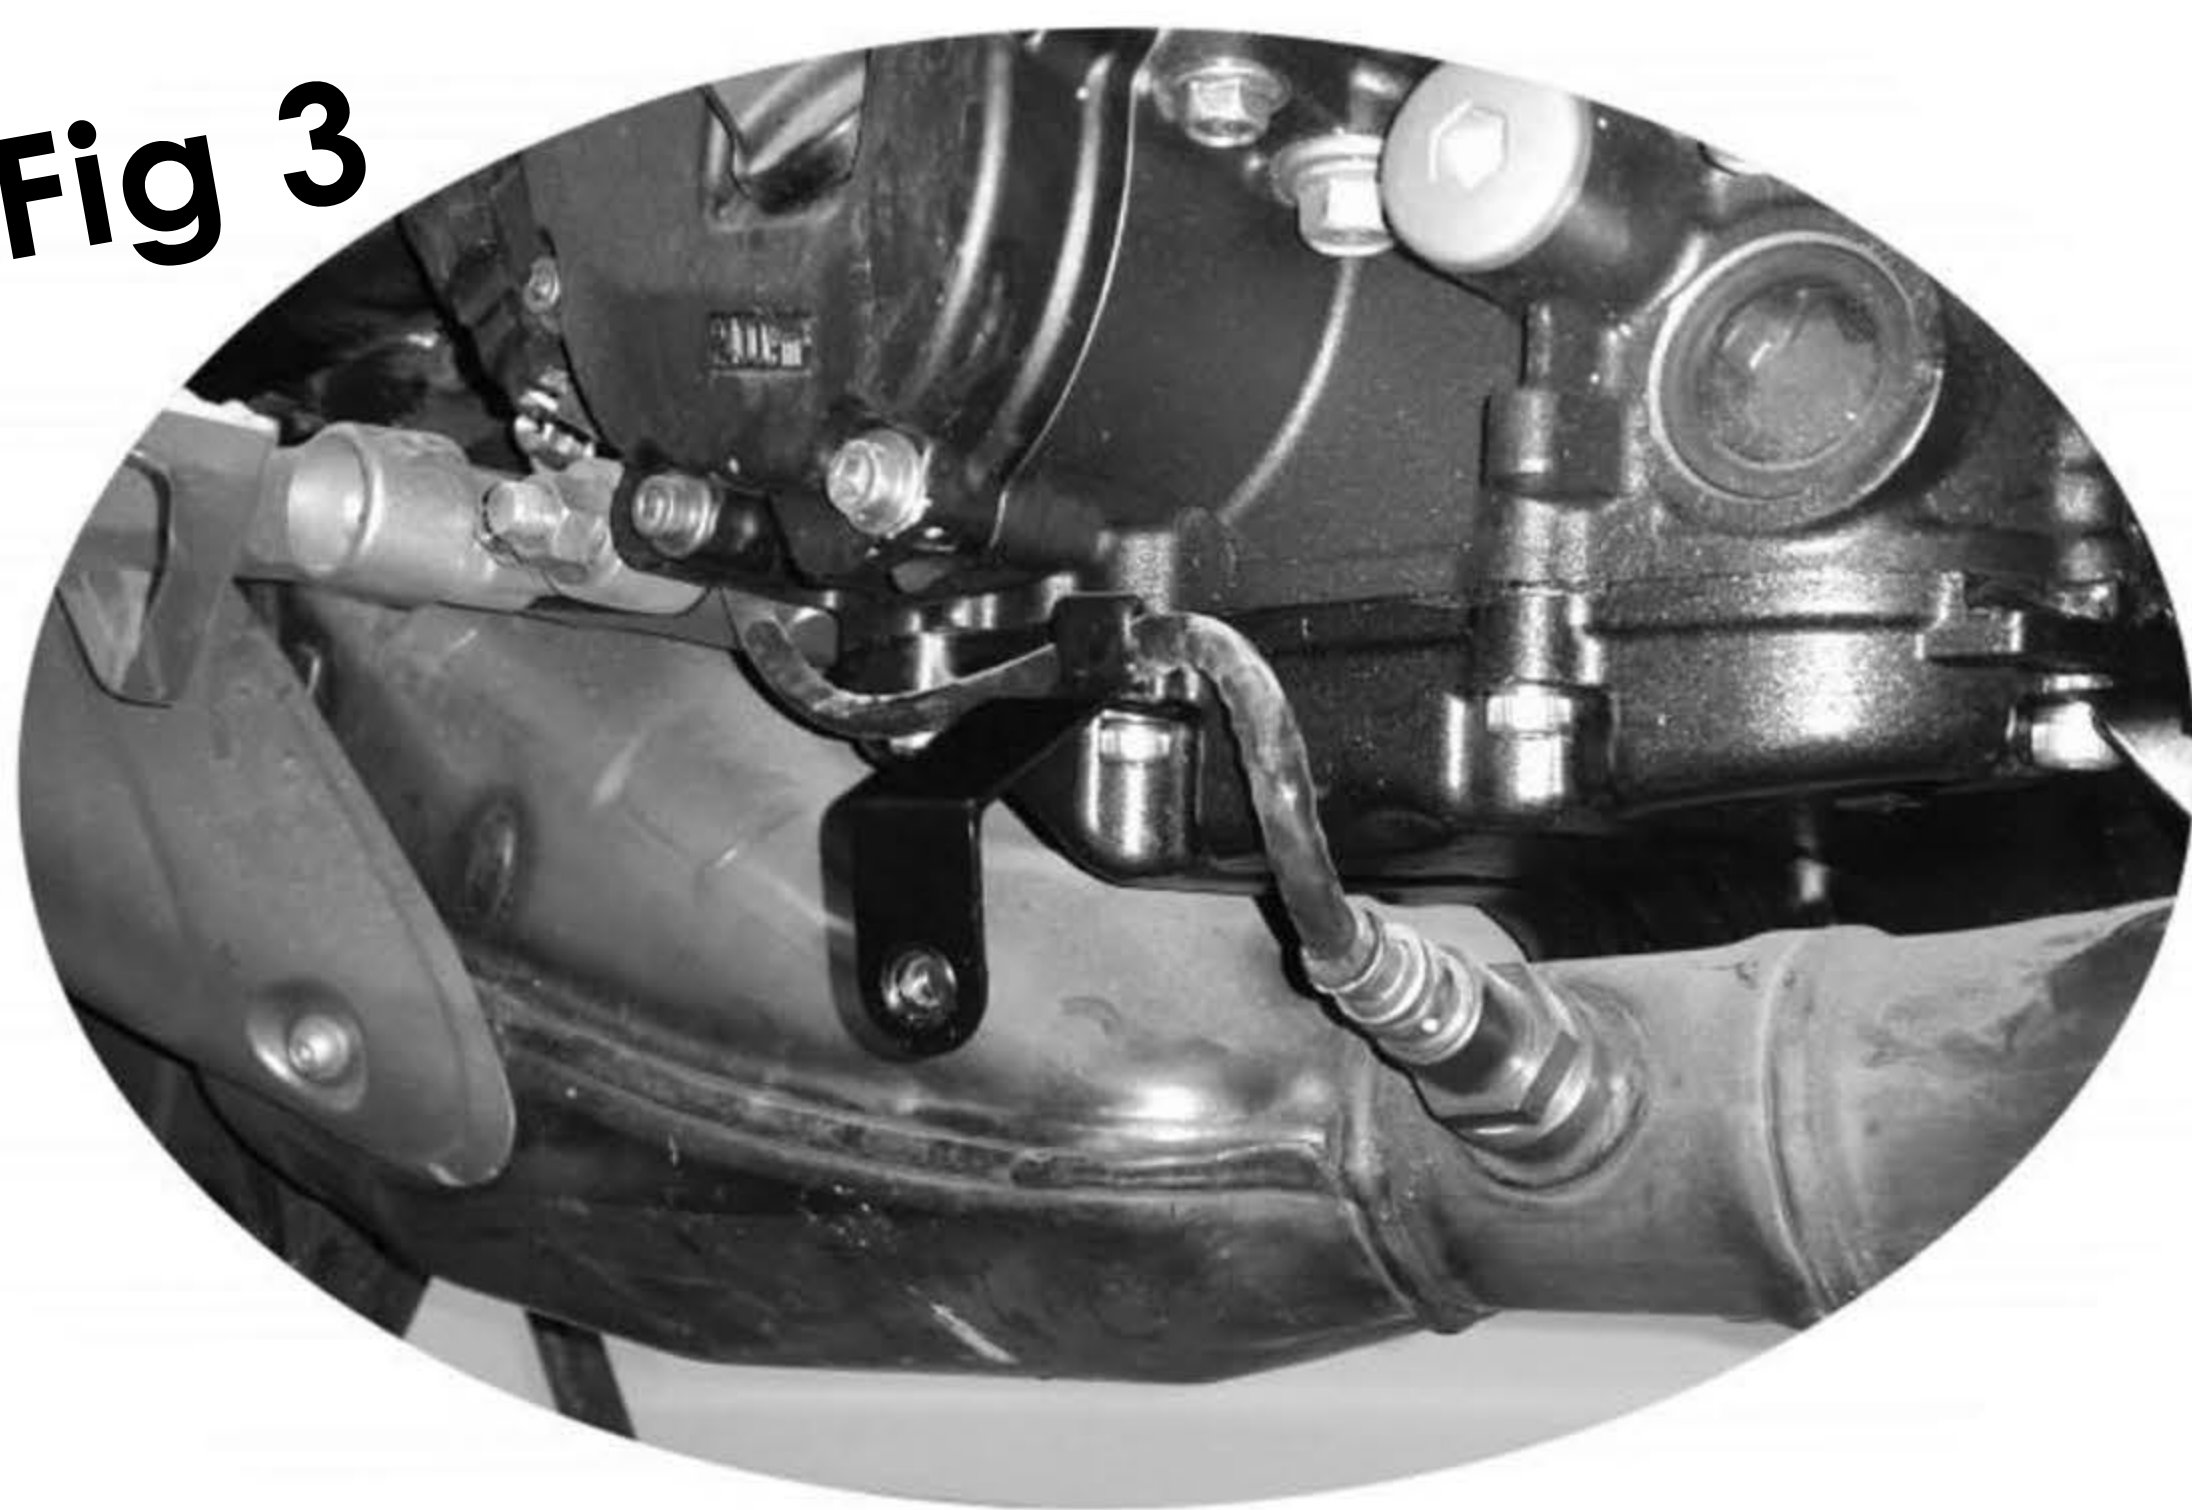

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!