


## 22141 Yamaha MT-10 Sport Fairing Panels

### Kit Includes:

● X1 M5 X 30mm	Spacer	CSPAM50001
● X2 M6 X 25mm	Spacer	CSPAM60008
● X1 3.6mm X 10mm X 15mm	Spacer	CSPAM60010
▲ X1 M6 X 30mm	Bolt	CBOLM60027
▲ X1 M5 X 12mm	Bolt	CBOLM50006
▲ X2 M5 X 16mm	Bolt	CBOLM50007
▲ X2 M6 X 10mm	Bolt	CBOLM60025
■ X2 M6 X 1.56mm	Washer	CWASM60004

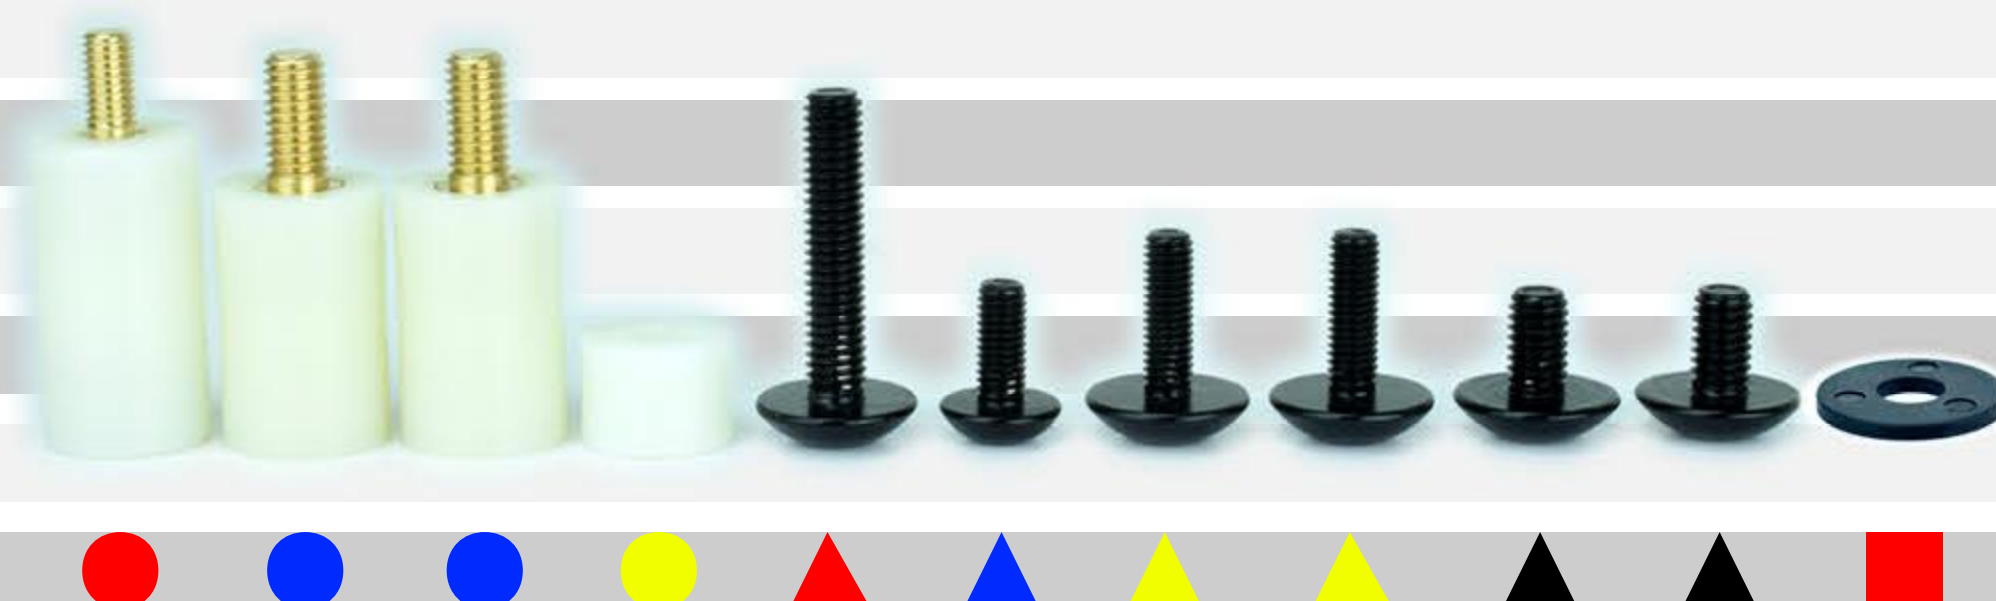

**Note:** Washer CWAS0230 ■ is **NOT** needed if you have a Radiator Guard fitted.


- Remove the original panel and bolt highlighted in **Fig 1** (repeat on opposite side).
- In **Fig 2** (right hand side of bike), hole **A** needs the 3.6mm X 10mm X 15mm ● Spacer and hole **B** needs an M6 X 25mm ● Spacer and an M6 X 1.56mm ■ Washer.
- In **Fig 3** (left hand side of the bike), hole **A** needs an M6 X 25mm ● Spacer and an M6 X 1.56mm ■ Washer. Hole **B** needs the M5 X 30mm ● Spacer.
- Now the panels are ready to be fitted using the remaining fixings **Fig 4**.




**Fig 2 right hand side**



**Fig 3 left hand side**

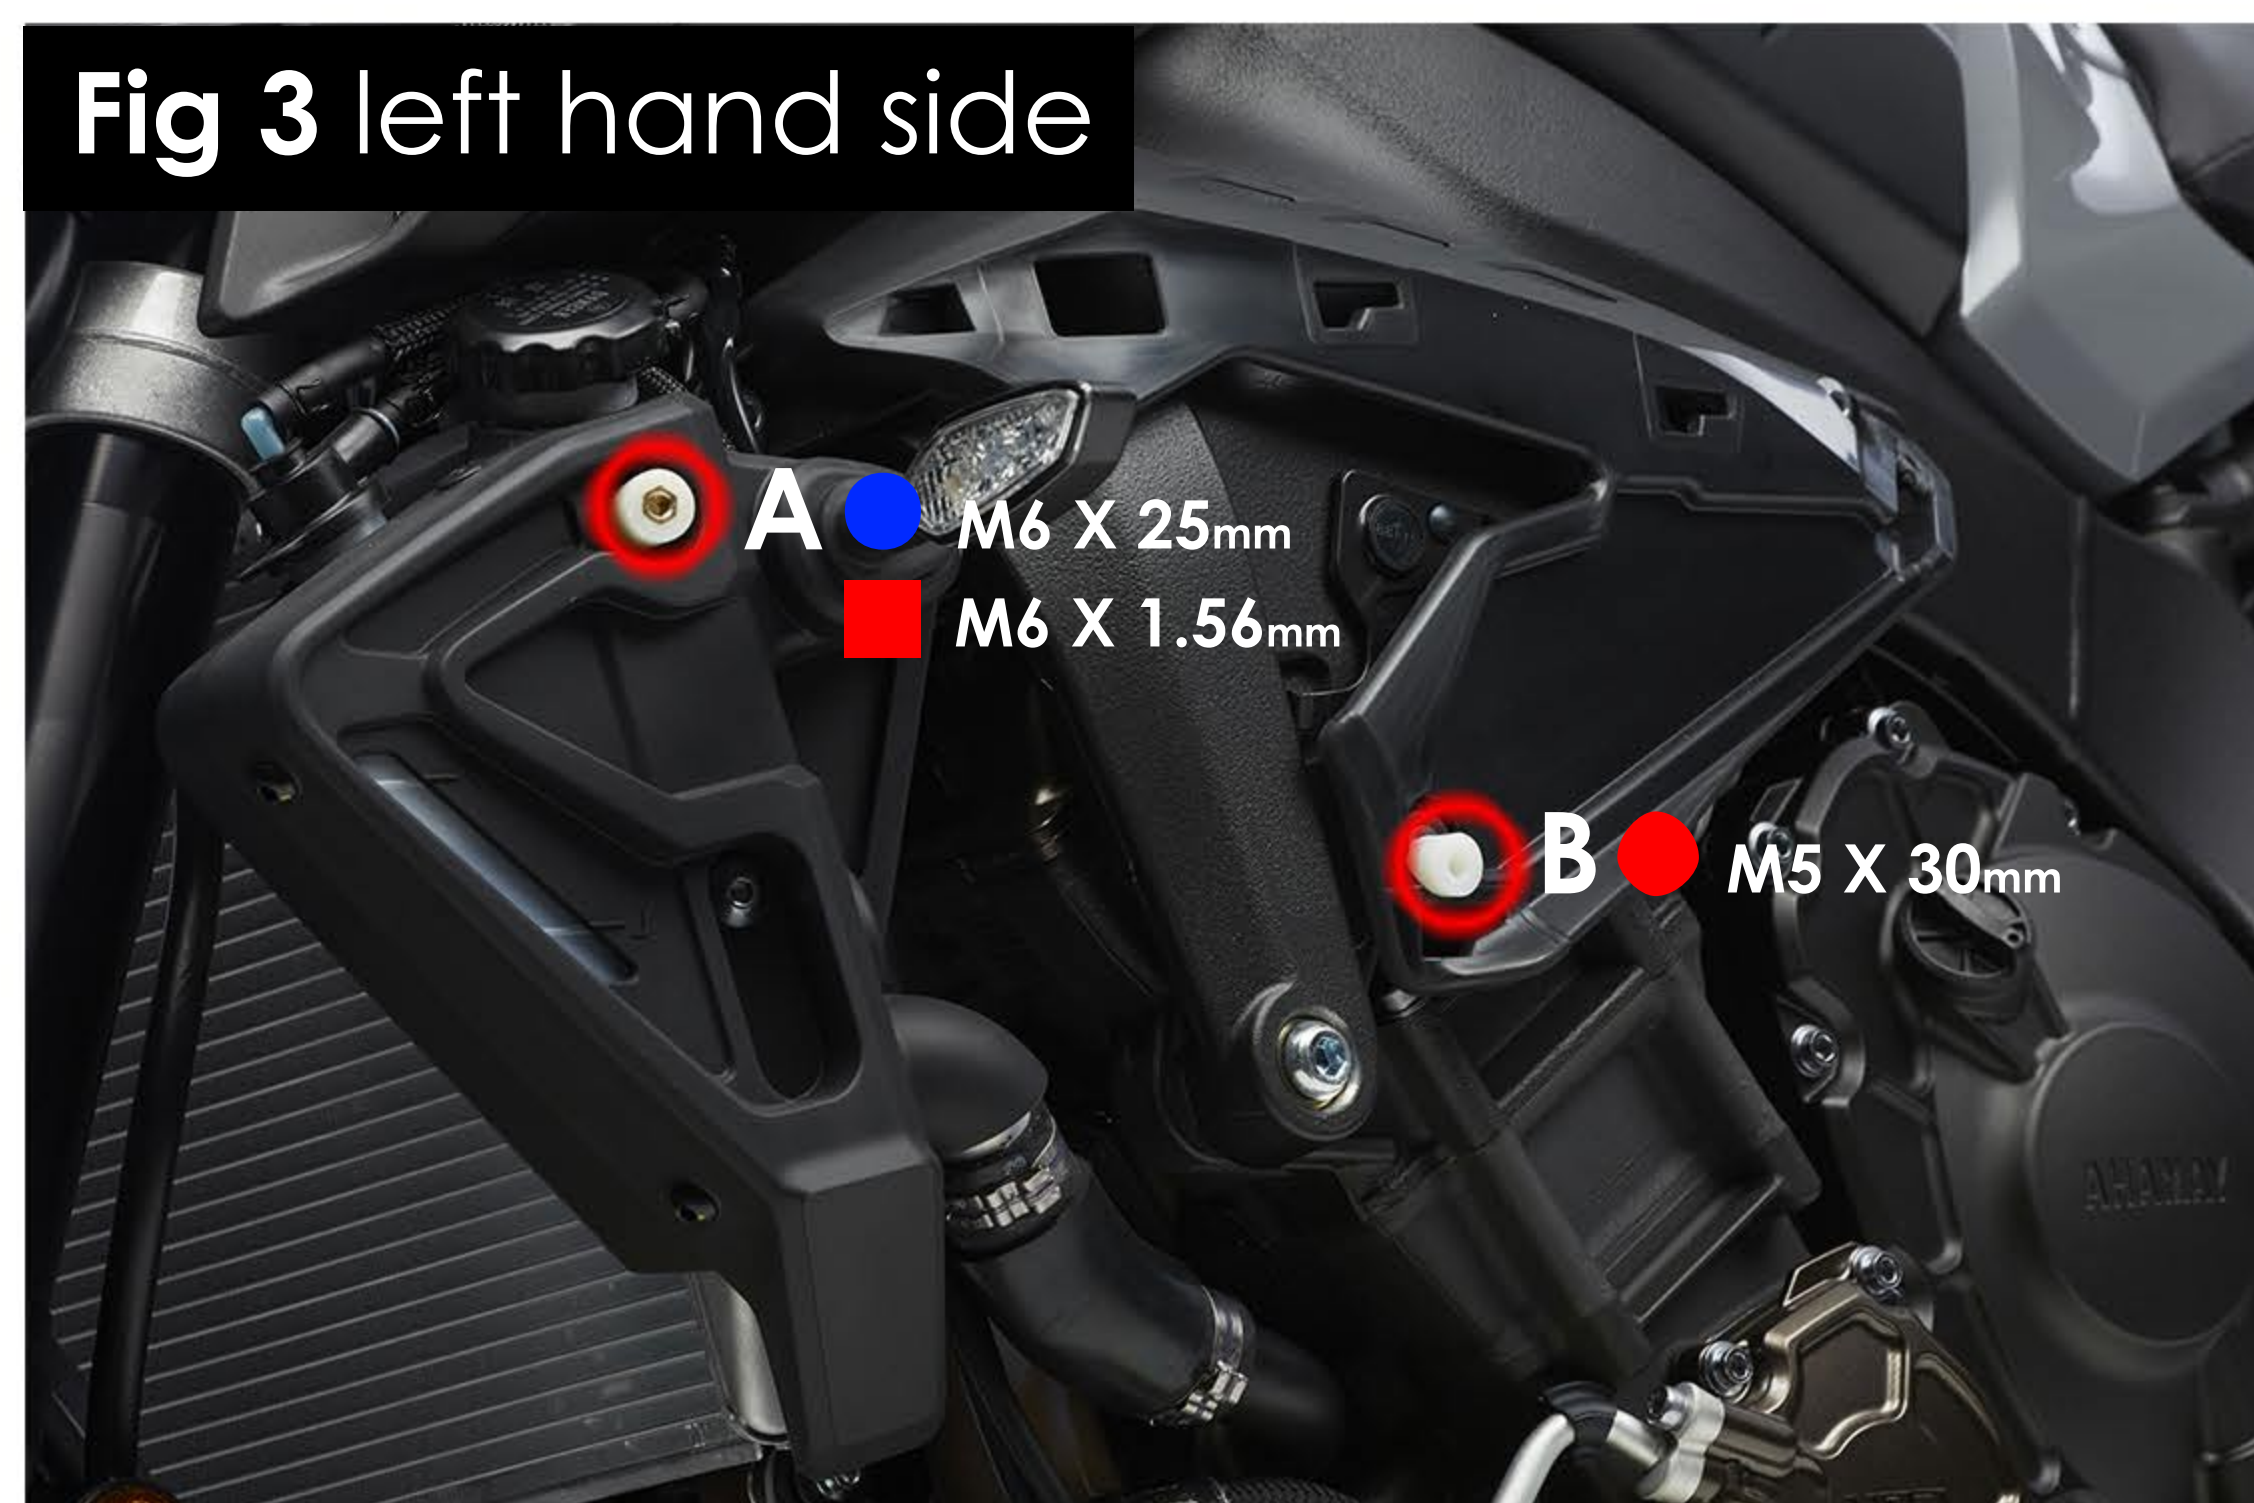


M5 X 16mm ▲

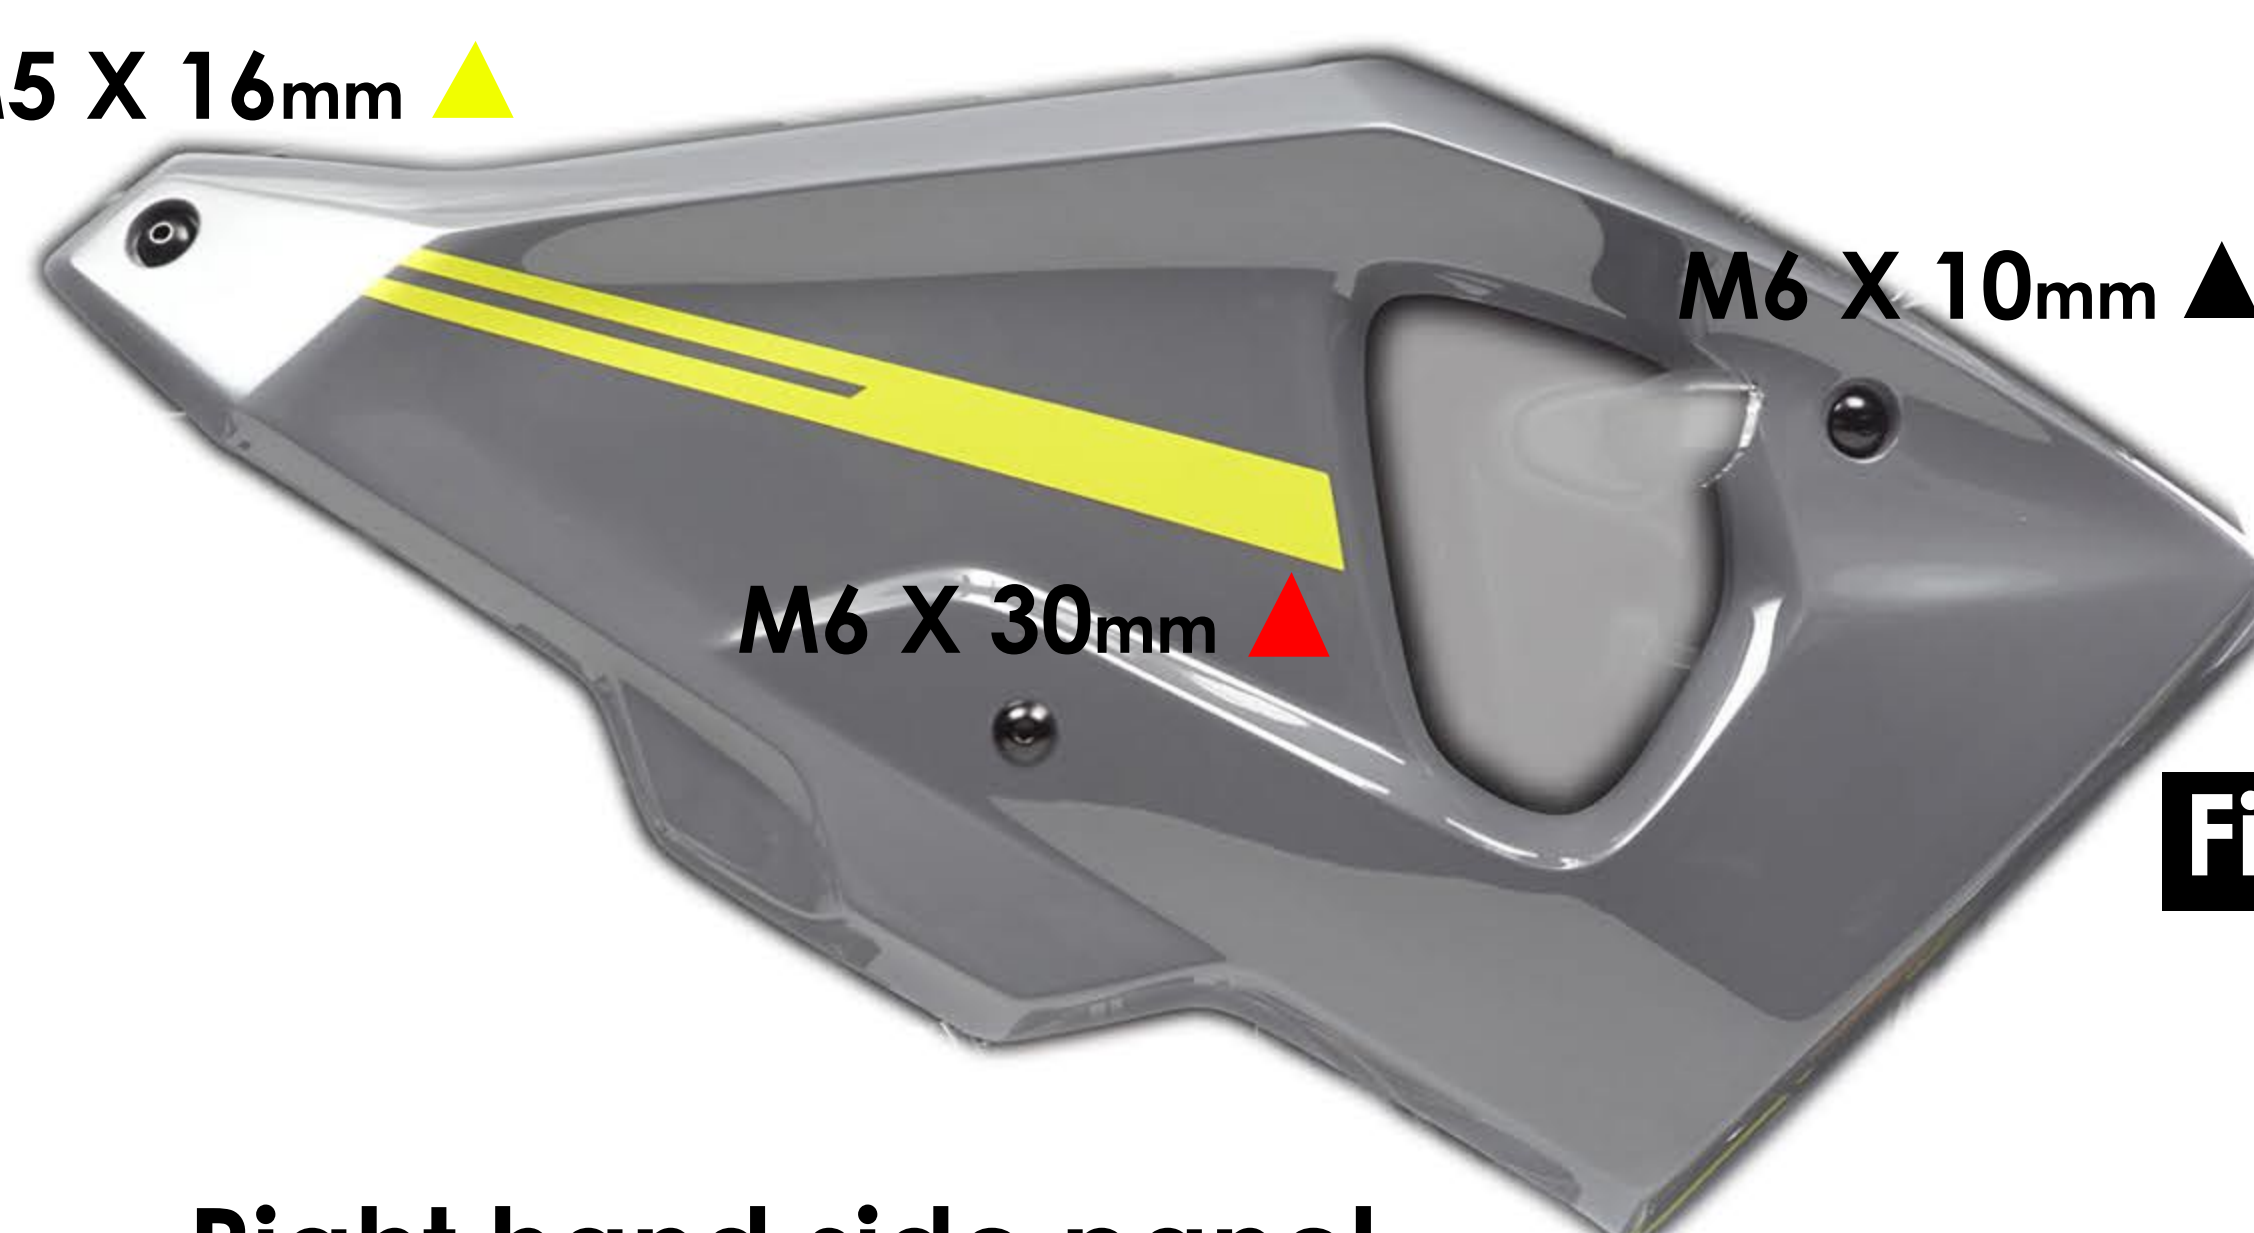

Right hand side panel

M5 X 16mm ▲

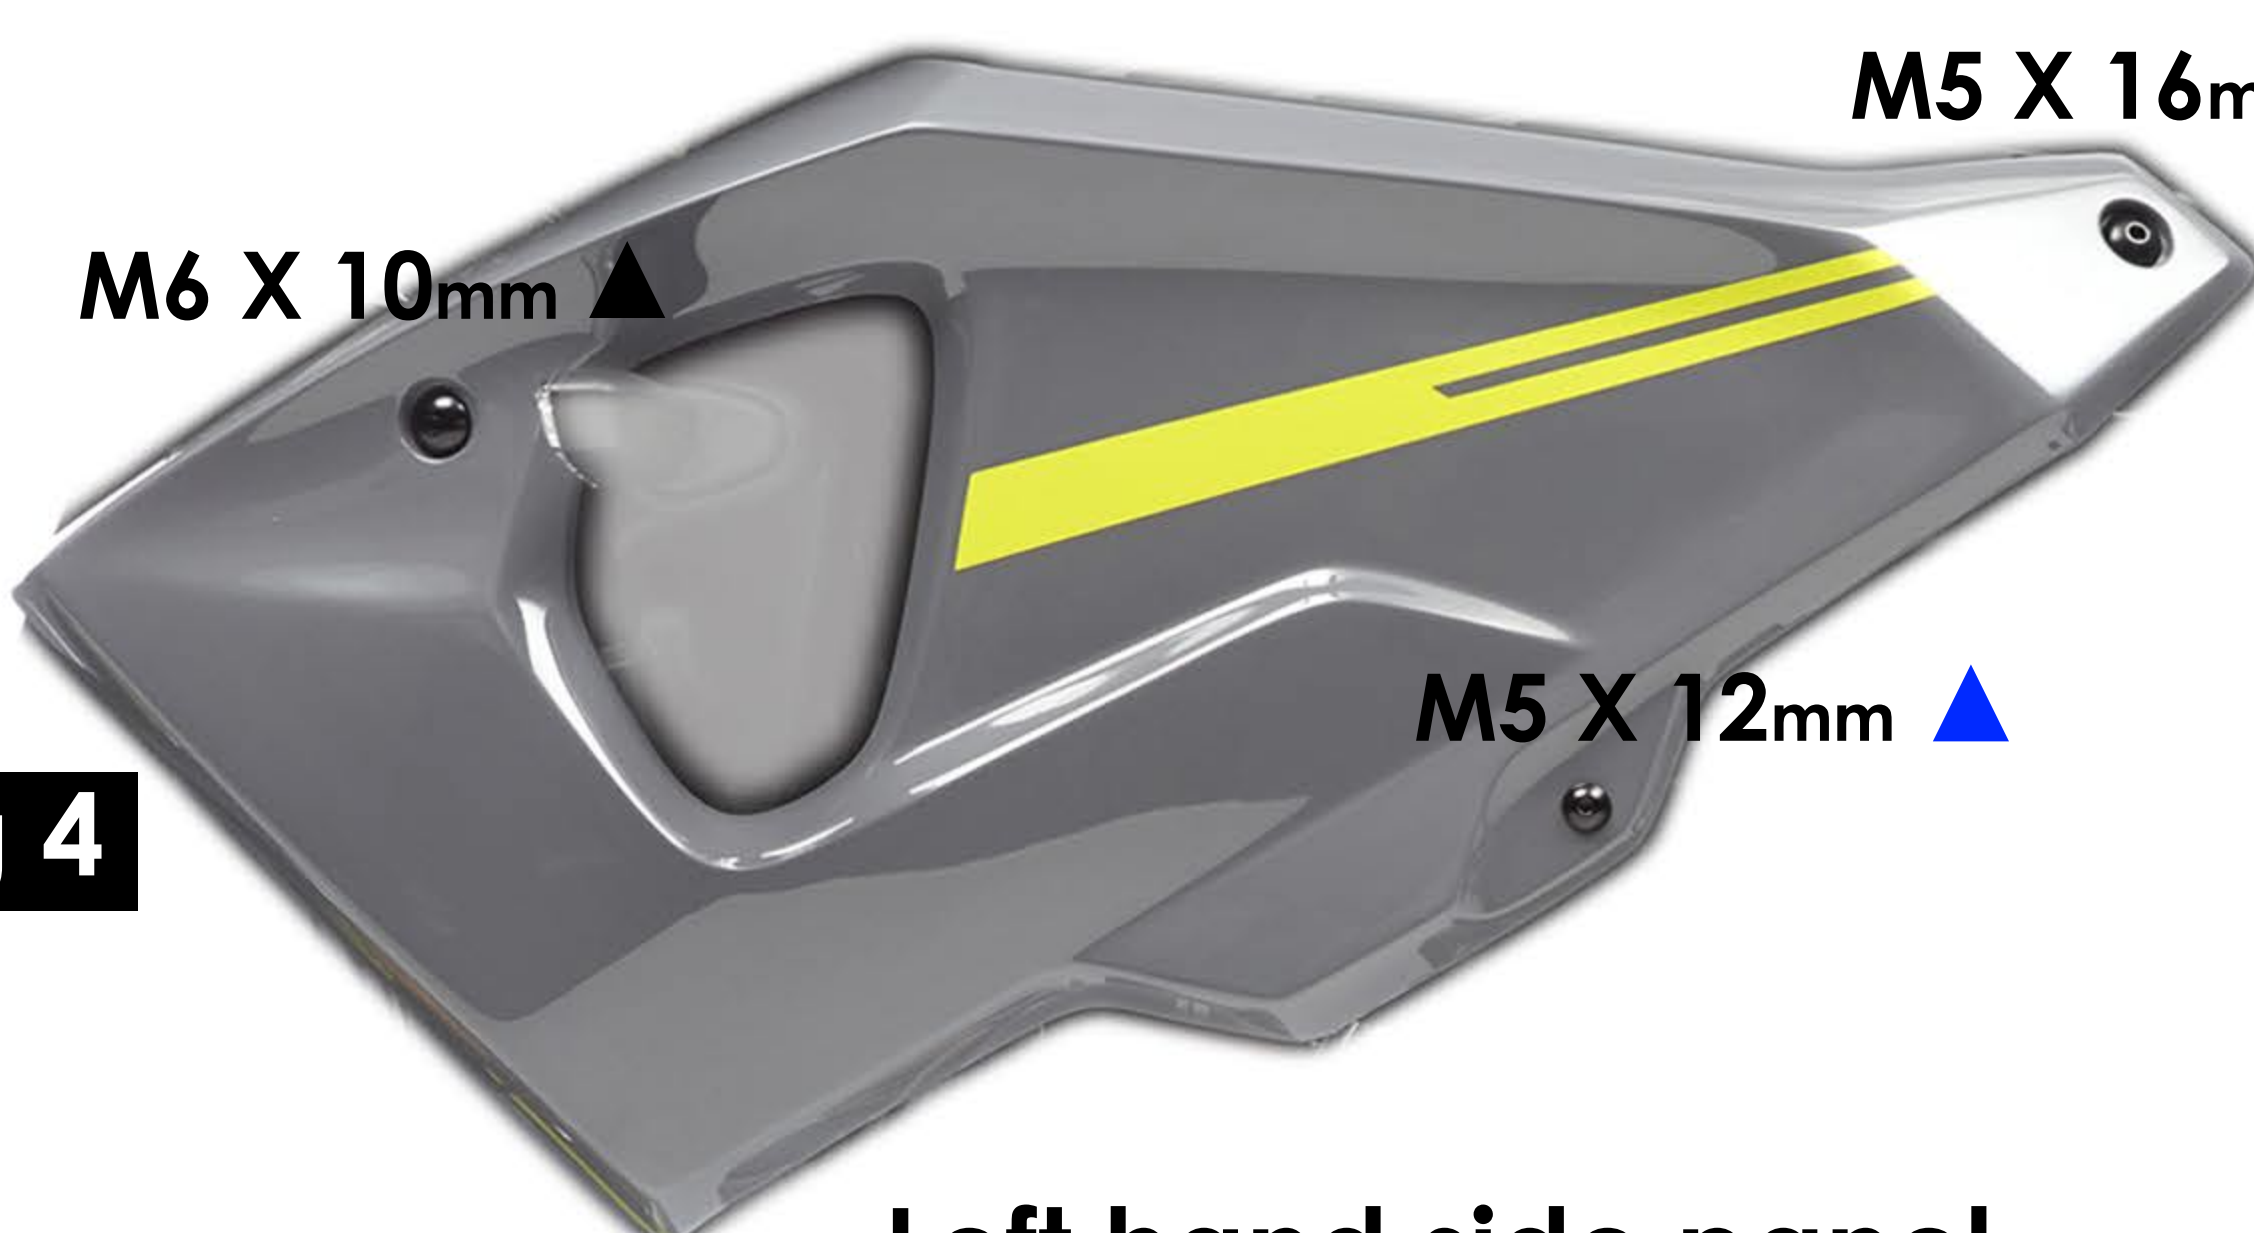

Left hand side panel

**Fig 4**