


PYRAMID

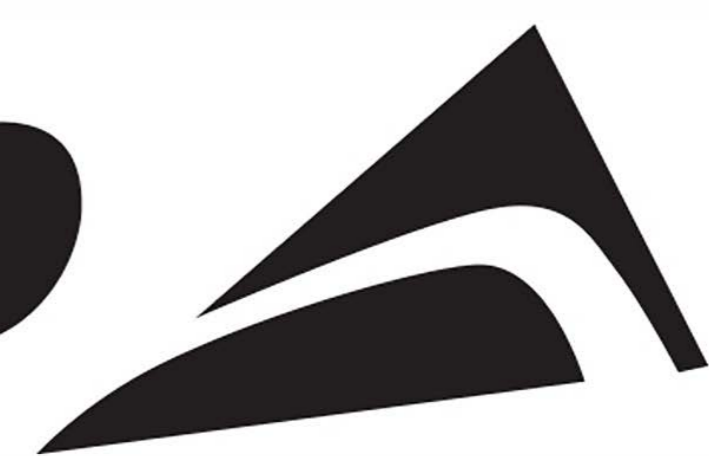

22142 Yamaha MT-09 Fly Screen 2017>

Kit Includes:

1X Velcro Tabs

C09000

2X Grommet & Spacer


CGR0M60001/CSPAM60004

- Remove the two bolts on each side of the light unit.
- Place the Fly Screen over the light unit and loosely re-fit the two bolts.
- Lift up the Fly Screen to gain access to the Velcro Tab and peel of the protective film.
- Press the Fly Screen firmly down into place.
- Fully tighten the two side bolts originally removed in the first step.
- **Check all fixings periodically.**



sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

PYRAMID

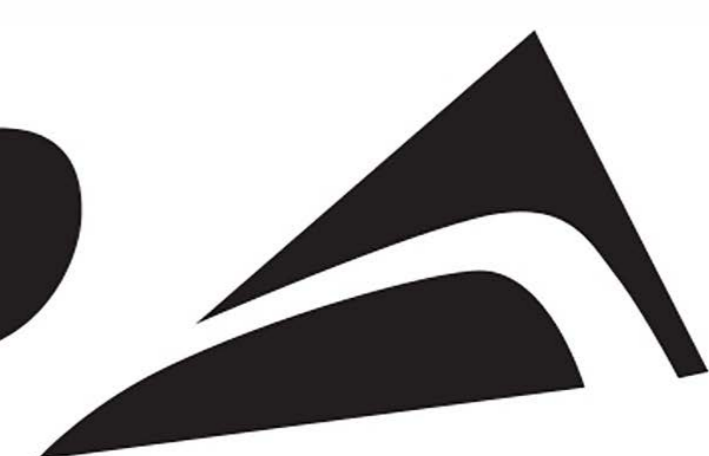

22142 Yamaha MT-09 Fly Screen 2017>

Kit Includes:

1X Velcro Tabs

C09000

2X Grommet & Spacer

CGR0M60001/CSPAM60004

- Remove the two bolts on each side of the light unit.
- Place the Fly Screen over the light unit and loosely re-fit the two bolts.
- Lift up the Fly Screen to gain access to the Velcro Tab and peel of the protective film.
- Press the Fly Screen firmly down into place.
- Fully tighten the two side bolts originally removed in the first step.
- **Check all fixings periodically.**



sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk