
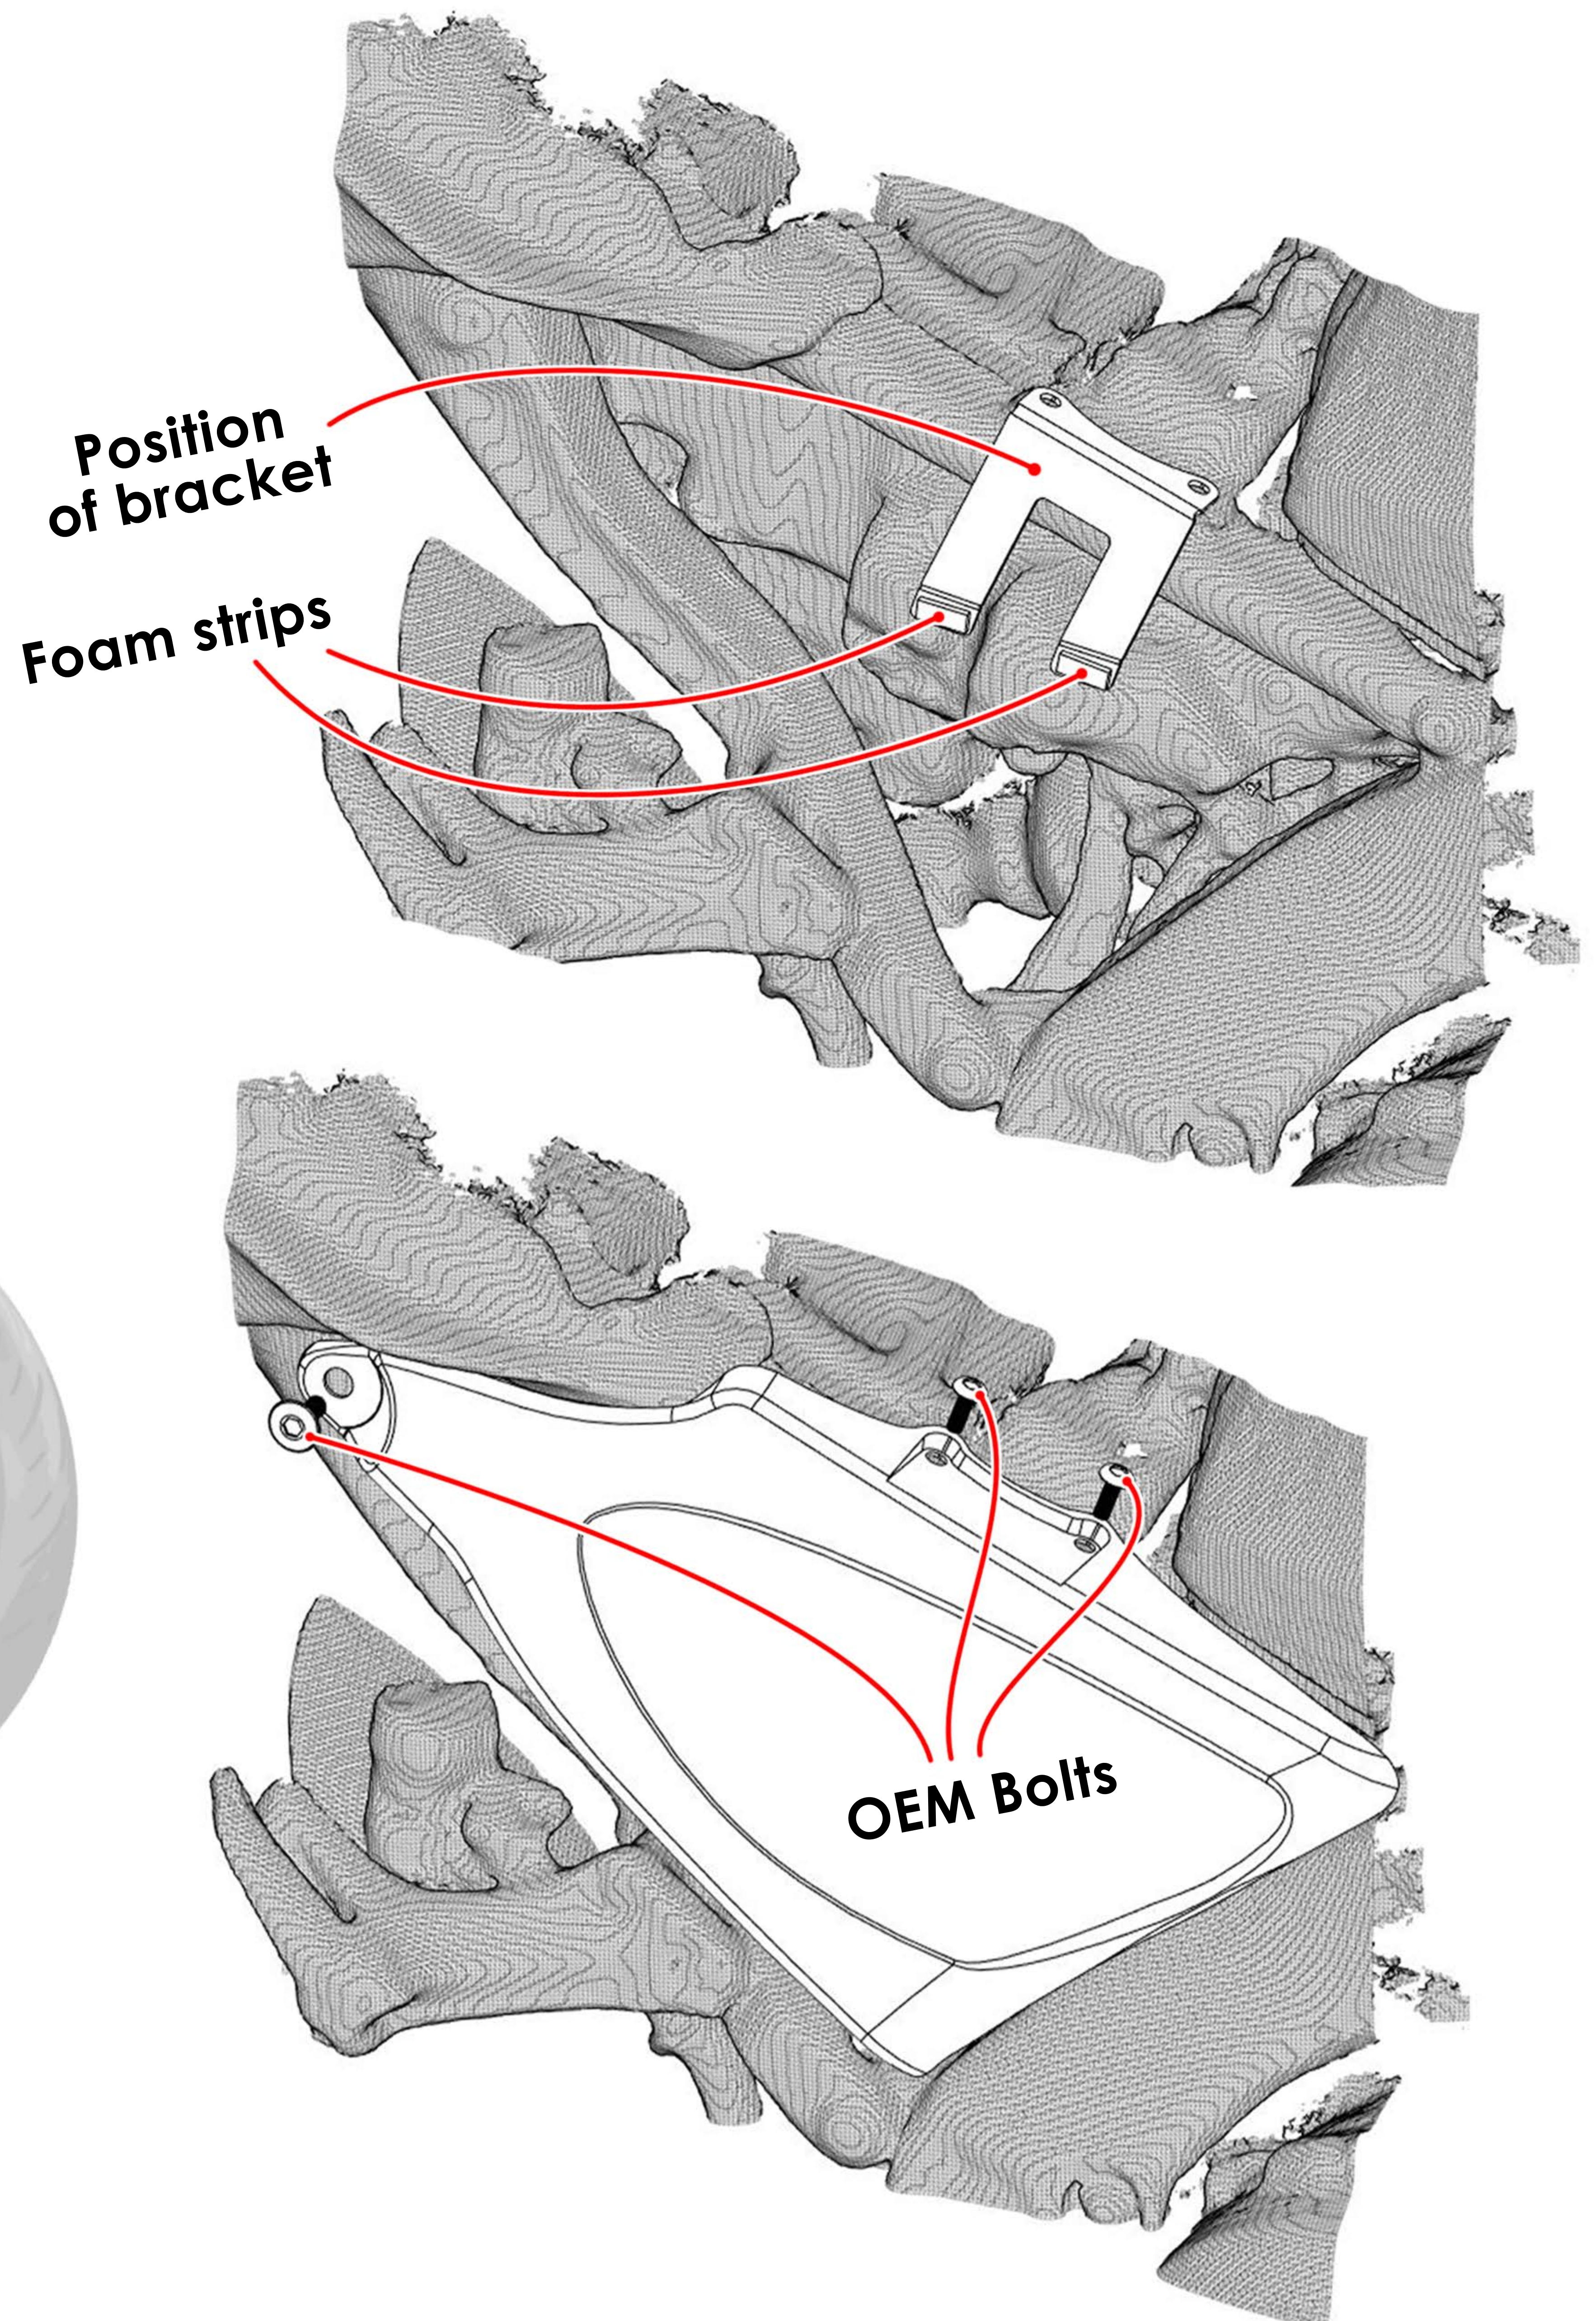


22143 Yamaha MT-09 Infill Panels Fitting Instructions

Kit Includes:

1X	C22143	Mouldings (pair)
1X	CFK22143	Brackets (pair)
4X	CFOA0001	Foam Strips (cut to 20mm length)

- Attach the foam strips provided as shown below.
- Remove the seat from the motorcycle.
- Remove the bolts holding the seat catch at the front (see below).
- Remove the single bolt from the frame (see below).
- Attach the Pyramid infill panels as shown below.
Please ensure that the correct bracket is used as shown below - the shorter of the two folded tabs on the bracket should be closer to the front of the motorcycle. Fitment is the same on both sides of the motorcycle.
- Refit the seat.
- Check fixings periodically.

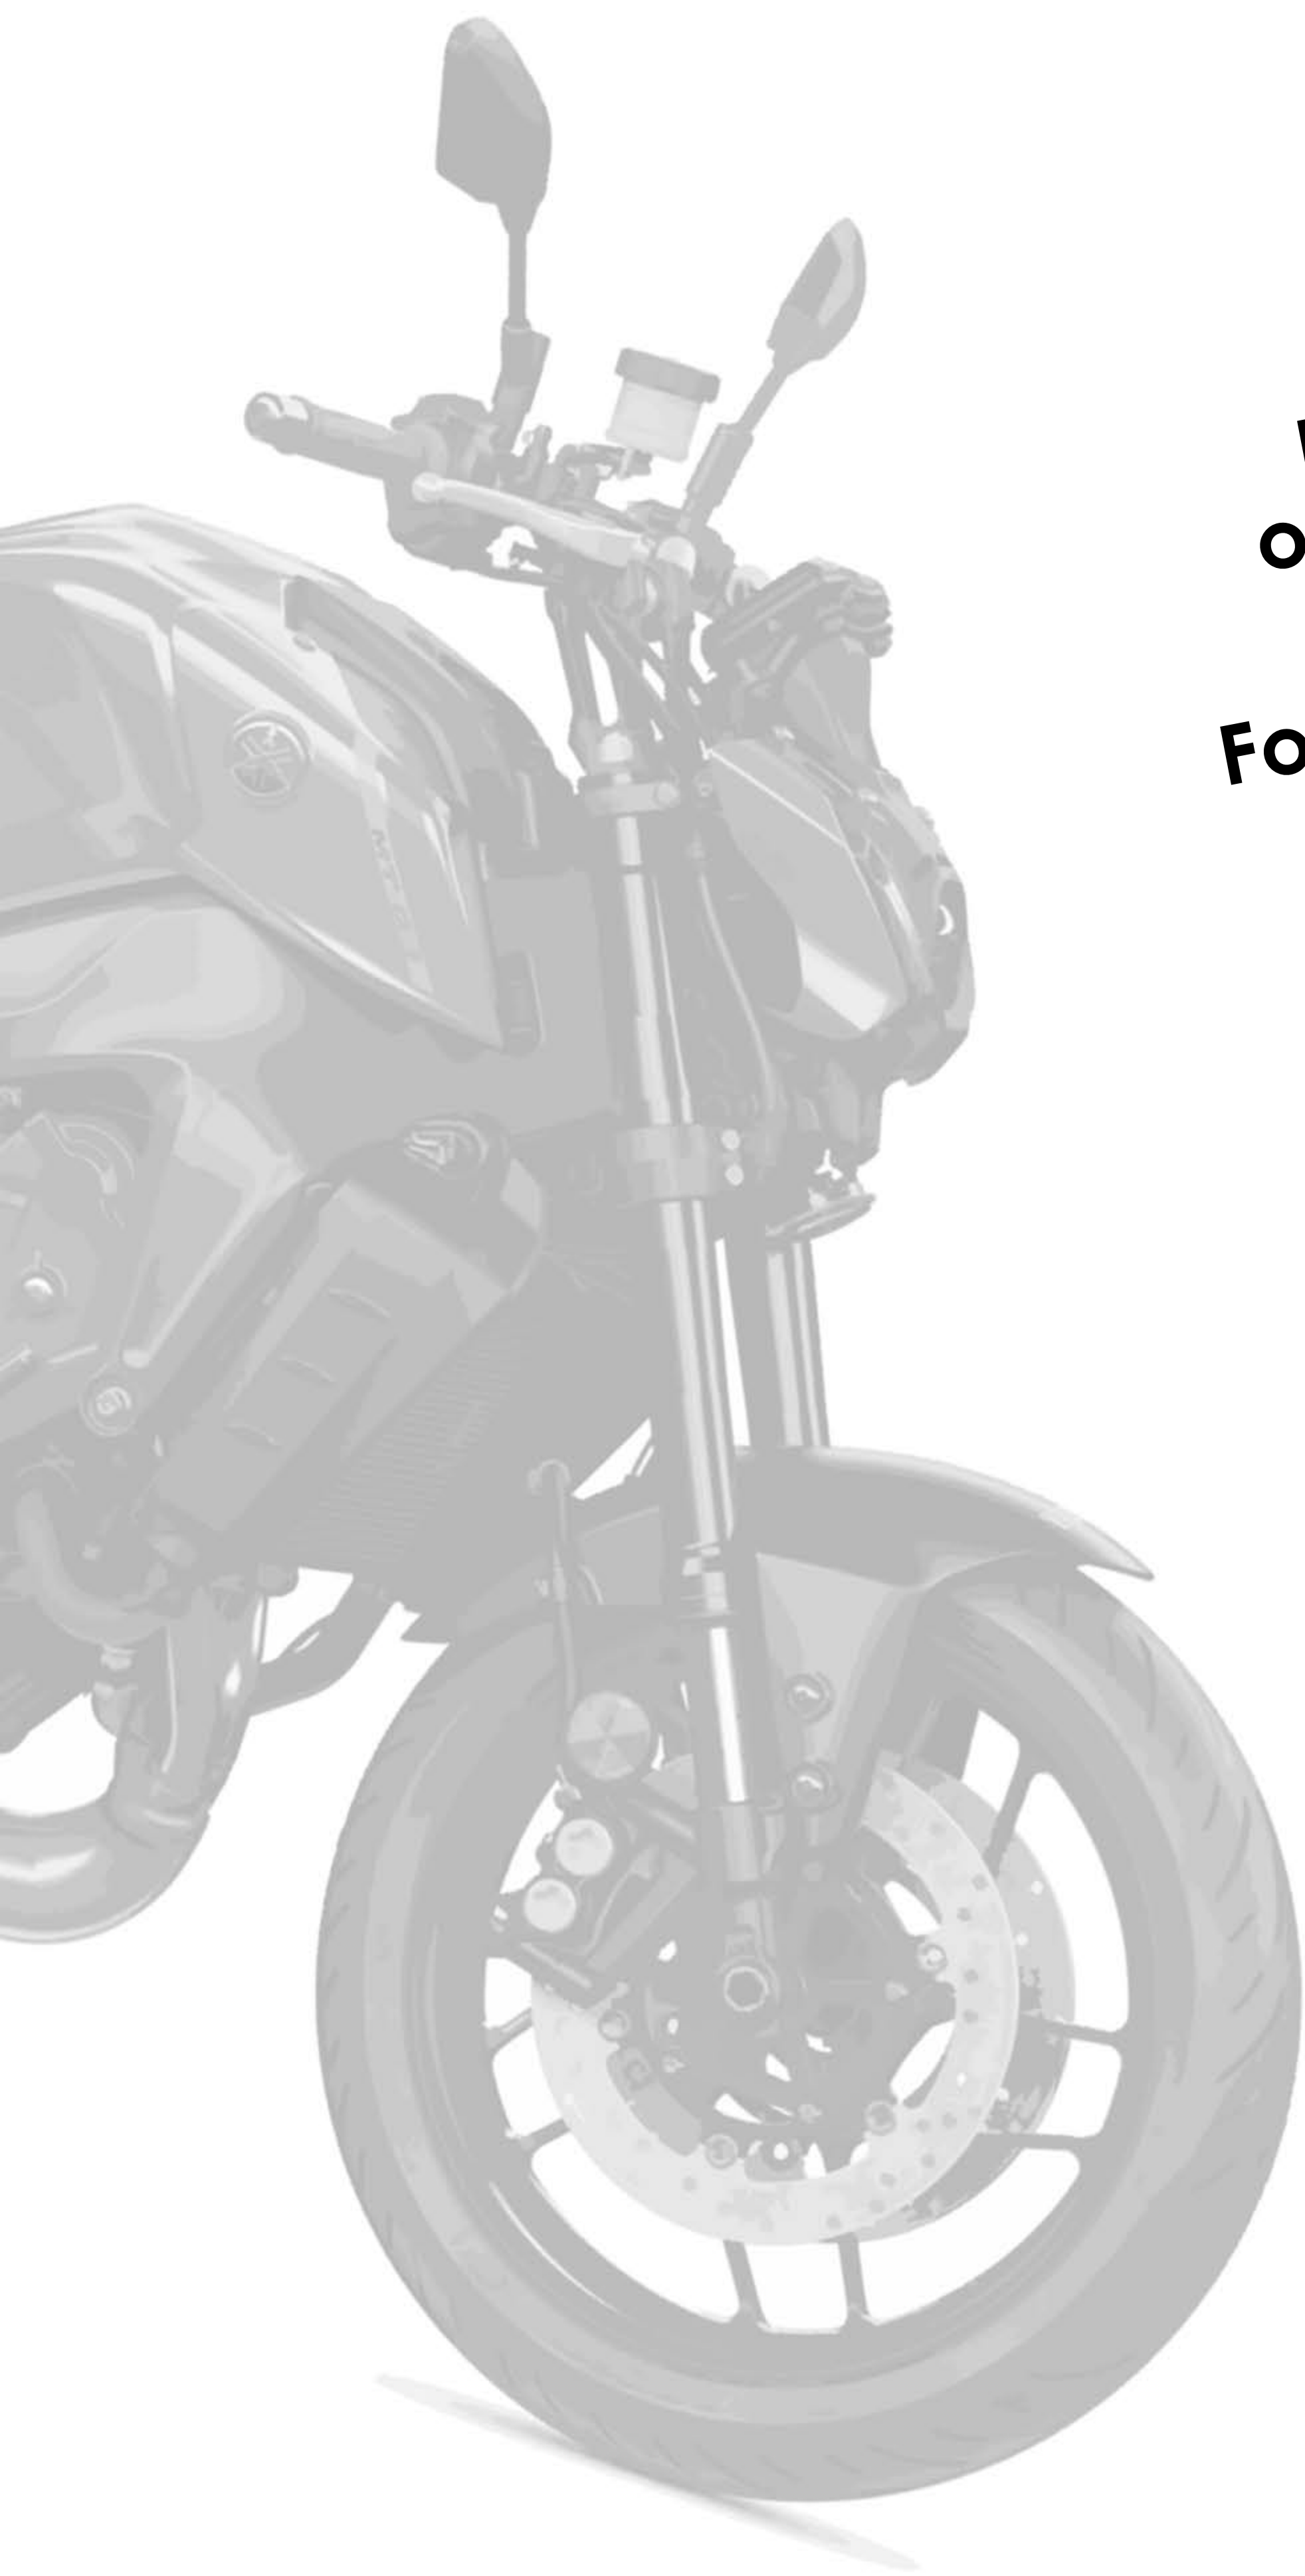

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!