



22144 Yamaha MT-09 Infill Panels Fitting Instructions

Kit Includes:

2X C22144A + B Infill Panels (pair)

The Pyramid infill panels are simple to fit.


Remove the seat. Fit the infill panels using the OEM fittings as shown below.

Check fittings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

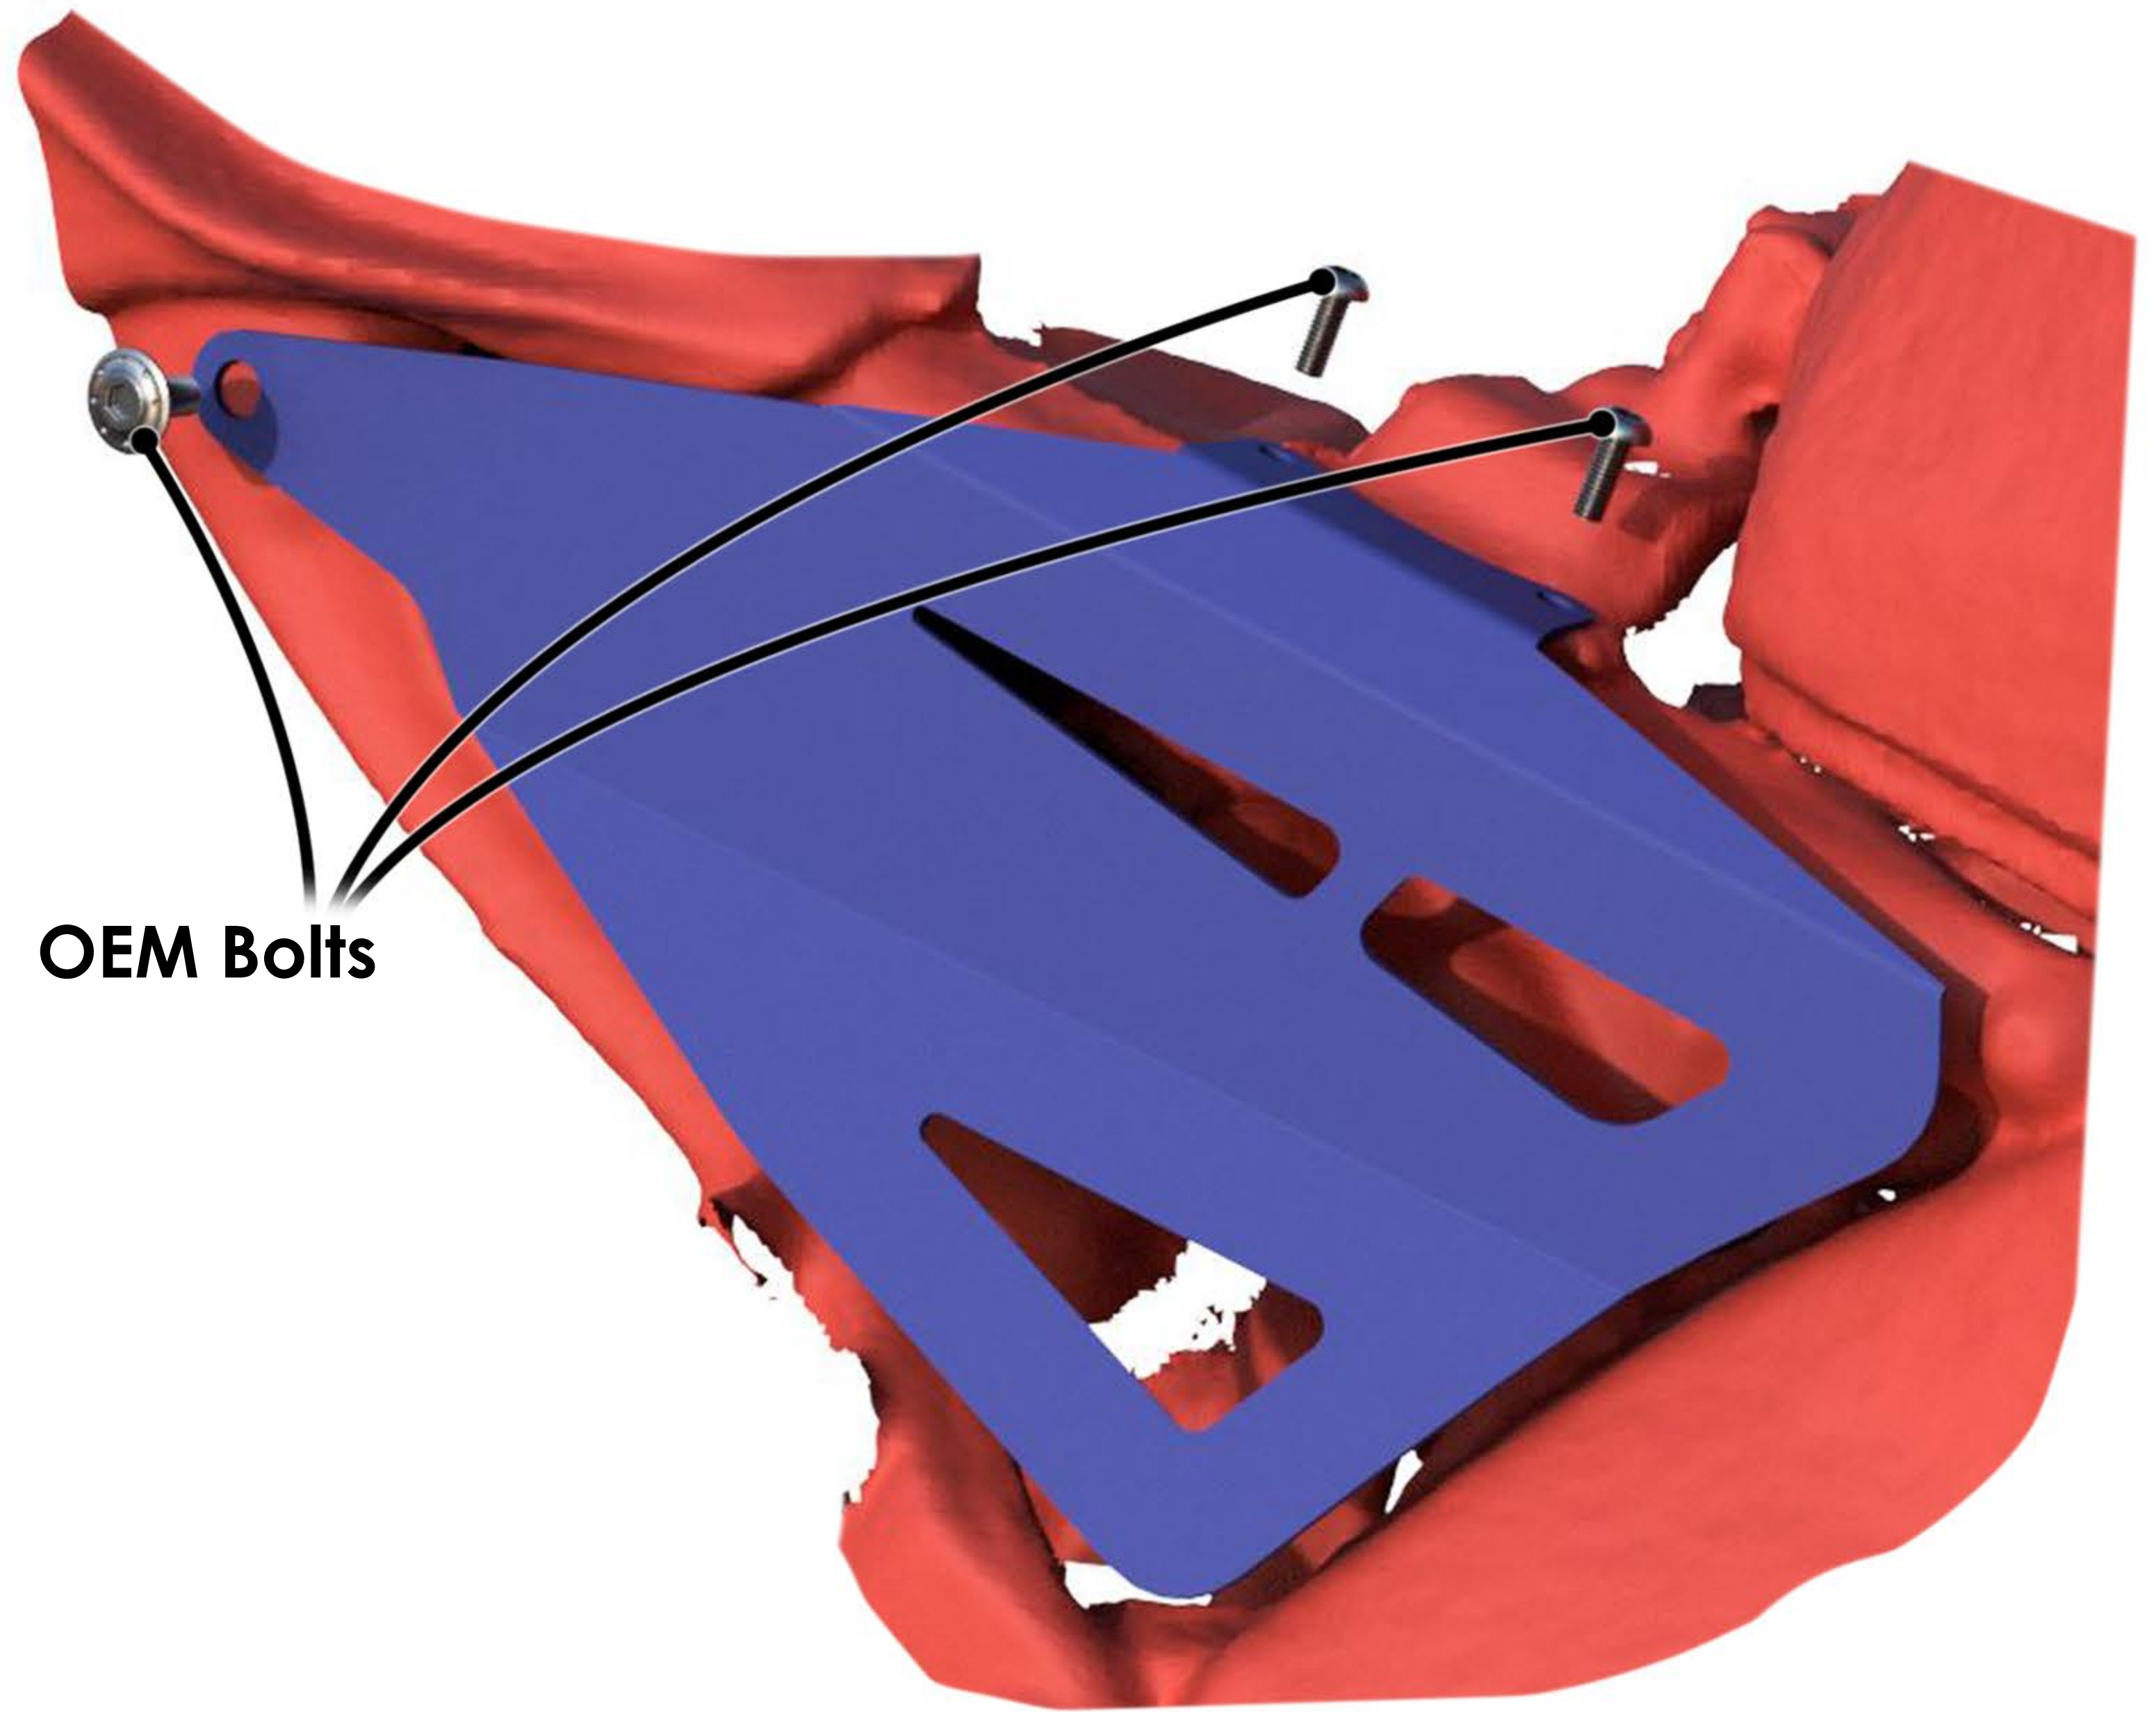

22144 Yamaha MT-09 Infill Panels Fitting Instructions

Kit Includes:

2X C22144A + B Infill Panels (pair)

The Pyramid infill panels are simple to fit.

Remove the seat. Fit the infill panels using the OEM fittings as shown below.

Check fittings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

