

22146 Yamaha MT-09 Infill Panels Fitting Instructions

Kit Includes:

1X C22144A Infill Panel

The Pyramid infill panel is simple to fit.


Remove the seat. Fit the infill panel using the OEM fittings as shown below.

Check fittings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

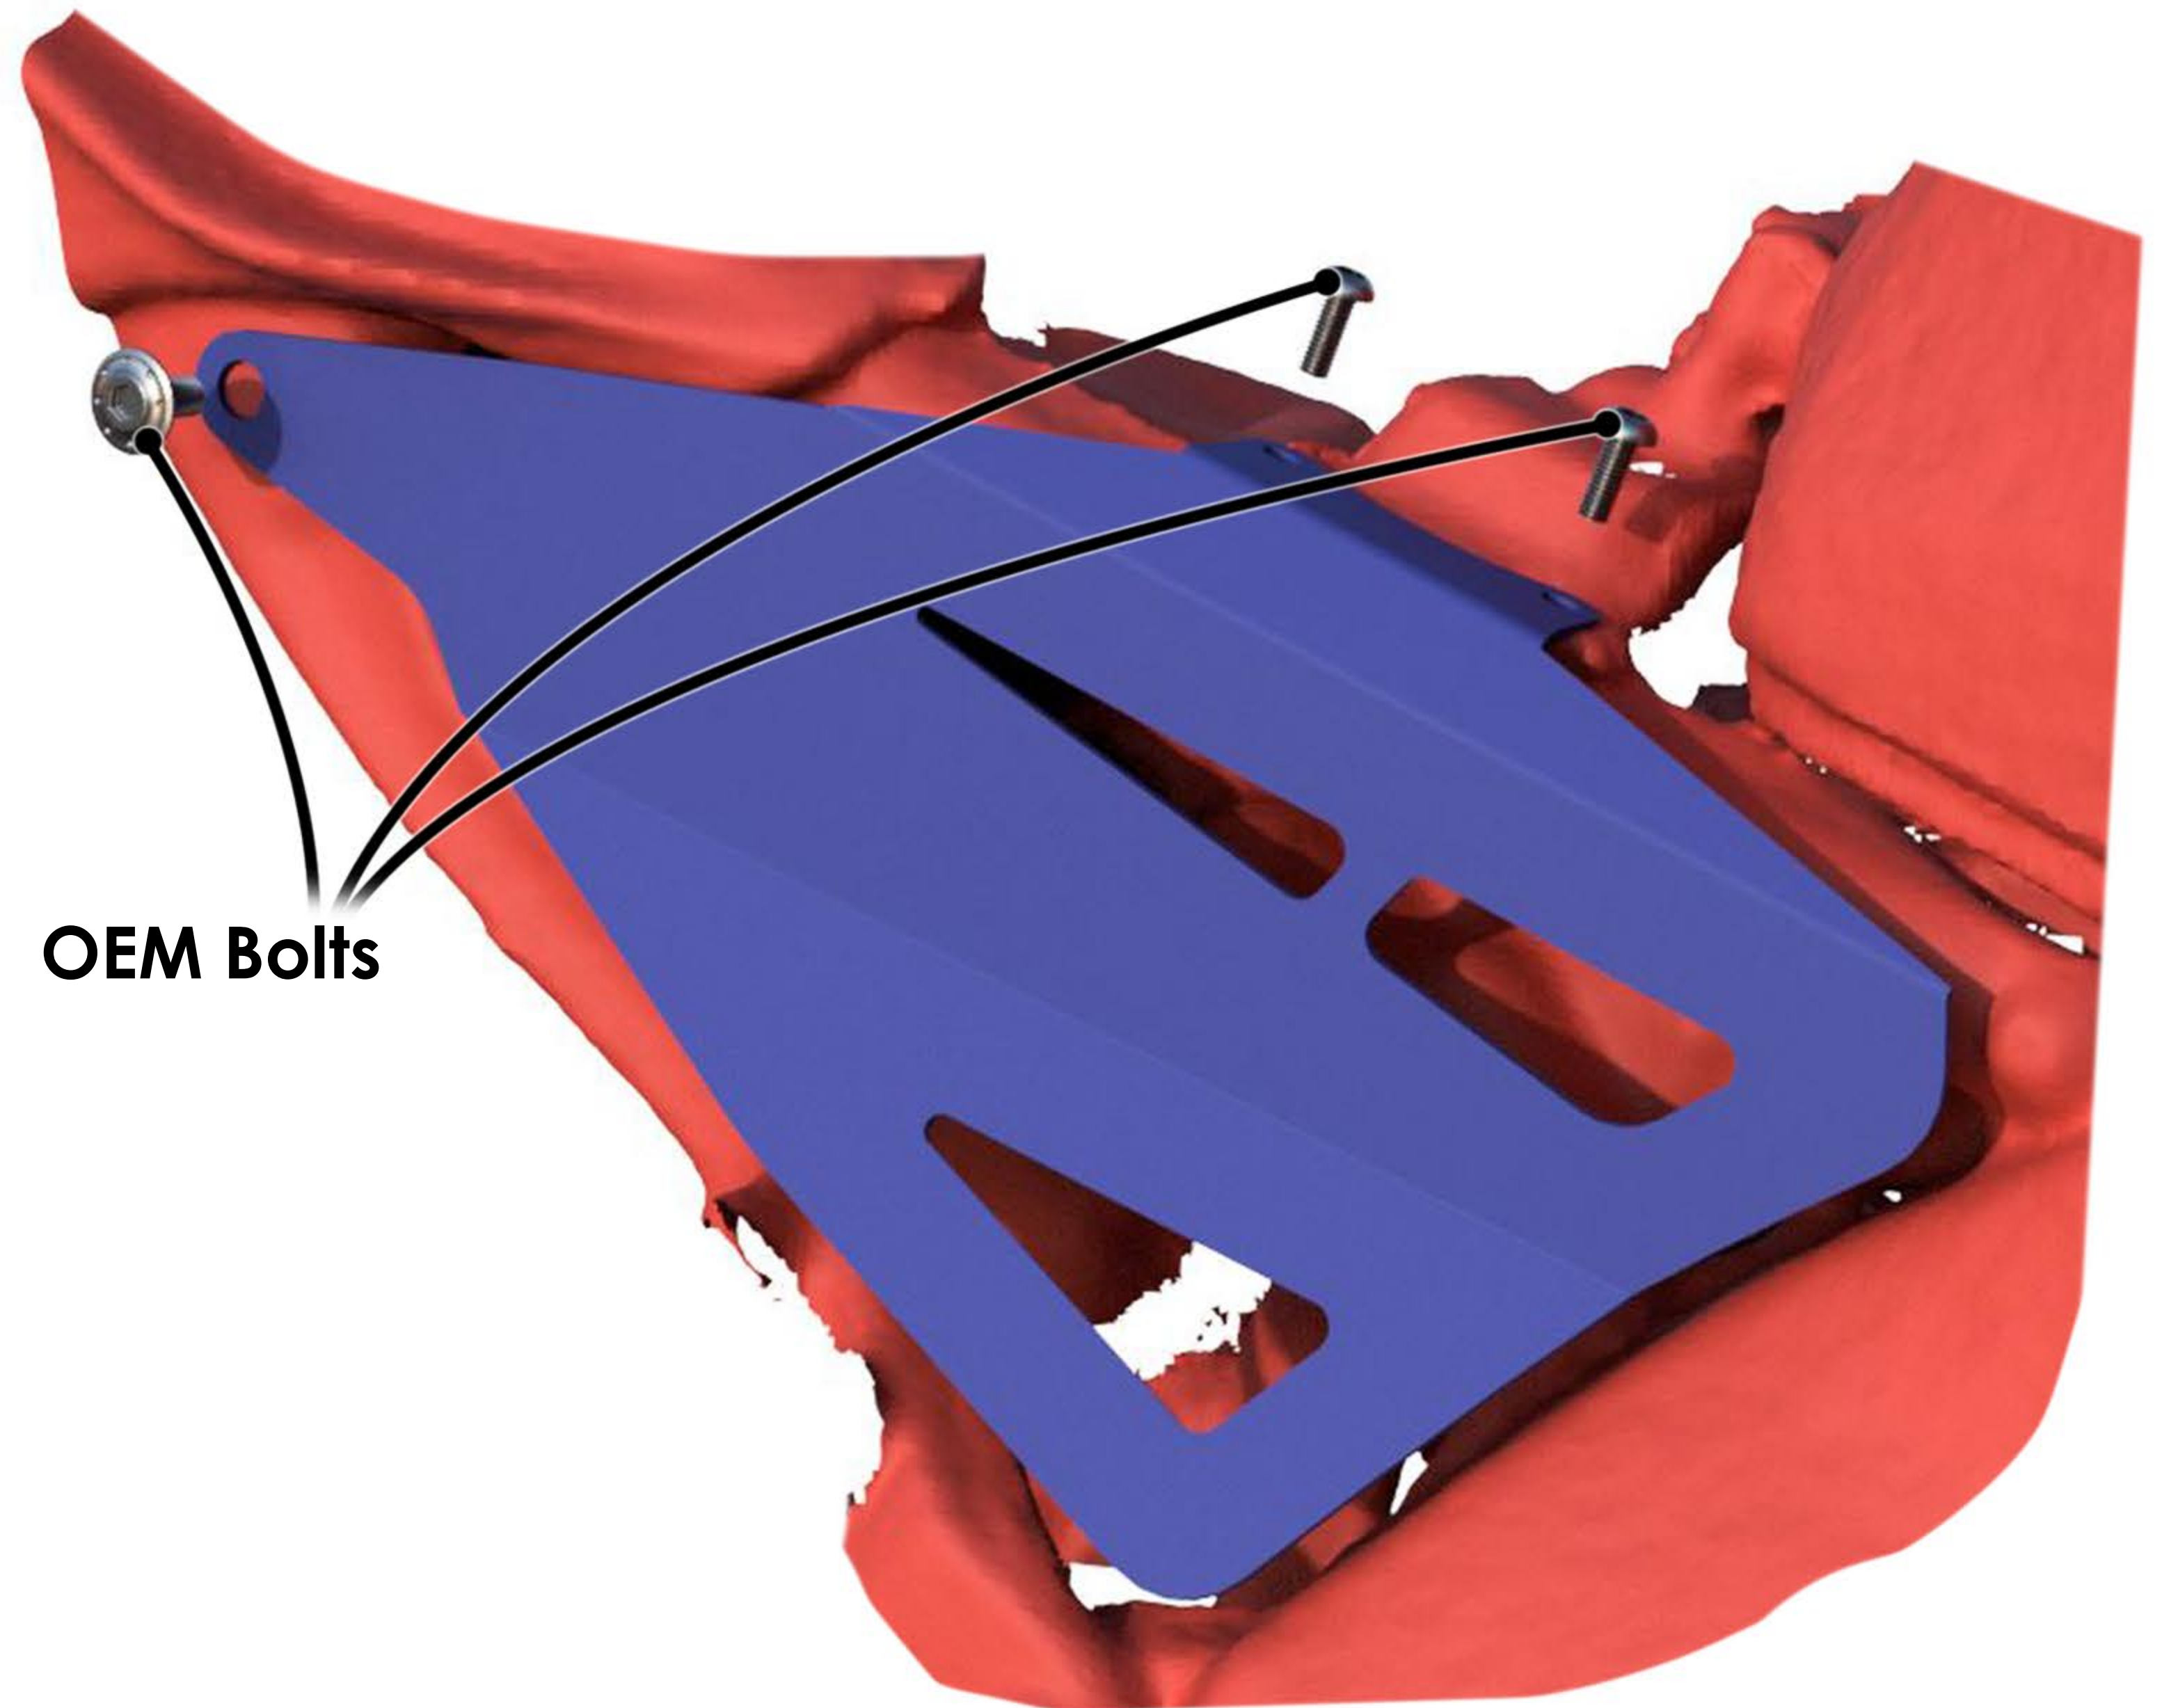

22146 Yamaha MT-09 Infill Panels Fitting Instructions

Kit Includes:

1X C22144A Infill Panel

The Pyramid infill panel is simple to fit.

Remove the seat. Fit the infill panel using the OEM fittings as shown below.

Check fittings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

