






## 22150G Yamaha MT-09 SP Belly Pan Fitting Instructions

### Kit Includes:

1X	Panels (pair + centre part)
4X	Brackets
2X	Metal Netting 190mm X 80mm
4X	M5 Plastic Washers
4X	M6 X 20mm Bolts
4X	M5 X 15mm Bolts
4X	M5 Nuts
1X	M6 Lugnut
4X	Grommets
200mm	3M Tape

- Metal Netting (optional) can be fitted using silicone as shown in **Fig 1**.
- Fit the brackets to the bike as shown in **Fig 2 & 3**.  
Don't tighten fully so that adjustments can be made during later steps.
- Fit the grommets to the Belly Pan. You will need to remove the steel collars temporarily in order to do this. Make sure the flange on the steel collar is facing outwards.
- Assemble the 3 pieces of the Belly Pan using the 3M Tape (pre-attached) and with the M5 X 15mm Bolts, M5 Plastic Washers & M5 Nuts.
- The Belly Pan is mounted to the brackets using the M6 X 20mm Bolts.
- Tighten up all mounting points and check clearance of the Belly Pan around the bike.

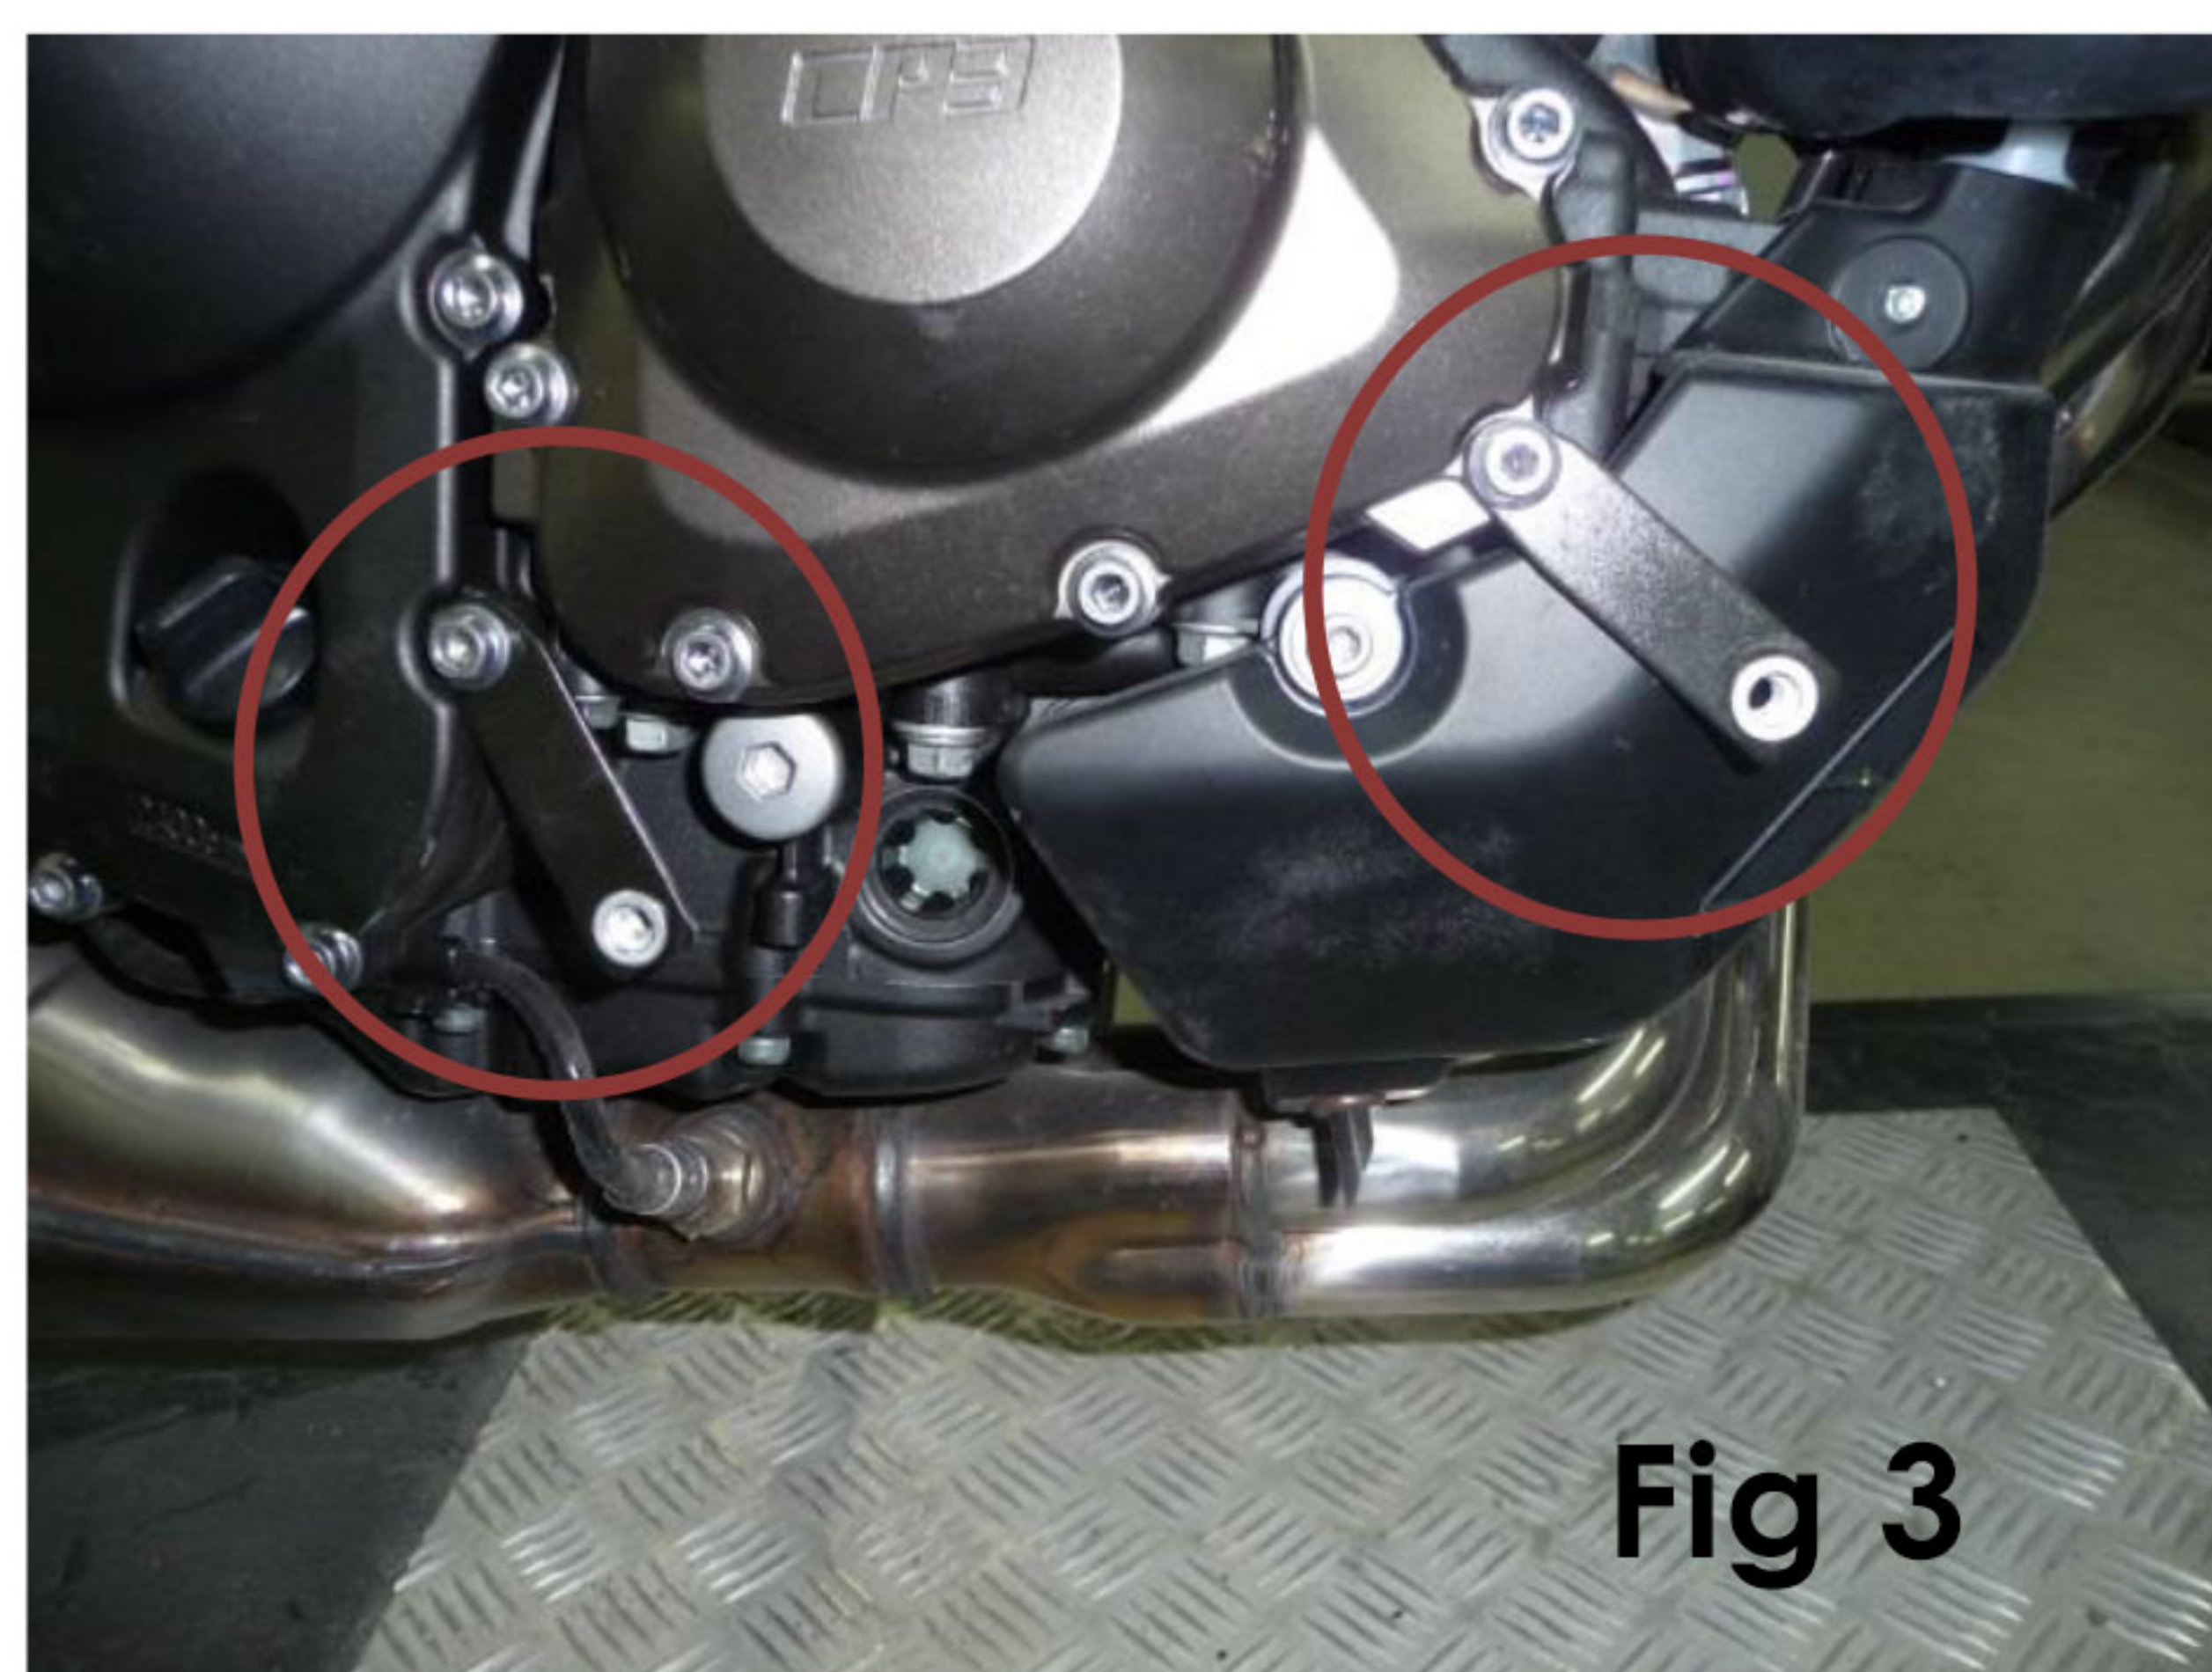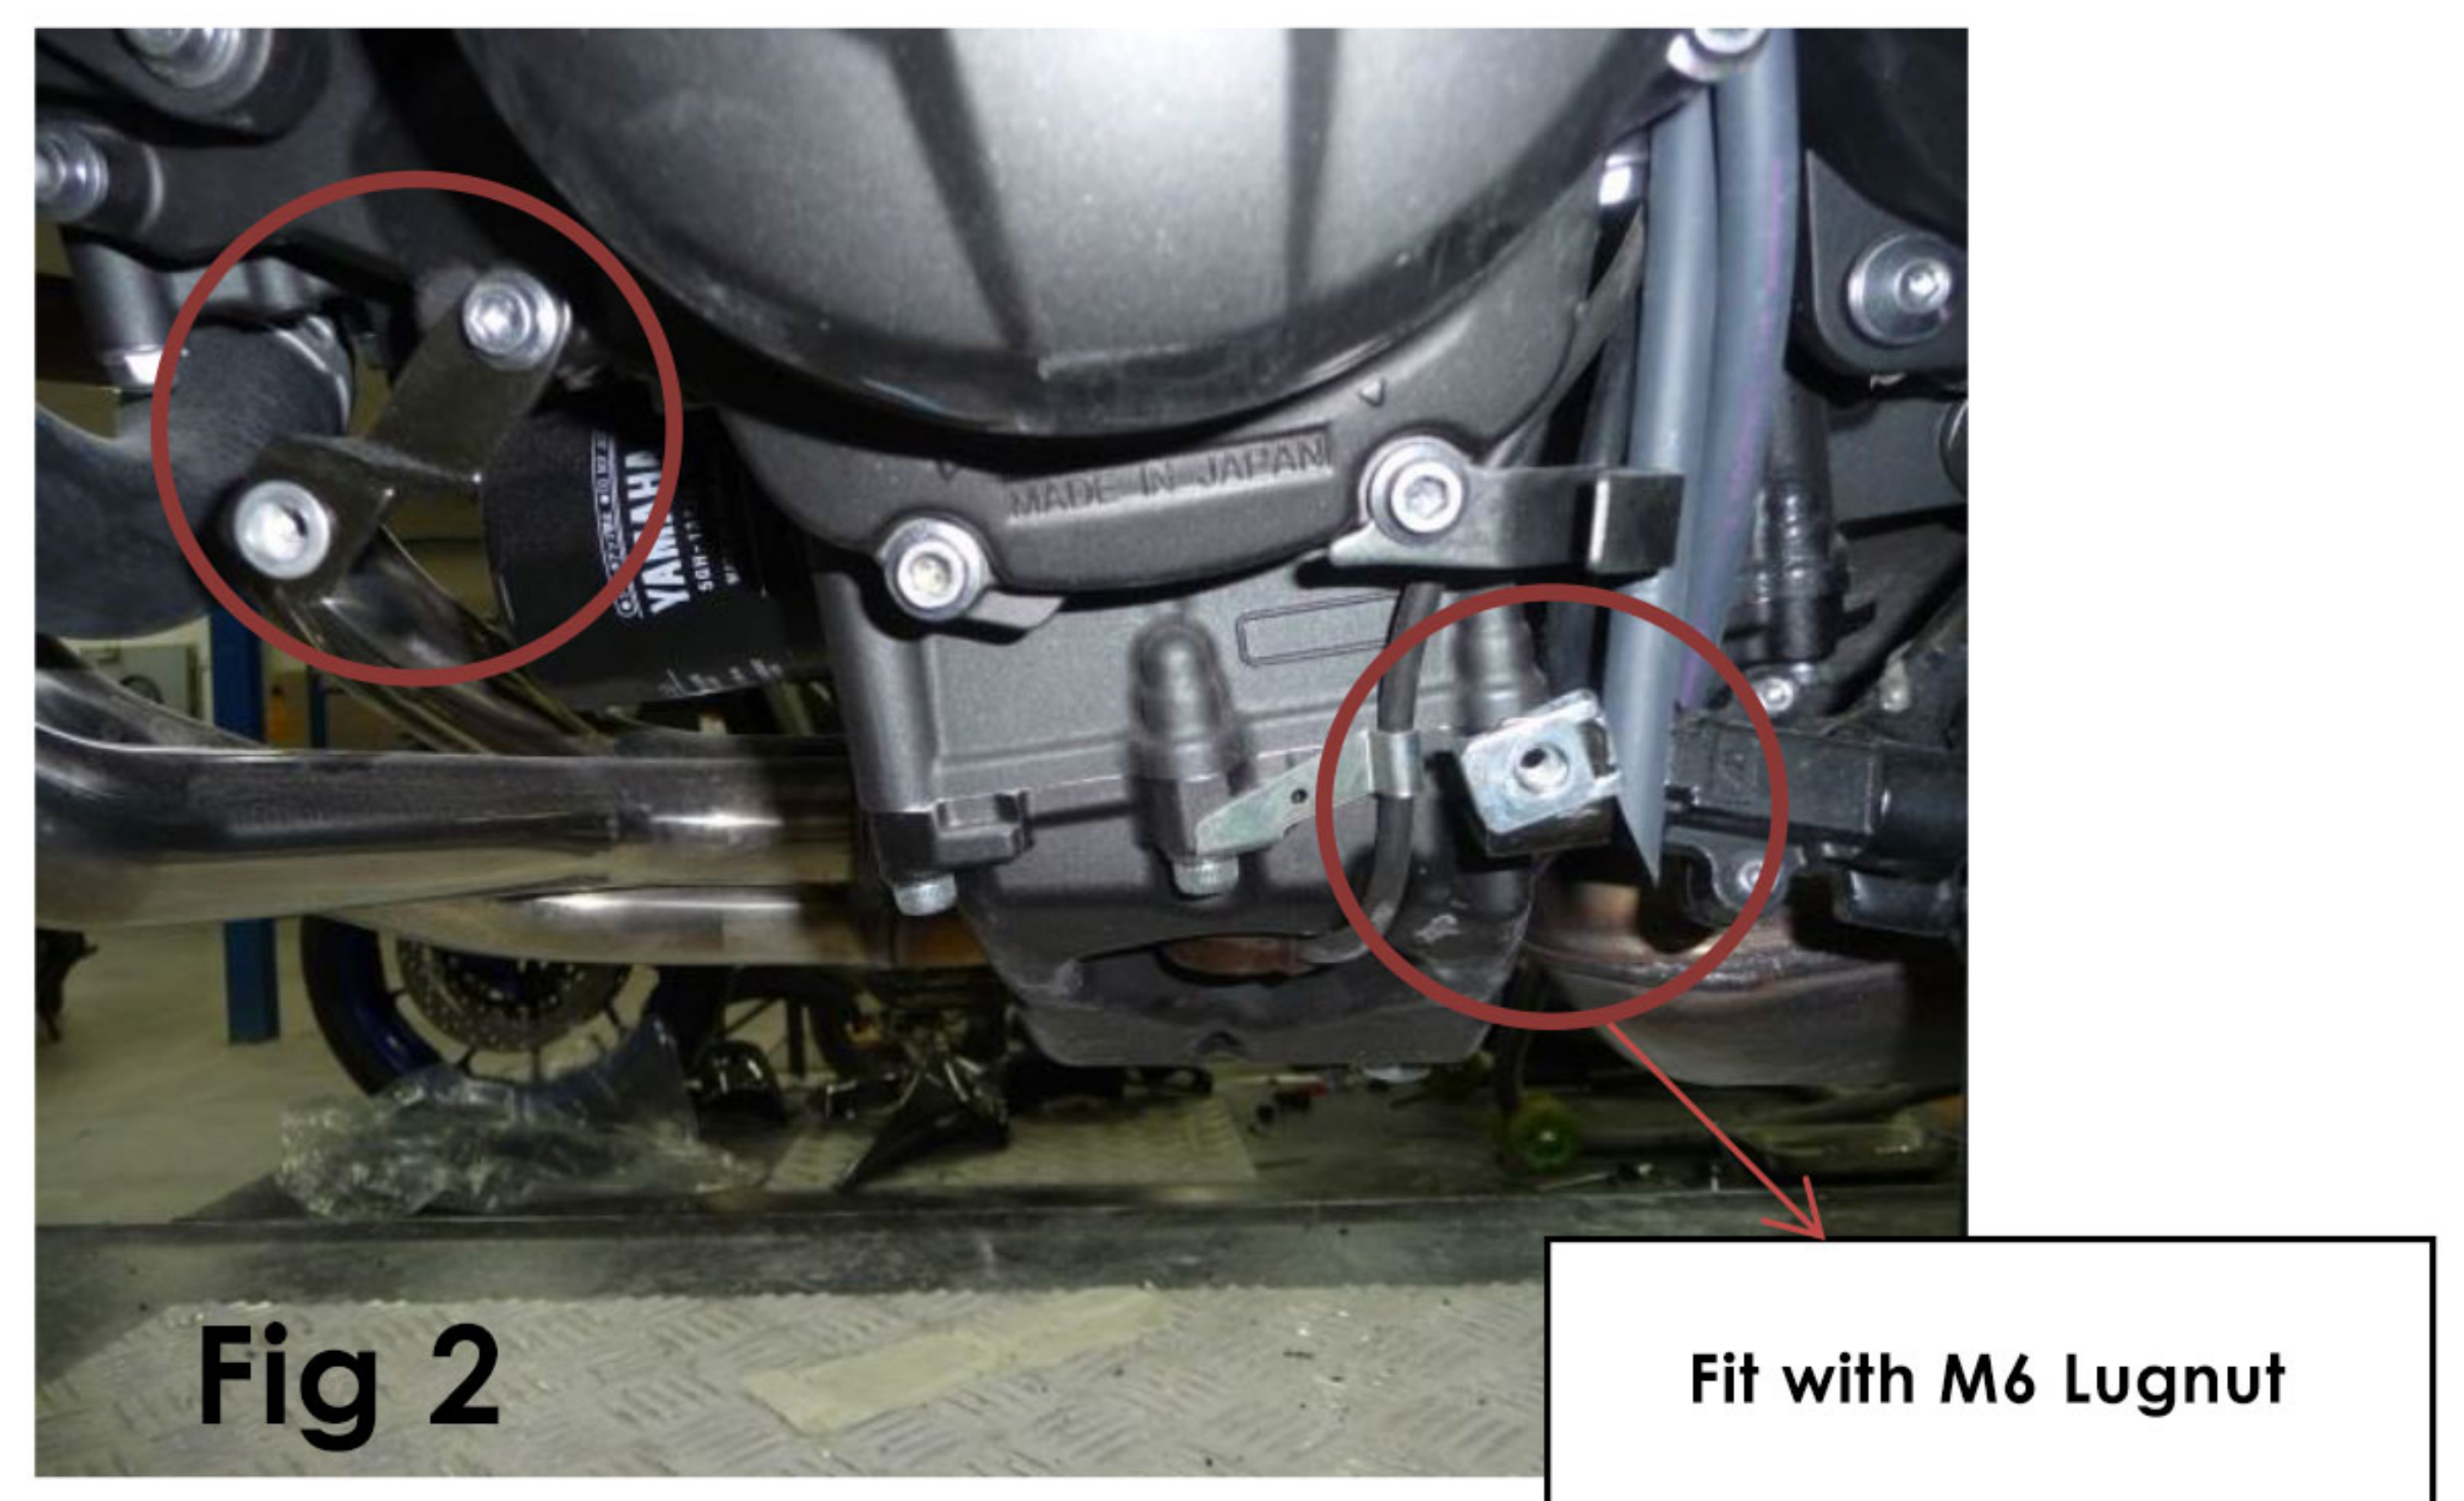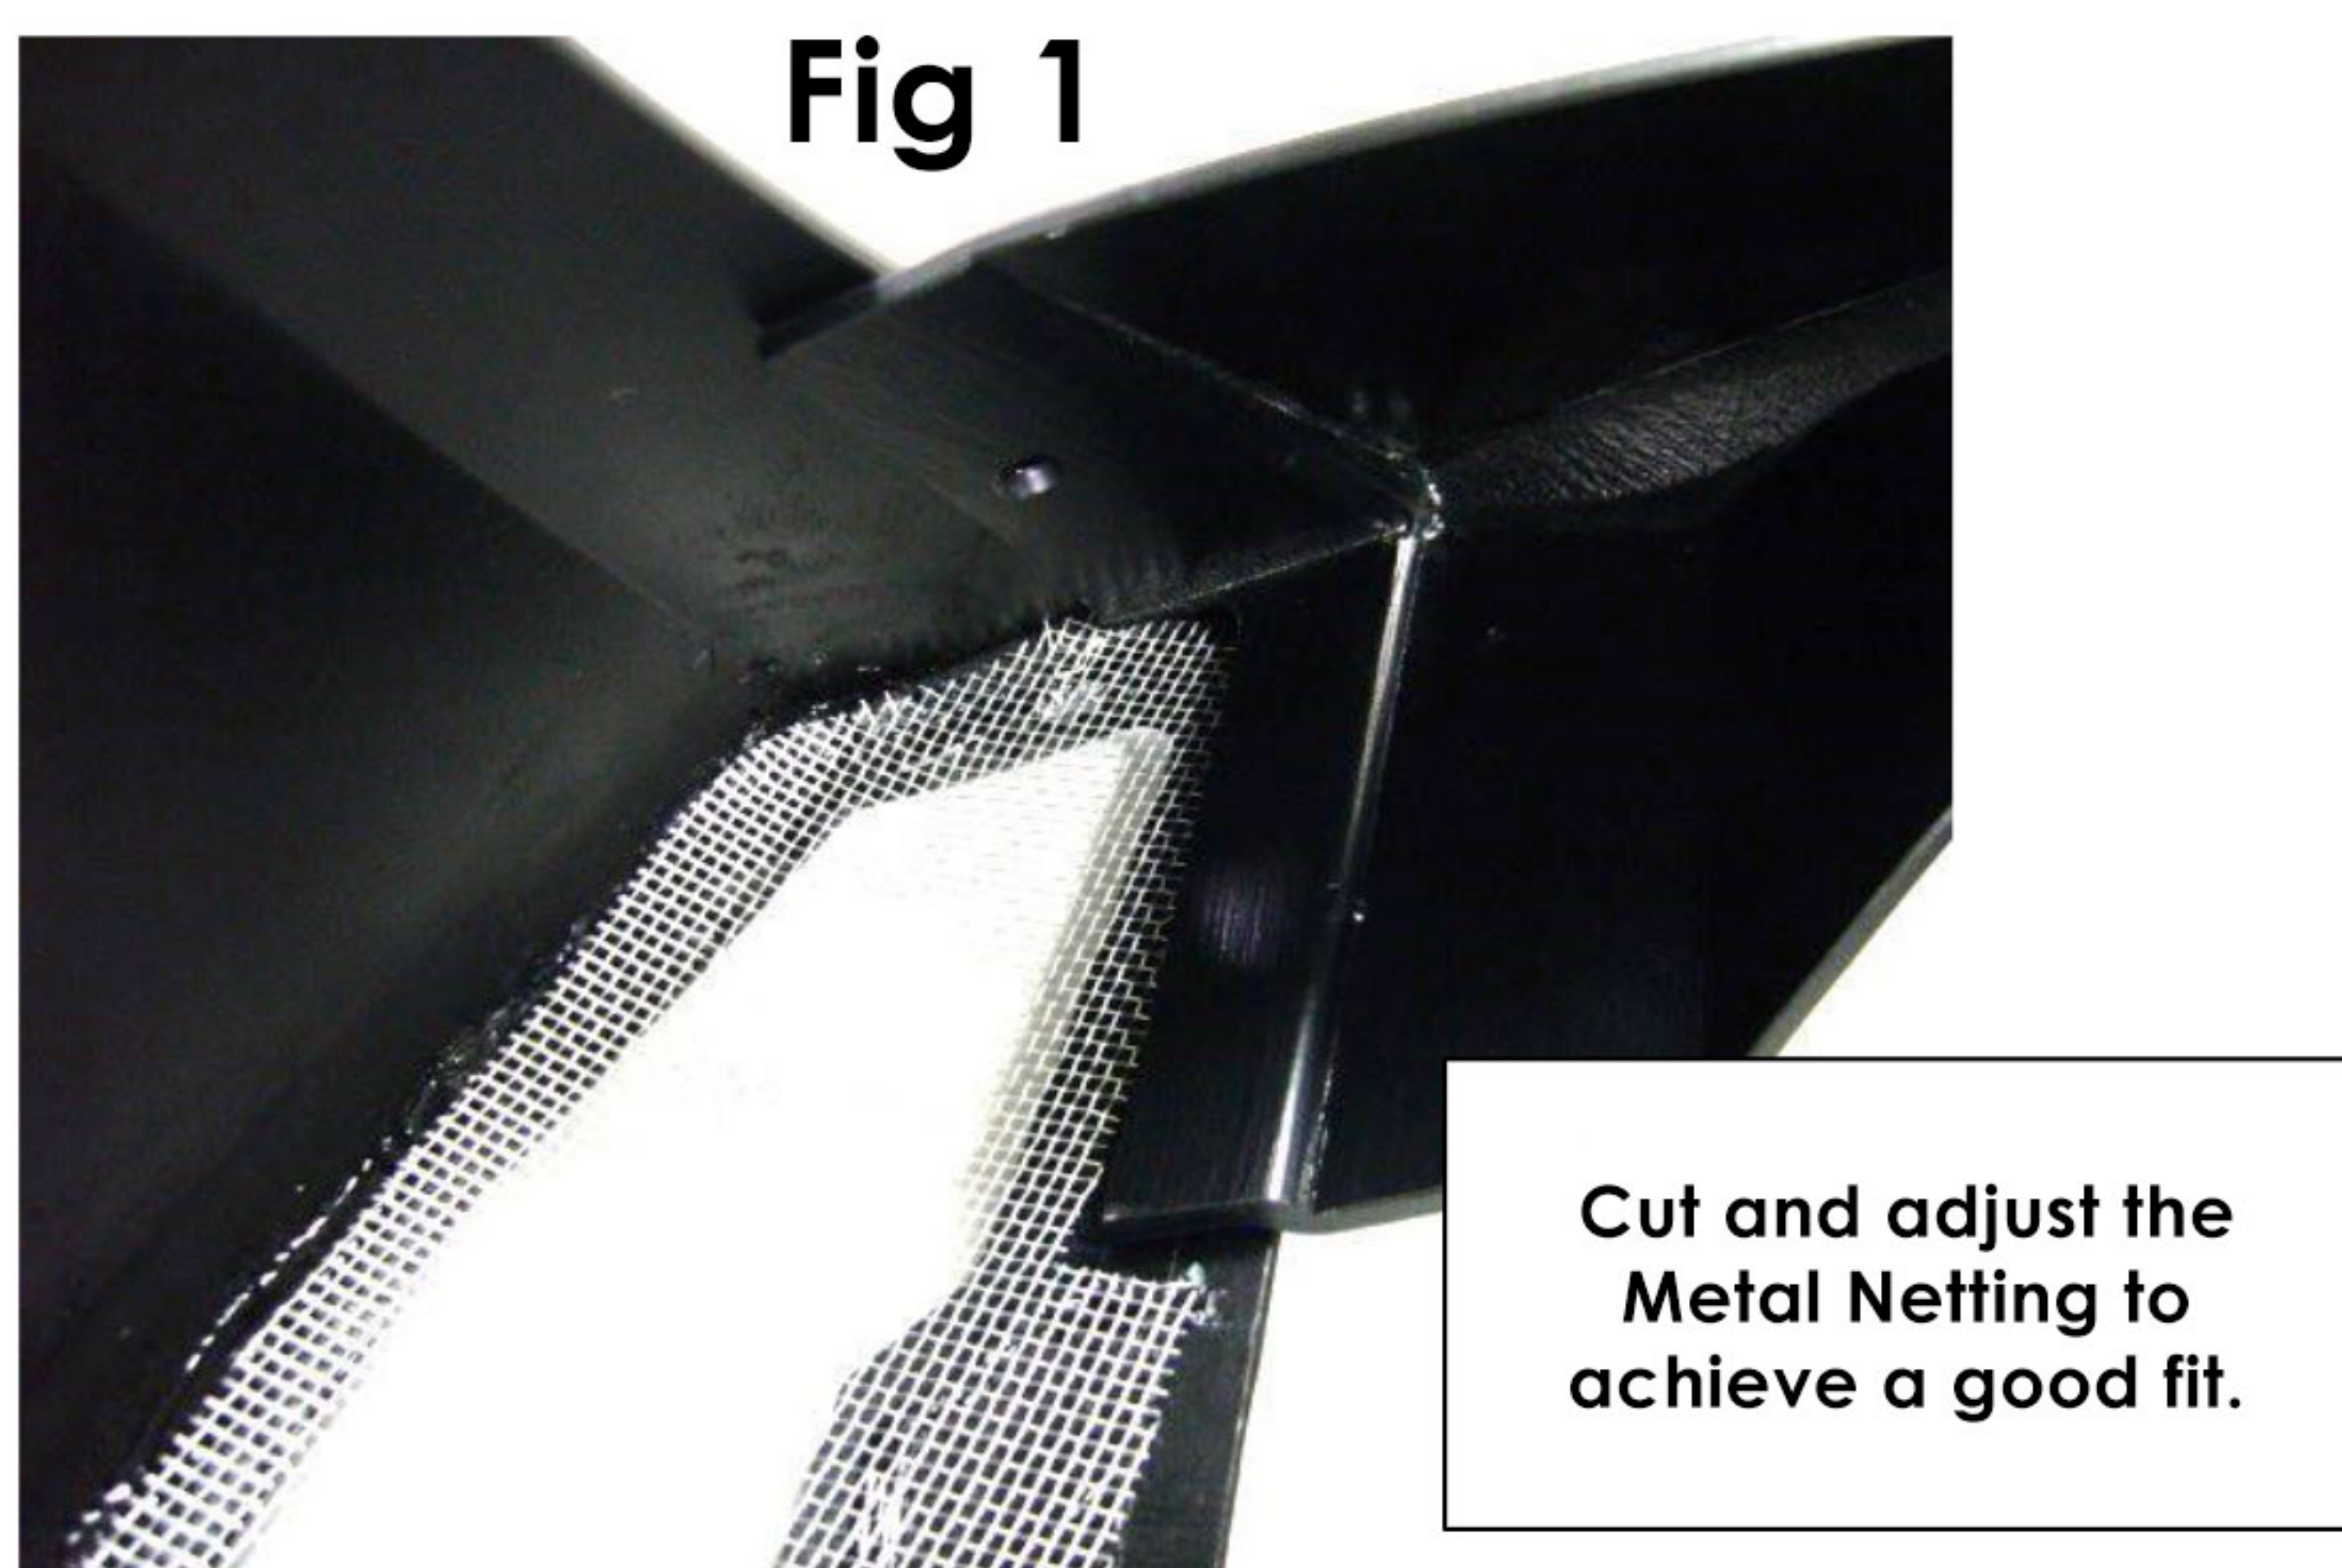

### Got questions?

[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

+44 (0)1427 677990

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!